



## **PSI Bluetooth converter** **(The products are offered exclusively** **for export outside the EU and the** **European Economic Area.)**

User manual

# User manual

## PSI Bluetooth converter

2017-08-18

---

Designation: UM EN PSI-WL-RS232-RS485/BT/...

Revision: 03

This user manual is valid for:

Designation:	Order No.
PSI-WL-RS232-RS485/BT/2DO	2313805
PSI-WL-PROFIB/BT-SET/2DO	2313876
PSI-WL-RS232-RS485/BT/HL	2313795

---

## Please observe the following notes

### User group of this manual

The use of products described in this manual is oriented exclusively to qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.

### Explanation of symbols used and signal words



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety measures that follow this symbol to avoid possible injury or death.

There are three different categories of personal injury that are indicated with a signal word.

**DANGER** This indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING** This indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION** This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



This symbol together with the signal word **NOTE** and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.



This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

### How to contact us

#### Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

[phoenixcontact.com](http://phoenixcontact.com)

Make sure you always use the latest documentation.

It can be downloaded at:

[phoenixcontact.net/products](http://phoenixcontact.net/products)

#### Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at [phoenixcontact.com](http://phoenixcontact.com).

#### Published by

PHOENIX CONTACT GmbH & Co. KG  
Flachsmarktstraße 8  
32825 Blomberg  
GERMANY

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to:

[tecdoc@phoenixcontact.com](mailto:tecdoc@phoenixcontact.com)

**Please observe the following notes**

---

**General terms and conditions of use for technical documentation**

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular user documentation) does not constitute any further duty on the part of Phoenix Contact to furnish information on modifications to products and/or technical documentation. You are responsible to verify the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed.

In general, the provisions of the current standard Terms and Conditions of Phoenix Contact apply exclusively, in particular as concerns any warranty liability.

This manual, including all illustrations contained herein, is copyright protected. Any changes to the contents or the publication of extracts of this document is prohibited.

Phoenix Contact reserves the right to register its own intellectual property rights for the product identifications of Phoenix Contact products that are used here. Registration of such intellectual property rights by third parties is prohibited.

Other product identifications may be afforded legal protection, even where they may not be indicated as such.

# Table of contents

1	Technical data .....	7
2	For your safety .....	13
	2.1 Intended use.....	13
	2.2 UL note (for PSI-WL-RS232-RS485/BT/2DO and PSI-WL-PROFIB/BT-SET/2DO only).....	14
	2.3 UL note (for PSI-WL-RS232-RS485/BT/HL with HazLoc approval only) .....	14
3	Product description .....	15
	3.1 Bluetooth PROFIBUS set .....	15
	3.2 Dimensions.....	16
	3.3 Block diagram.....	16
	3.4 Connection and function elements .....	17
	3.5 System setup.....	18
4	Setting switches on the device .....	19
	4.1 Opening and closing the housing .....	19
	4.2 Activating the termination network.....	20
	4.3 Setting configuration mode.....	21
	4.4 Resetting to the default settings.....	22
5	Installation and configuration .....	23
	5.1 Mounting as single device .....	23
	5.2 Removal .....	24
	5.3 Power supply .....	25
	5.4 Serial pin assignments .....	26
	5.5 Antenna connection.....	28
	5.6 Diagnostic and status indicators.....	28
	5.7 Digital diagnostic outputs.....	29
	5.8 Configuration .....	30
6	Application examples .....	31
7	Planning wireless systems .....	33
	7.1 Planning wireless paths.....	33
	7.2 Practical test.....	33
	7.3 Selecting antenna cables and antennas.....	33
	7.4 Installing antennas.....	34
	7.5 Level and attenuation of the Bluetooth converter and accessories.....	35

**PSI-WL-RS232-RS485/BT/...**

7.6	Free space path loss .....	37
7.7	Propagation of radio waves .....	37
7.8	Fresnel zone .....	41
7.9	Range .....	43
7.10	Equivalent isotropically radiated power (EIRP) .....	43
7.11	System calculation in free space .....	43
7.12	Practical examples .....	45
<b>8</b>	<b>Detecting and removing errors .....</b>	<b>47</b>
8.1	Loopback test during serial data transmission .....	47
<b>9</b>	<b>AT commands .....</b>	<b>49</b>
9.1	Command descriptions .....	51
9.2	Connection commands .....	52
9.3	Reading the service profile .....	59
9.4	Data mode .....	61
9.5	Information commands .....	65
9.6	Interface commands .....	66
9.7	Additional commands .....	68
<b>A</b>	<b>Technical appendix .....</b>	<b>71</b>
A 1	Typical combinations of antennas and adapter cables .....	71
A 2	Configuring a PROFIBUS connection .....	75
<b>B</b>	<b>Appendixes .....</b>	<b>93</b>
B 1	List of figures .....	93
B 2	List of tables .....	95
B 3	Index .....	101

# 1 Technical data

Description	Type	Order No.	Pcs./Pkt.
Bluetooth converter, wireless transmission: RS-232/RS-422/RS-485 2-wire, mounting on EN DIN rails, MCX connection for external antenna, integrated path diagnostics: bar graph + two digital outputs	PSI-WL-RS232-RS485/BT/2DO	2313805	1
Bluetooth PROFIBUS SET, pre-configured: PROFIBUS point-to-point, PROFIBUS baud rate: 187.5 kbps, integrated path diagnostics: bar graph + two digital outputs, contents: 2 x Bluetooth converter + 2 x antenna	PSI-WL-PROFIB/BT-SET/2DO	2313876	1
Bluetooth converter, wireless transmission: RS-232/RS-422/RS-485 2-wire, mounting on EN DIN rails, MCX connection for external antenna, integrated path diagnostics: bar graph, UL-HazLoc approval	PSI-WL-RS232-RS485/BT/HL	2313795	1
Accessories	Type	Order No.	Pcs./Pkt.
RS-232 cable, D-SUB 9 socket to D-SUB 9 socket, 9-wire, 1:1	PSM-KA9SUB9/BB/0.5METER	2708520	1
RS-232 cable, D-SUB 9 socket to D-SUB 9 socket, 9-wire, 1:1	PSM-KA9SUB9/BB/2METER	2799474	1
D-SUB connector, 9-pos. socket, one cable entry < 35°, universal type for all systems, pin assignment: 1, 2, 3, 4, 5, 6, 7, 8, 9 to screw connection terminal block	SUBCON 9/F-SH	2761499	1
RS-232 null modem connector	PSM-AD-D9-NULMODEM	2708753	1
USB 2.0 cable, USB A connector to Mini-USB B socket, length: 1 m	PSI-CA-USB A/MINI B/1METER	2313575	1
USB connecting cable: USB connector type A to USB connector type Mini-B; length: 3 m	CABLE-USB/MINI-USB-3,0M	2986135	1
D-SUB 9 data cable to USB, with adapter D-SUB 9 to D-SUB 25	CM-KBL-RS232/USB	2881078	1
RS-232 cable, D-SUB 9 socket to D-SUB 25 socket	PSM-KA 9 SUB 25/BB/2METER	2761059	1
Adapter cable to connect the IB IL RS232 and IB IL RS232-PRO Inline communication terminals to the interface converter, e.g., modem, Com server, Bluetooth or fiber optics.	PSM-KAD-IL RS232/9SUB/B/0,8M	2319200	1
DIN rail connector for DIN rail mounting. Universal for T-BUS housing. Gold-plated contacts, 5-pos Header, nominal current: 8 A, product with gold-plated contacts, bus connectors for connecting with electronics enclosures	ME 17,5 TBUS 1,5/ 5-ST-3,81 GN	2709561	10
DIN rail connector for DIN rail mounting. Universal for T-BUS housing. Gold-plated contacts, 5-pos Header, nominal current: 8 A, pitch: 3.81 mm, product with gold-plated contacts, bus connectors for connecting with electronic enclosures	ME 22,5 TBUS 1,5/ 5-ST-3,81 GN	2707437	50
Primary-switched MINI POWER supply for DIN rail mounting, input: 1-phase, output: 24 V DC/1.5 A	MINI-SYS-PS-100-240AC/24DC/1.5	2866983	1
Omnidirectional antenna, 2.4 GHz, 2 dBi, linear vertical, 1.5 m cable, MCX (male), IP65 degree of protection, 50 Ω impedance	RAD-ISM-2400-ANT-OMNI-2-1	2867461	1
Omnidirectional antenna with protection against vandalism, 2.4 GHz, 3 dBi gain, IP55 protection, 1.5 m cable length, MCX (male) connection, h/v 360°/85° opening angle. Appropriate mounting material is available for wall mounting.	RAD-ISM-2400-ANT-VAN- 3-1-MCX	2885702	1
Omnidirectional antenna, 2.4 GHz, 6 dBi, linear vertical, h/v 360°/30° opening angle, N (female), IP55, including mounting bracket and mast clips for 45 mm ... 100 mm diameter, stainless steel, ATEX & IECEx approval	RAD-ISM-2400-ANT-OMNI-6-0	2885919	1
Omnidirectional antenna, 2.4 GHz, 6 dBi, linear vertical, h/v 360°/20° opening angle, N (female), IP65, salt water resistant	RAD-2400-ANT-OMNI-6-0-SW	2903219	1
Directional antenna, 2.4/5 GHz, 9 dBi, linear vertical, N (female), IP67, including mounting bracket and mast clips for 25 mm ... 85 mm diameter, stainless steel, ATEX & IECEx approval	ANT-DIR-2459-01	2701186	1

**PSI-WL-RS232-RS485/BT/...**

Accessories [...]	Type	Order No.	Pcs./Pkt.
Panel antenna, IP55 protection, 8 dBi gain, linear vertical, SMA (female), 50 Ω impedance, h/v 75°/70° opening angle	RAD-ISM-2400-ANT-PAN- 8-0	2867610	1
Antenna cable, 3 m length; SMA (male) -> SMA (male), attenuation approx. 0.93 dB/m at 2.4 GHz; 50 Ω impedance	RAD-CAB-EF142-3M	2884512	1
Antenna cable, 5 m length; SMA (male) -> SMA (male), attenuation approx. 0.93 dB/m at 2.4 GHz; 50 Ω impedance	RAD-CAB-EF142-5M	2884525	1
Antenna cable, 3 m in length, N (male) -> N (male), 50 Ω impedance	RAD-CAB-EF393- 3M	2867649	1
Antenna cable, 5 m in length, N (male) -> N (male), 50 Ω impedance	RAD-CAB-EF393- 5M	2867652	1
Antenna cable, 10 m in length, N (male) -> N (male), 50 Ω impedance	RAD-CAB-EF393-10M	2867665	1
Antenna extension cable, 15 m in length, N (male) -> N (male), 50 Ω impedance	RAD-CAB-EF393-15M	2885634	1
Vulcanizing sealing tape for external protection of adapters, cable connections, etc. against the effects of weather, roll length: 3 m	RAD-TAPE-SV-19-3	2903182	1
Adapter cable, 100 cm pigtail, MCX (male) -> SMA (male), 50 Ω impedance	RAD-PIG-EF316-MCX-SMA	2867678	1
Adapter cable, 50 cm pigtail, MCX (male) -> N (male), 50 Ω impedance	RAD-PIG-EF316-MCX-N	2867681	1
Adapter cable, 30 cm pigtail, N (female) -> SMA (male), 50 Ω impedance	RAD-PIG-EF316-N-SMA	2867694	1
Adapter cable, 50 cm pigtail, N (male) -> N (female), 50 Ω impedance	RAD-PIG-EF316-N-N	2867704	1
Attachment plug with LAMBDA/4 technology as surge protection for coaxial signal interfaces Connection: N connectors (socket/socket)	CN-LAMBDA/4-5.9-BB	2838490	1
Adapter, SMA (female) -> SMA (female); insertion loss <0.3 dB at 2.4 GHz	RAD-ADP-SMA/F-SMA/F	2884541	1
Adapter, N (male) -> SMA (female); insertion loss <0.3 dB at 2.4 GHz	RAD-ADP-N/M-SMA/F	2917036	1

**Supply**

Supply voltage range	10 V DC ... 30 V DC (via COMBICON pluggable screw terminal block) 19 V AC ... 29 V AC (50/60 Hz)
Supply voltage, nominal	24 V DC ±20% (alternative or redundant, via backplane bus contact and system power supply)
Typical current consumption	≤ 100 mA (24 V DC)
Electrical isolation	VCC // Bluetooth, RS-232, RS-422, RS-485, USB
Test voltage data interface/power supply	1.5 kV AC (50 Hz, 1 min)
Torque	0.56... 0.79 Nm

**RS-232 interface, according to ITU-T V.28, EIA/TIA-232, DIN 66259-1**

Connection method	D-SUB 9 plug
Data format/coding	Serial asynchronous UART/NRZ, 8 data, 1/2 stop, 1 parity, 10/11-bit character length
Serial transmission speed	1.2; 2.4; 4.8; 7.2; 9.6; 19.2; 31.25; 38.4; 57.6; 75; 93.75; 115.2 kbps
Transmission length	≤ 15 m
Data flow control/protocols	Software handshake, Xon/Xoff, hardware handshake RTS/CTS, 3964R-compatible,
Pin assignment	DCE (Data Communication Equipment)



The RS-232 interface and the USB interface cannot be used simultaneously.

## Technical data

### RS-422 interface, according to ITU-T V.11, EIA/TIA-422, DIN 66348-1

Connection method	Plug-in screw connection
Data format/coding	Serial asynchronous UART/NRZ, 8 data, 1/2 stop, 1 parity, 10/11-bit character length
Termination resistor	390 Ω - 180 Ω - 390 Ω, can be configured
Serial transmission speed	1.2; 2.4; 4.8; 7.2; 9.6; 19.2; 31.25; 38.4; 57.6; 75; 93.75; 115.2; 136; 187.5 kbps
Transmission length	≤ 1200 m
Data flow control/protocols	Automatic control

### RS-485 interface, according to EIA/TIA-485, DIN 66259-4/RS-485 2-wire

Connection method	Plug-in screw connection
Data format/coding	Serial asynchronous UART/NRZ, 8 data, 1/2 stop, 1 parity, 10/11-bit character length
Termination resistor	390 Ω - 180 Ω - 390 Ω, can be configured
Serial transmission speed	1.2; 2.4; 4.8; 7.2; 9.6; 19.2; 31.25; 38.4; 57.6; 75; 93.75; 115.2; 136; 187.5 kbps
Transmission length	≤ 1200 m
Data flow control/protocols	Automatic control

### USB 2.0

Connection method	Mini-USB B, socket
-------------------	--------------------

### Wireless interface

Interface description	Bluetooth 2.1 + EDR
Frequency range	2.402 GHz ... 2.48 GHz (ISM band)
Antenna	External
Connection method	MCX socket
Channel distance	1 MHz
Transmission method	1.6 kHz (FHSS)
Maximum transmission power	14 dBm (outside of Europe, adjustable via software) 10 dBm (Europe, adjustable via software) 10 dBm (default setting)
Minimum receiver responsiveness	-91 dBm
Bluetooth multipoint master/slave	1/7
Operating mode	GAP: Generic Access Profile (method for authentication and connection establishment) SDAP: Service Discovery Application (method for requesting supported services) SPP: Serial Port Profile (COM port emulation method) DUN: Dial-Up Networking Profile (modem dialing method) LAP: LAN Access Point Profile (network connection method)

### Digital outputs

Number of outputs	2
-------------------	---

**PSI-WL-RS232-RS485/BT/...****General data**

Degree of protection	IP20
Dimensions (W/H/D)	22.5 mm x 99 mm x 116 mm
Case material	PA 6.6-FR, green
Free fall according to IEC 60068-2-32	1 m
Vibration resistance according to EN 60068-2-6/IEC 60068-2-6	5g, 150 Hz, 2.5 h, in XYZ direction
Shock according to EN 60068-2-27/IEC 60068-2-27	15g, 11 ms period, half-sine shock pulse
MTTF (Mean Time To Failure) SN 29500 standard, temperature 25 °C, operating cycle 21% (5 days per week, 8 hours per day)	2115 years
MTTF (Mean Time To Failure) SN 29500 standard, temperature 40 °C, operating cycle 34.25% (5 days per week, 12 hours per day)	850 years
MTTF (Mean Time To Failure) SN 29500 standard, temperature 40 °C, operating cycle 100% (7 days per week, 24 hours per day)	346 years
Noise emission according to	EN 55011
Noise immunity according to	EN 61000-6-2:2005
Electromagnetic compatibility	Conformance with R&TTE Directive 1999/5/EC (outdated)

**Ambient conditions**

Ambient temperature (operation)	-20 °C ... 60 °C
Ambient temperature (storage/transport)	-40°C ... 85°C
Permissible humidity (operation)	10% ... 95% (non-condensing)
Permissible humidity (storage/transport)	5% ... 95% (non-condensing)
Altitude	5000 m (for restrictions see manufacturer's declaration)

**Approvals**

Free from substances that would hinder coating with paint or varnish	According to P-VW 3.10.7 57 65 0 VW-AUDI-Seat central standard
UL, USA/Canada	cULus listed UL 508
Standards/regulations	FCC Part 15.247/ISC RSS 210

**Conformance with R&TTE Directive 1999/5/EC (outdated)****Noise Immunity According to EN 61000-6-2**

Electrostatic discharge	EN 61000-4-2	
	Contact discharge	± 6 kV
	Air discharge	± 8 kV
	Comments	Criterion B
Electromagnetic HF field	EN 61000-4-3	
	Frequency range	80 MHz ... 3 GHz
	Field strength	10 V/m
	Comments	Criterion A
Rapid transients (burst)	EN 61000-4-4	
	Input	± 2 kV
	Signal	± 2 kV
	Comments	Criterion B
Surge current loads (surge)	EN 61000-4-5	
	Input	± 2 kV
	Signal	± 1 kV
	Comments	Criterion B
Conducted influence	EN 61000-4-6	
	Voltage	10 V
	Comments	Criterion A

**Noise emission according to EN 61000-6-4**

Noise emission EN 55022

Criterion A Normal operating behavior within the specified limits

Criterion B Temporary impairment to operating behavior that is corrected by the device itself

**R&TTE Directive 1999/5/EC (outdated)**

EMC - immunity to interference (electromagnetic compatibility of wireless systems)	EN 61000-6-2	Generic standard for the industrial sector
Safety - protection of personnel with regard to electrical safety	EN 60950-1	
Health - limitation of exposure of the population to electromagnetic fields	Gazette of the European Communities 1999/519/EC	Recommendation of the Council of the European Community from July 121999
Wireless communication - effective use of the frequency spectrum and prevention of wireless communication interference	EN 300328 V1.8.1	

**Configuration****PSI-WL-RS232-RS485/BT/...****PSI-WL-PROFIB/BT-SET/2DO**

System requirements	Windows operating system, Windows XP or later	
Configuration interface	USB, RS-232 or Bluetooth	
Delivery state	9.6 kbps, no parity, 1 stop bit, hardware handshake	187.5 kbps, even parity, 1 stop bit, 8 data bits, no hardware handshake

**PSI-WL-RS232-RS485/BT/...**

---

## 2 For your safety



### WARNING:

Observe the following safety notes when using the device.

- Only qualified specialist personnel may install, start up, and operate the device. National safety and accident prevention regulations must be observed.
- Installation should be carried out as described in the installation notes. Access to circuits within the device is not permitted.
- The device is maintenance-free. Repairs may only be carried out by the manufacturer.
- The device is only intended for operation in the control cabinet and with SELV according to IEC 60950/EN 60950/VDE 0805. The device may only be connected to devices that meet the requirements of EN 60950.

### 2.1 Intended use



The products are offered exclusively for export outside the EU and the European Economic Area.

This device complies with R&TTE device class 1, with the following restrictions on use according to ERC recommendation 70-03:

Turkey	The device may only be operated with Phoenix Contact antennas in accordance with the "Short Range Radio Devices (SRD) Regulations" Gazette No. 26464 dated March 16, 2007.
--------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Operation of the wireless system is only permitted if accessories available from Phoenix Contact are used. The use of other accessory components could invalidate the operating license.



You can find the approved accessories for this wireless system listed with the product at [phoenixcontact.net/products](http://phoenixcontact.net/products).

Please observe that the maximum permissible transmission power of the device can be exceeded in combination with antennas.

- Set the transmission power via the software.

### 2.2 UL note (for PSI-WL-RS232-RS485/BT/2DO and PSI-WL-PROFIB/BT-SET/2DO only)



Wire Range: 30-12 AWG

Torque: 5-7 (Lbs-In)

"Maximum Ambient Temperature 60°C"

Environmental designation: "Open Type Device"

## 2.3 UL note (for PSI-WL-RS232-RS485/BT/HL with HazLoc approval only)



**WARNING: Explosion hazard when used in potentially explosive areas**

Only use digital outputs DO1 and DO2 in the safe area. They are **not** suitable for use in potentially explosive areas.

**INDUSTRIAL CONTROL EQUIPMENT 11AE**

10 ... 30 V DC <170 mA, 24 V AC  $\pm 20\%$  <110 mA, Class 2

Wire Range: 30-12 AWG

Torque: 5-7 (Lbs-In)

Maximum Ambient Temperature 60°C

Environmental designation: "Open Type Device"

**PROCESS CONTROL EQUIPMENT FOR HAZARDOUS LOCATIONS 31ZN**

- A This equipment is suitable for use in Class I, Zone 2, AEx nA IIC T6; Class I, Zone 2, Ex nA IIC T6 Gc X and Class I, Division 2, Groups A, B, C, D or non-hazardous locations only.
- B Conductor temperature rating must be 65°C or higher.
- C Product must be installed in Class I, Zone 2 certified and at least an IP54 enclosure.
- D Product must be used in no more than a pollution degree 2 environment as defined by IEC 60664-1.
- E Provisions must be made to provide transient protection to the product so that voltage levels do not exceed 40% of the rated voltage at the power supply terminals.
- F The product has to be installed in an enclosure with tool removable cover or door.

Ambient temperature: -20°C ... +60°C

24 V AC <100 mA, 24 V DC <170 mA

Wire Range: 30-12 AWG

Torque: 5-7 (Lbs-In)

### 3 Product description



The **PSI-WL-RS232-RS485/BT/2DO** PSI Bluetooth converter provides a quick and easy wireless connection between serial interfaces of the RS-232, RS-422, and RS-485 2-wire standard. Data connections are possible to external devices. Programming or diagnostic access to controllers or a wireless master/slave network can easily be implemented in field-bus systems regardless of the location.

The PSI Bluetooth converter has been specially designed to meet the requirements of industrial environments and supports operation without software drivers, thanks to its fully integrated protocol stacks.

The wireless connection is based on the international, license-free Bluetooth standard. This wireless standard meets high requirements for interference-free data transmission, in particular through the use of the FHSS (frequency-hopping spread spectrum) method with the 2.4 GHz ISM band.

#### Features

- Mounted on EN DIN rails
- 24 V DC or AC supply
- Transmission speed can be set up to 187.5 kbps
- Either RS-232, RS-422 or RS-485
- External antenna connection for optimum antenna positioning
- Bluetooth access protected by password, fixed device pairing or device access list
- Scalable transmission power for specific, spatial containment of the wireless cell
- Integrated Bluetooth path diagnostics via LED bar graph
- Two digital diagnostic outputs (**not** in the case of the PSI-WL-RS232-RS485/BT/HL product version)
- 79 channels, bandwidth: 79 MHz

#### 3.1 Bluetooth PROFIBUS set

The **PSI-WL-PROFIB/BT-SET/2DO** Bluetooth PROFIBUS set consists of two permanently paired Bluetooth converters and two omnidirectional antennas. The devices are preconfigured for an invisible, password-protected point-to-point connection.



#### Features

- Transmission speed: 187.5 kbps
- Ready to use: unpack, connect, switch on - and you have a working wireless path

### 3.2 Dimensions

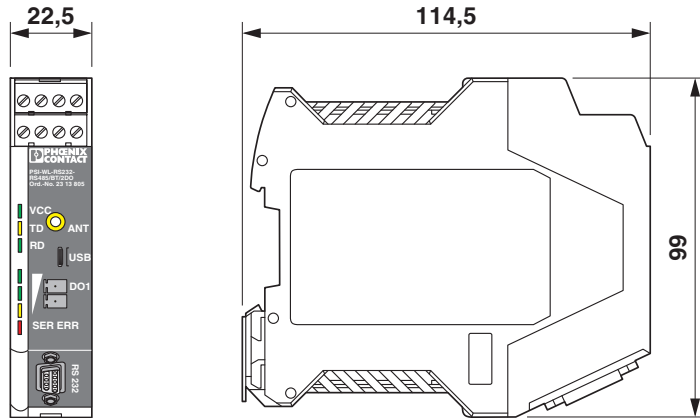


Figure 3-1 Dimensions [mm]

### 3.3 Block diagram

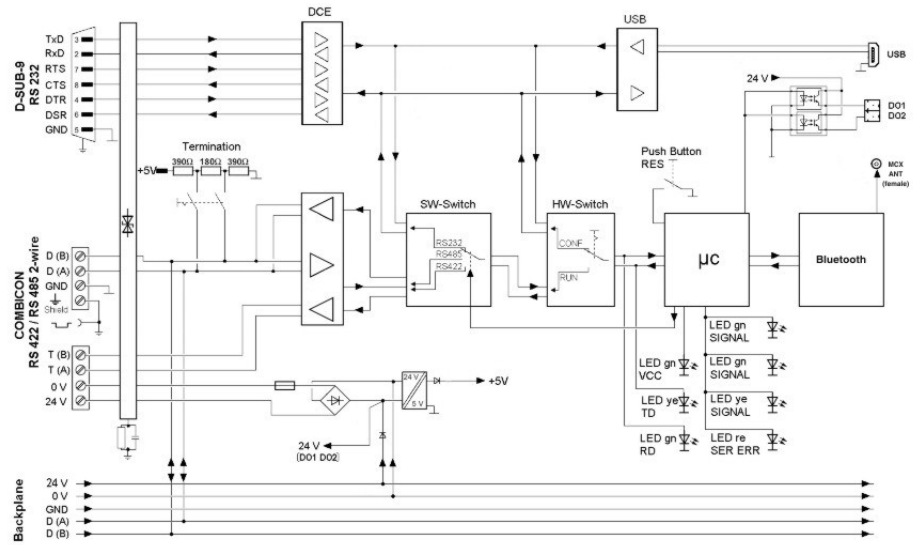


Figure 3-2 Block diagram

### 3.4 Connection and function elements

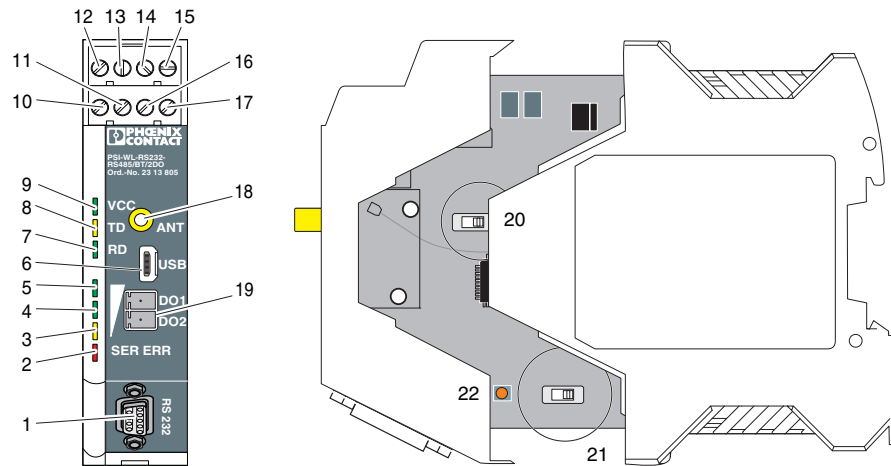


Figure 3-3 Structure

- 1 D-SUB-9: RS-232 interface (pin strip)
- 2 Red LED, SER ERR, flashes during every serial error, e.g., parity, transmission speed
- 3-5 LED bar graph
- 6 Mini-USB type B: USB interface
- 7 Green LED, RD, receive data
- 8 Yellow LED, TD, transmit data
- 9 Green LED, VCC
- 10 Shield connection, same potential as FE
- 11 GND
- 12 24 V 24 V DC supply voltage
- 13 0 V 0 V DC supply voltage
- 14 T(A) RS-422 connection, negative
- 15 T(B) RS-422 connection, positive
- 16 D(A) RS-422/485 connection, negative
- 17 D(B) RS-422/485 connection, positive
- 18 Antenna connection (MCX socket)
- 19 DO1, DO2 Digital output of the wireless signal strength (only for use in safe areas)
- 20 Slide switch for RS-422/RS-485 termination network
- 21 CONF/RUN slide switch for configuration mode
- 22 Reset button

### 3.5 System setup

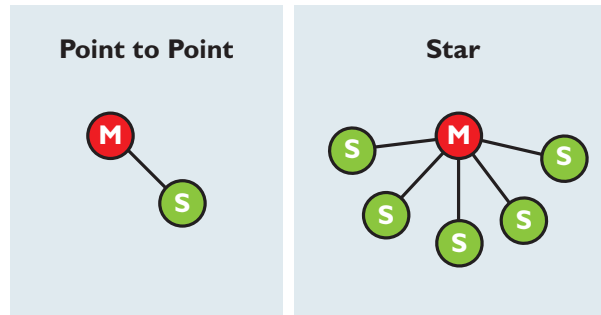


Figure 3-4 Point-to-point connection, point-to-multipoint network (star)

A point-to-multipoint network must only consist of a master and up to seven slaves. This network structure is characterized by each slave that is directly connected to the master. The more devices are connected to the master, the higher the delay time of the wireless network.

The Bluetooth converter can perform the following functions:

- **Master**  
The master Bluetooth converter is the central point in the network. It coordinates initialization and network-specific functions. Wireless connections cannot be established without the master. The master in a wireless network is usually located at a central point, e.g., in the control center. The master PLC is connected to the master Bluetooth converter and is responsible for transmission management of the serial data. There may only be one master PLC in the network. Multi-master systems are not permitted.
- **Slave**  
Slaves are always an end point in the network and not able to transmit data to other devices. The slaves of the PLC are connected to the slave Bluetooth converters. A slave Bluetooth converter only has subordinate rights.

Server roles or client roles can be assigned for a master or a slave. This is required for mobile applications, for example, if a slave is to connect to different masters.

- **Server**  
The Bluetooth server accepts the connection that was initiated by a Bluetooth client. After successful connection establishment, it is not important which device is the server and which device is the client. Data transmission is transparent.
- **Client**  
The Bluetooth client initiates the connection to a Bluetooth server. After successful connection establishment, it is not important which device is the server and which device is the client. Data transmission is transparent.

The client/server settings are important if several devices are installed in the immediate vicinity, e.g., in a control cabinet. A client establishes the connection to a server and increases the transmission power for this connection establishment. The transmission power is then reduced again automatically. If several clients are installed directly next to one another, crosstalk may occur for a short time. This may lead to interferences or even a failure of the wireless connection. To avoid this, only servers must be installed next to one another.

## 4 Setting switches on the device

**NOTE: Electrostatic discharge!**

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1 and IEC 61340-5-1.

### 4.1 Opening and closing the housing

For configuration purposes, the housing must be opened.

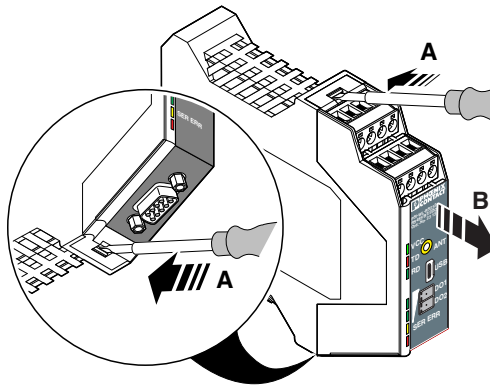


Figure 4-1 Opening the housing

- Open the housing cover using a suitable screwdriver (A).
- Carefully pull the PCB out of the housing as far as possible (B).
- Following configuration, carefully reinsert the PCB as far as it will go.
- Snap the housing cover into place.

## 4.2 Activating the termination network

The device can be operated on a 2-wire or 4-wire bus line as required. Switchable termination resistors are integrated into the device to terminate the RS-422/RS-485 bus line.

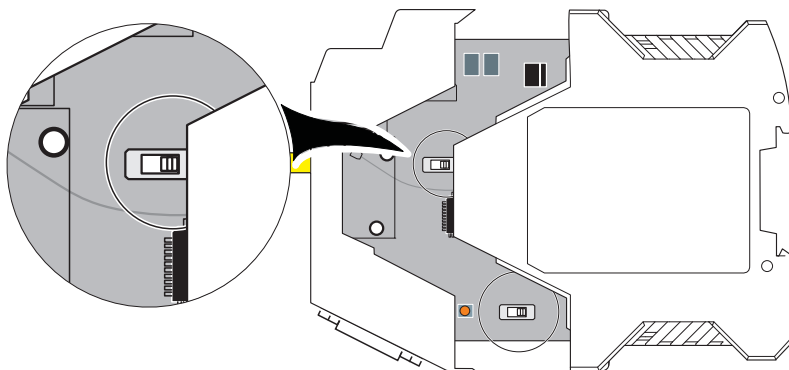


Figure 4-2 Slide switch for termination network

- Depending on the position of the device on the bus line, the termination resistors must be activated or deactivated.
  - **RS-485:** The termination resistors at the two furthest ends of the bus must be activated.
  - **RS-422:** All termination resistors must be activated.

Table 4-1 Slide switch for termination network

Device	Switch position	Termination resistors
RS-422	Left	On
RS-485 termination device	Left	On
RS-485 device	Right	Off

### 4.3 Setting configuration mode

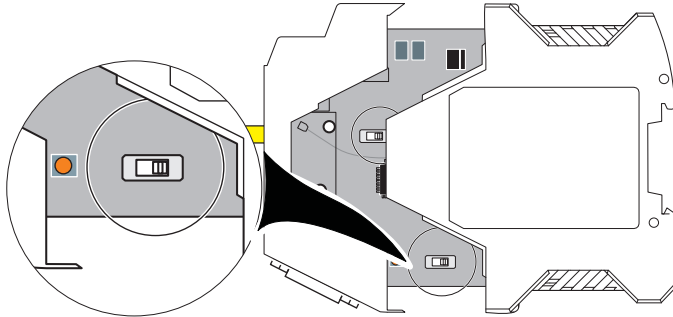


Figure 4-3 CONF/RUN slide switch

- Prior to configuration, set the CONF/RUN slide switch to the CONF position.

Table 4-2 CONF/RUN slide switch

Operating mode	Switch position
CONF	Left
RUN (default setting)	Right

## 4.4 Resetting to the default settings

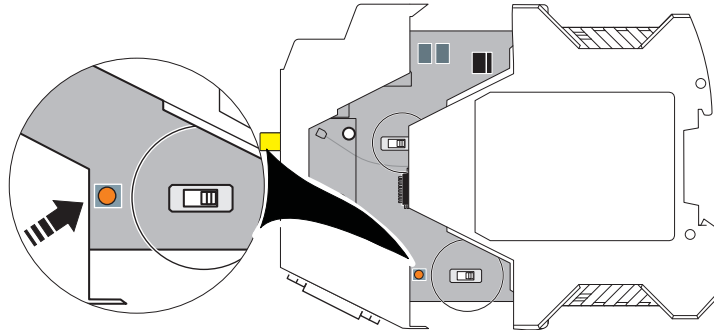


Figure 4-4 Reset button

The reset button can be used to reset the device to the default settings.

- **PSI-WL-RS232-RS485/BT/...**: 9.6 kbps, no parity, 1 stop bit, hardware handshake
- **PSI-WL-PROFIB/BT-SET/2DO**: 187.5 kbps, even parity, 1 stop bit, 8 data bits, no hardware handshake



Prior to reset, set the CONF/RUN slide switch to the RUN position.

Do not reset the device during operation, as otherwise configuration data is lost.

- Switch the supply voltage off and open the housing as described in Section "Opening and closing the housing" on page 19.
- Hold the reset button down for approximately three seconds while switching on the supply voltage.

## 5 Installation and configuration



### CAUTION: Electrical voltage

The device is only intended for operation in the control cabinet and with SELV according to IEC 60950/EN 60950/VDE 0805. The device may only be connected to devices that meet the requirements of EN 60950.



### NOTE: Malfunction

Establish an electrically conductive connection between the DIN rail and protective earth ground using a grounding terminal block. The device is grounded when it is snapped onto the DIN rail (installation according to PELV). Make a low-resistance connection to protective earth ground.

### 5.1 Mounting as single device

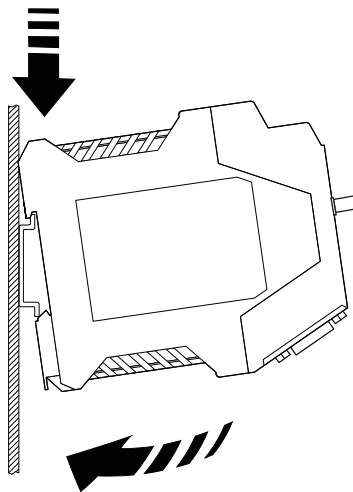


Figure 5-1 Mounting on a DIN rail

- To avoid contact resistance, only use clean, corrosion-free 35 mm DIN rails according to DIN EN 60715.
- Install an end bracket next to the left-hand device to prevent the devices from slipping.
- Place the device onto the DIN rail from above.
- Push the device from the front toward the mounting surface until it engages with a click.

## 5.2 Removal

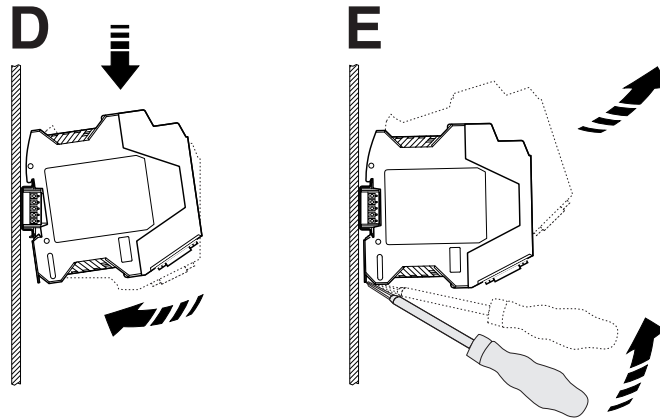


Figure 5-2 Removal

- Push down the locking latch using a screwdriver, needle-nose pliers or similar.
- Slightly pull the bottom edge of the device away from the mounting surface.
- Pull the device diagonally upward from the DIN rail.

## 5.3 Power supply

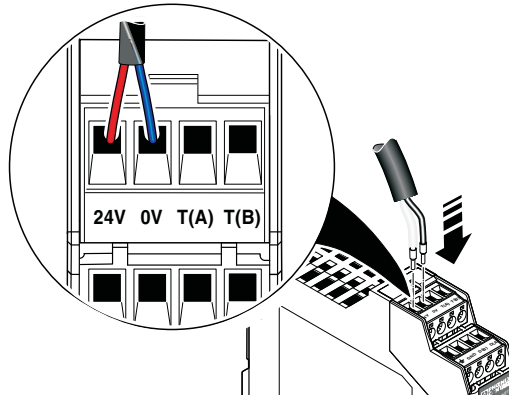


Figure 5-3 Power supply

The device is operated using a 24 V DC SELV.

### Operation as a single device

- Supply voltage to the device via the (24 V) and (0 V) terminals.

### Using the system power supply unit

Alternatively, the device can be connected to a system power supply unit.

- Connect the MINI-SYS-PS 100-240AC/24DC/1.5 system power supply unit (Order No. 2866983) using two DIN rail connectors (Order No. 2709561) to the left of the device.

## 5.4 Serial pin assignments

- Connect the I/O device via the serial interface.

### 5.4.1 Shielding



#### NOTE: Damage to the interface

Faulty connection of the shield in combination with permanent external interference can lead to damage of the RS-422/RS-485 interface.

Observe the polarity of the RS-422/RS-485 2-wire cable and correct connection of the shield connection.

- Connect the shield connection of the RS-422/RS-485 bus line correctly to the device.

### 5.4.2 RS-232 interface



The RS-232 interface of the device is a DCE (Data Communication Equipment) type.

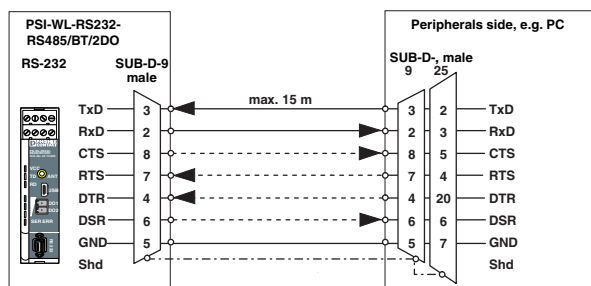


Figure 5-4 RS-232 interface

### 5.4.3 RS-422 interface

In RS-422 mode, a point-to-point connection can be established. When connecting the I/O device, use a common shielded twisted-pair bus line. Activate the termination resistors on each device (see “Activating the termination network” on page 20).

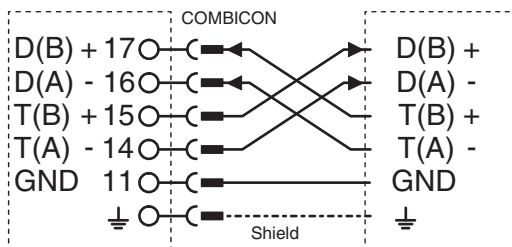


Figure 5-5 RS-422 interface

### 5.4.4 RS-485 interface

In RS-485 mode, a network with several I/O devices can be created. When connecting the I/O device, use a common shielded twisted-pair bus line. Activate the termination resistors at the two furthest ends of the bus (see “Activating the termination network” on page 20).

- Connect the single wires of the data cable to the COMBICON pluggable screw terminal block. Make sure the signal assignment is correct.

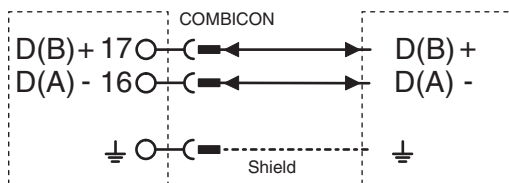


Figure 5-6 RS-485 interface

## 5.5 Antenna connection

The device is equipped with an MCX socket for connecting an external antenna. A wide selection of antennas and antenna cables can be found in Section “Typical combinations of antennas and adapter cables” on page 71.

Please also observe the notes under “Installing antennas” on page 34 when installing the antenna.

## 5.6 Diagnostic and status indicators

A 3-stage LED bar graph displays the wireless reception quality during operation.

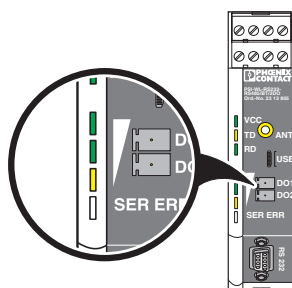


Figure 5-7 Diagnostics indicators during normal operation

Table 5-1 Bar graph

Bar graph	LEDs	Receive signal	DO1	DO2
	All LEDs light up	Wireless signal very good	1	1
	Yellow LED and 1 green LED light up	Wireless signal good	1	0
	Yellow LED lights up	Wireless signal available	0	1
	Off	Not connected	0	0

## 5.7 Digital diagnostic outputs

**Note for the PSI-WL-RS232-RS485/BT/HL product version with HazLoc approval:**



**WARNING: Explosion hazard when used in potentially explosive areas**

Only use digital outputs DO1 and DO2 in the safe area. They are **not** suitable for use in potentially explosive areas.

In addition, the current signal quality can be read via digital outputs DO1/DO2. A coded status of the bar graph LEDs is output here and can be processed externally. The 24 V supply voltage is output via an optocoupler with a maximum current carrying capacity of 120 mA.

### Diagnostic outputs

Connection	MINI COMBICON connector, 2-pos., 1.5 mm <sup>2</sup> , maximum
Function	Digital output of current Bluetooth receive quality, output of the supply voltage via optocoupler
Maximum current carrying capacity	120 mA
Separate potential levels	VCC // logic
Test voltage	1.5 kV AC, 50 Hz, 1 minute between all potential levels according to EN 50178 and EN 61131-2



For PSI-WL-RS232-RS485/BT/**2DO** and PSI-WL-PROFIB/BT-SET/**2DO** only:  
A 2-pos. MINI COMBICON connector (Order No. 1803578) for outputs DO1/DO2 is supplied as standard.

## 5.8 Configuration

System requirements	Windows operating system, Windows XP or later
Configuration interface	USB, RS-232 or Bluetooth
Delivery state	<p><b>PSI-WL-RS232-RS485/BT/...:</b> 9.6 kbps, no parity, 1 stop bit, hardware handshake</p> <p><b>PSI-WL-PROFIB/BT-SET/2DO:</b> 187.5 kbps, even parity, 1 stop bit, 8 data bits, no hardware handshake</p>



For configuration, the following is required:

- Serial programming cable PSM-KA9SUB9/BB/2METER, Order No. 2799474
- USB cable PSI-CA-USB A/MINI B/1METER, Order No. 2313575

Configure the device with the PSI-CONF configuration software via the RS-232 or USB interface. Either configure the directly connected device or the device that is connected via Bluetooth.

The PSI-WL-PROFIB/BT-SET/2DO devices are already preconfigured for a PROFIBUS connection.

- Download the latest PSI-CONF software from the Internet at [phoenixcontact.net/products](http://phoenixcontact.net/products).
- Install the software on your computer.
- Prior to configuration, set the CONF/RUN slide switch to the CONF position (see "Setting configuration mode" on page 21).

## 6 Application examples




System limitations:

- A PROFIBUS network must only contain one PROFIBUS master at the maximum.
- No other PROFIBUS devices must be connected to the local PROFIBUS master.
- Deactivate the “Test, Commissioning, Routing” function when using a PROFIBUS CPU as a slave. If this function is activated, the interface becomes an active PROFIBUS device. Multi-master systems are not permitted.
- Observe the following for multi-drop connections: The transmission time increases with the number of Bluetooth devices. Reduce the data rate, if necessary.



The Bluetooth converter does **not** support the process control system SIMATIC® PCS 7 and the controllers PCS 7.

Table 6-1 Without terminal device addressing (RS-232, RS-422, etc.)

Example	Description	Image
Programming device and PLC	Direct programming connection between a laptop and a programmable logic controller (PLC)	
PDA and PLC	Data links between a third-party device with integrated Bluetooth interface (PDA or cell phone) and an industrial controller	 7065B006
PLC and operator interface	Connection between a mobile operator interface and an industrial controller  No other PROFIBUS devices must be connected to the local PROFIBUS master.	 7065B007

PSI-WL-RS232-RS485/BT/...

Table 6-2 With termination device addressing (RS-485, 2-wire)

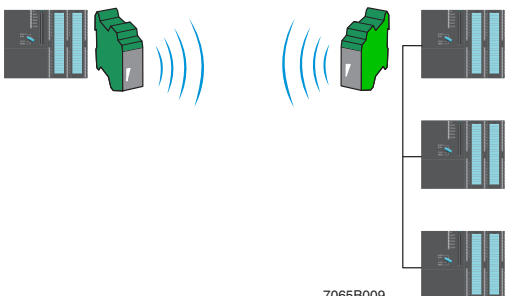
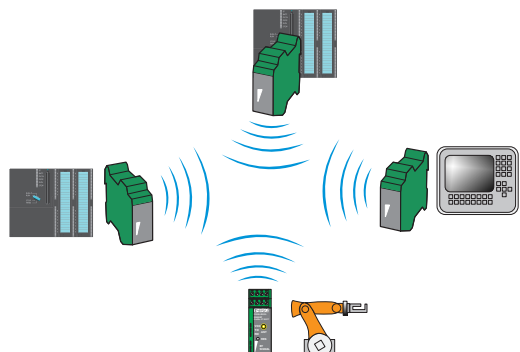
Example	Description	Image
<p>RS-485 2-wire bus system</p>	<p>Integration of a bus device into an existing bus system, e.g., Modbus or PROFIBUS</p> <p>Maximum PROFIBUS data rate: 187.5 kbps</p> <p>PROFIBUS parameters: see Section "Configuring a PROFIBUS connection" on page 75</p>	

Table 6-3 Multi-drop connection

Example	Description	Image
<p>1 Bluetooth master/ up to 7 Bluetooth slaves</p>	<p>Networking of automation components. Up to seven Bluetooth slaves can be connected to a Bluetooth master.</p> <p>Multi-master systems are not permitted.</p>	

## 7 Planning wireless systems

### 7.1 Planning wireless paths

The following questions should be considered during theoretical planning:

- Which data is to be transmitted?
- What points are the signals to be transmitted between?
- What is the distance between these points?
- Are there any topographic or structural obstacles?
- Are you able to circumnavigate these obstacles, e.g., by means of a higher mast?

When evaluating the data, a system calculation can be carried out to determine whether the wireless path is theoretically possible. A calculation example can be found from page 43 onwards.

### 7.2 Practical test

To check the theoretical results, you should carry out an on-site practical test before purchasing a wireless system. Check the location for the master and slave modules on the basis of the following criteria in order to achieve the optimum wireless connection:

- The antenna is positioned such that a line of sight and sufficient signal strength are ensured
- A primary power source for energy supply is available
- Protection of devices against any influences of weather and extreme ambient conditions
- Adequate access to the antenna, surge protection, interface, and other required cables

These requirements can be quickly assessed in most applications. Positioning the antenna is usually the only difficult task. Of course, a connection path without any obstacles would be perfect. However, small obstacles in the Fresnel zone will not necessarily disturb communication. In general, obstacles in the way on long wireless paths have a greater influence than those on short ones.

### 7.3 Selecting antenna cables and antennas

When installing a wireless system, it is very important that you use low-loss coaxial cables. Using an unsuitable cable may lead to considerable loss in performance which cannot be compensated by high antenna gain or by high transmission power. For every 3 dB of coaxial cable loss, half the transmission power will be lost before reaching the antenna. The received signal will also be reduced.

Consider the following factors when selecting the cable:

- Cable length to the antenna
- Acceptable signal loss
- Options for routing the cables

Table 7-1 Antenna selection

Application	Antenna
Short range and direct line of sight without any obstacles	Small omnidirectional antenna
Medium range	Large omnidirectional antenna (observe the vertical opening angle)
Long range	Directional antenna (note the small horizontal opening angle)

## 7.4 Installing antennas



Please also observe the installation instructions for the antenna as well as Section "For your safety" on page 13.

Observe the maximum radiated transmission power of 20 dBm. The transmission power can be calculated from:  
device transmission power + antenna gain - cable attenuation.

Reduce the device transmission power, if necessary.

The following recommendations apply to all antenna installations:

- Mount the antenna outside the control cabinet. Observe the installation instructions for the antenna used.
- Install the antenna in an open area as far away as possible from any obstacles such as buildings, dense deciduous forest or metal objects. Choose a location that provides a clear signal path in the direction of the partner antenna.
- If several antennas are located in the same place, they should have a distance between them of at least 0.6 m in the vertical direction and 1 m in the horizontal direction.
- Pay attention to antenna polarization. Most systems use a vertically polarized omnidirectional antenna at the master station. The opposite antennas must therefore also be polarized vertically. Vertical polarization means that the elements are aligned vertically to the horizon. Crossing polarization between the stations results in a signal loss of 20 dB, minimum.

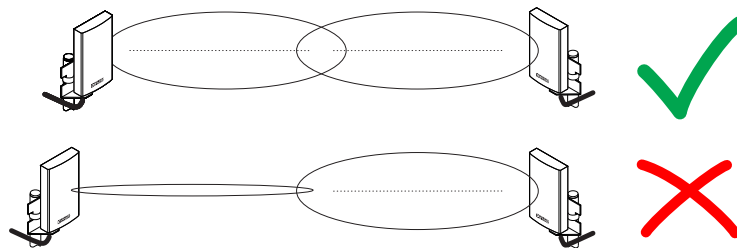


Figure 7-1 Antenna polarization

### 7.4.1 Aligning directional antennas

- First, align the antennas roughly. Use the following:
  - Topographic map
  - GPS device or compass
  - LED bar graph on the Bluetooth converter

Even if there is no direct line of sight, you can find the alignment point.

- You always have to align both antennas with each other, because the radio waves need to radiate into the antennas.
- In particular with regard to directional antennas, it is important to ensure that the antenna is properly secured. If the antenna sways in the wind, the transmission or reception beam can move out of its target area.

## 7.5 Level and attenuation of the Bluetooth converter and accessories

Keep the connection between the Bluetooth converter and the antenna as short as possible. Every extension or adapter cable (pigtail) will cause higher attenuation. A 10 m long RAD-CAB-EF393-10M extension cable results in a loss of 5 dB. The connectors have a typical attenuation of 0.2 dB, i.e., the attenuation value is 0.4 dB + cable length per extension or adapter cable.

You can calculate the levels and attenuation of the Bluetooth converter and accessories using the following table:

Table 7-2 Level

Wireless technology	Bluetooth converter	Connection	Can be set to
Bluetooth	PSI-WL-...	MCX (f)	28 ... 14 dBm (in steps of 1 dB)

Table 7-3 Attenuation of accessories

Adapter/Cable	Connection	Order No.	Attenuation	Length
<b>Pigtail/Adapter - EF316</b>				
RAD-PIG-EF316-MCX-SMA	MCX(m) - SMA(m)	2867678	1.9 dB	1 m
RAD-PIG-EF316-MCX-N	MCX(m) - N(m)	2867681	0.95 dB	0.5 m
RAD-PIG-EF316-N-SMA	N(f) - SMA(m)	2867694	0.57 dB	0.3 m
RAD-PIG-EF316-N-N	N(f) - N(m)	2867704	0.95 dB	0.5 m
RAD-PIG-EF316-SMA-SMA	SMA(m) - SMA(m)	2885618	0.95 dB	0.5 m
<b>Antenna cable - EF393</b>				
RAD-CAB-EF393-3M	N(m)	2867649	1.9 dB	3 m
RAD-CAB-EF393-5M	N(m)	2867652	2.9 dB	5 m
RAD-CAB-EF393-10M	N(m)	2867665	5.4 dB	10 m
RAD-CAB-EF393-15M	N(m)	2885634	7.9 dB	15 m

## PSI-WL-RS232-RS485/BT/...

Table 7-3 Attenuation of accessories

Adapter/Cable [...]	Connection [...]	Order No. [...]	Attenuation [...]	Length [...]
<b>Adapter</b>				
RAD-ADP-SMA/F-SMA/F	SMA(f) - SMA(f)	2884541	0.3 dB	-
RAD-ADP-N/M-SMA/F	SMA(f) - N(m)	2917036	0.3 dB	-
RAD-ADP-N/F-N/F	N(f) - N(f)	2867843	0.3 dB	-
<b>Surge protection</b>				
CN-LAMBDA/4-5.9-BB	N(f) - N(f)	2838490	0.15 dB	-

Table 7-4 Antenna gain

Antenna	Connec-tion	Order No.	Gain	Remark
<b>Omnidirectional antenna</b>				
RAD-ISM-2400-ANT-OMNI-2-1-RSMA	RSMA(m)	2701362	0 dBi	2.1 dBi - 2.1 dB (1.5 m cable)
RAD-ISM-2400-ANT-VAN-3-1-MCX	MCX(m)	2885702	1.5 dBi	3 dBi - 1.5 dB (1.5 m cable)
<b>Directional antenna</b>				
RAD-ISM-2400-ANT-PAN-8-0	SMA(f)	2867610	8 dBi	
RAD-ISM-2400-ANT-CIR-8-0	SMA(f)	2864936	8 dBi	-
ANT-DIR-2459-01	N(f)	2701186	9 dBi	-
RAD-ISM-2459-ANT-FOOD-6-0	N(f)	2692526	6 dBi	-
RAD-ISM-2400-ANT-OMNI-6-0	N(f)	2885919	6 dBi	-
RAD-ISM-2400-ANT-OMNI-6-0-SW	N(f)	2903219	6 dBi	-
RAD-ISM-2400-ANT-OMNI-9-0	N(f)	2867623	9 dBi	-

## 7.6 Free space path loss

When using wireless transmission technology, the signal between the transmitter and receiver is attenuated by the air. The following table lists attenuation values for different distances with a free Fresnel zone and 2.4 GHz.

Table 7-5 Free space path loss

Distance	Attenuation
5 m	54 dB
10 m	60 dB
20 m	66 dB
30 m	69.5 dB
50 m	74 dB
100 m	80 dB
110 m	80.8 dB
120 m	81.6 dB
150 m	83.5 dB

General formula: **free space path loss [dB] = 32.4 + 20 x log(f) + 20 x log(d)**

Formula for 2.4 GHz: **free space path loss [dB] = 100 + 20 x log(d)**

f = Transmission frequency in MHz

d = Distance between the antennas in km

The free space path loss is later included in the system calculation (see Section "Equivalent isotropically radiated power (EIRP)" on page 43).

## 7.7 Propagation of radio waves

In addition to the free space path loss, there are other factors which influence the wireless path. Dispersion, diffraction, and reflection represent types of interference that occur when the wireless signal encounters obstacles. They result in multipath propagation.

### Dispersion

The dispersion of the wireless signal, e.g., at a tree, means that the wireless signal is dispersed in several directions. A tree without any leaves virtually allows all signals to completely pass through, whereas a tree with foliage results in a considerable degree of dispersion. The leaf surfaces disperse the wireless signal in many different directions.

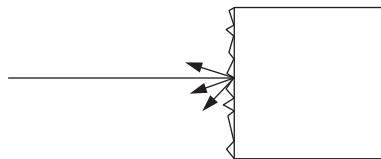


Figure 7-2 Dispersion on a rough surface

**Diffraction**

Diffraction of the wireless signal, e.g., on edges and obstacles, involves the signal being refracted around the edge. The signal then changes its direction. This is similar to the refraction of light in a crystal.

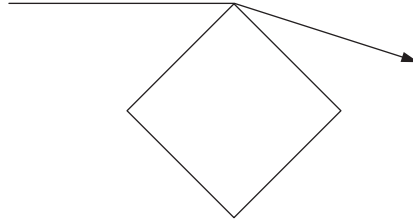


Figure 7-3 Diffraction on an edge

**Reflection**

Reflection on a smooth metal surface involves virtually the entire wireless signal being reflected at the same angle. In certain applications, the reflection may have a positive effect, e.g., if there is no line of sight. Reflections mainly occur in buildings.

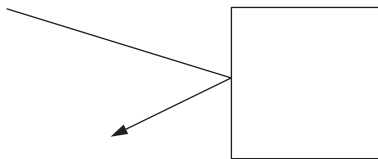


Figure 7-4 Reflection on a metal surface

### Penetration

The type of wall encountered also influences the attenuation of the wireless signal. The following constructions adversely affect the wireless signal, for example:

- Hollow lightweight walls with aluminum-lined insulation
- False ceilings with metal or carbon fiber panels
- Lead glass
- Insulation glass (Thermopen)
- Glass with a metal coating
- Steel objects
- Fire walls
- Elevator shafts and staircases

Each material has a different degree of attenuation. However, the following typical values provide a rough guide.

Table 7-6 Attenuation of different materials

Obstacle	Typical attenuation at 2.4 GHz [dB]
Thin wall	2 ... 5
Wooden wall	5
Brick wall	6 ... 12
Concrete wall	10 ... 20
Concrete ceiling	20
Elevator	20 ... 30

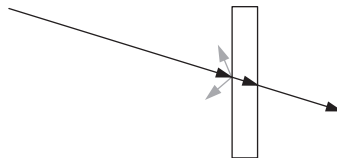


Figure 7-5 Reduction of radio waves when penetrating a wall

Also observe the angle between the transmitter and receiver. Depending on the angle, the radio waves have to penetrate more or less material.

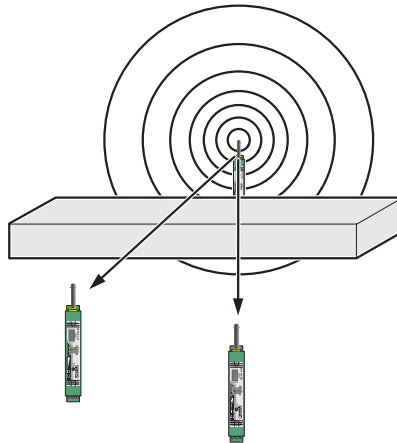


Figure 7-6 Angle of the transmitter and receiver

### Radio dead spot

Radio dead spots are caused by impenetrable obstacles in the wireless path. A radio dead spot can be compared to the shadow cast by the sun. If the receiver is located in a radio dead spot, no direct radio waves can reach it, it can only receive reflections or diffracted waves.

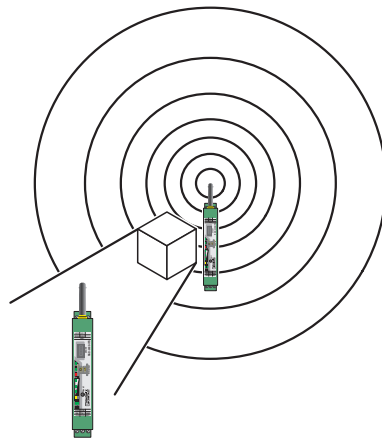


Figure 7-7 Radio dead spot

### Weather influences

Snow, rain or hail only have a small effect on the wireless signal in the 2.4 GHz range.

Heavy rain, for example, only has a minimal effect on the wireless signal. With a rainfall of 50 liters per square meter, i.e., a cloudburst, attenuation of around 0.02 dB/km occurs at a frequency of 2.4 GHz.

Strong wind does not influence the wireless signal, however, it does mean that the antenna must be securely fixed in place. Especially when using directional antennas with a small opening angle, you should make sure that the antenna cannot be moved by the wind. If the antenna is moved by just one centimeter from its original position, this may result in partial loss of the wireless signal, especially in the case of a long transmission path.

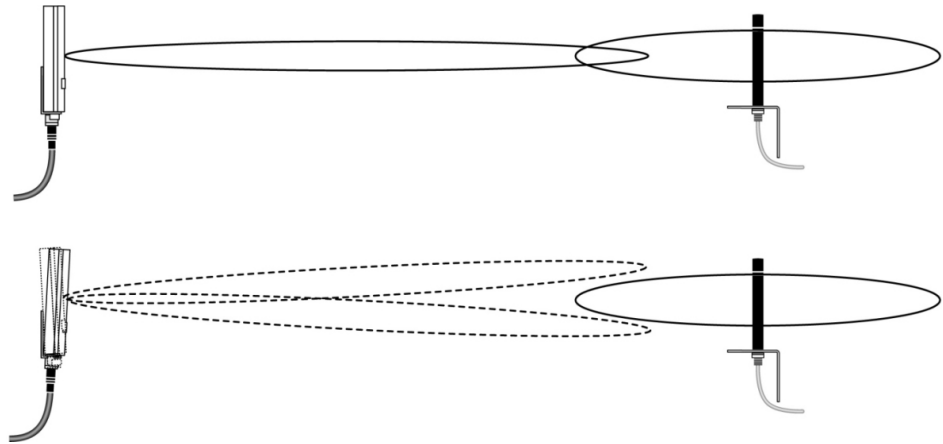


Figure 7-8 Wireless path with strong wind

## 7.8 Fresnel zone

A certain area between the transmitting and receiving antennas on the wireless path is referred to as the Fresnel zone. There should be a line of sight between the antennas, especially when covering with large distances. In order to stay within the Fresnel zone, it may be necessary to install the antennas at a height of a few meters. This area should also be free from any other obstacles.

The ideal wireless path with a direct line of sight between transmitter and receiver is not always possible. In applications, obstacles that affect the wireless channel often have to be taken into account. The wireless path can work even if obstacles such as houses and trees are within the Fresnel zone. The decisive factor is the number of obstacles and the area they occupy in the Fresnel zone. In this case, test measurements should be performed.

Inside buildings, e.g., in conventional automation environments, there is a predominance of reflections. They contribute to a good wireless connection even if the Fresnel zone is not free from obstacles.

The following figure shows the Fresnel zone between two antennas. The required mounting height for the antennas depends on the radius of the Fresnel zone.

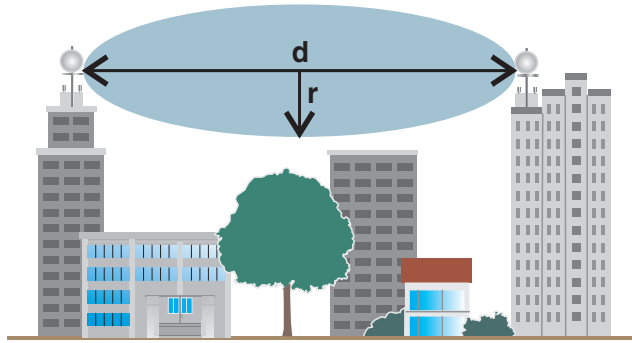


Figure 7-9 Fresnel zone

Table 7-7 Radius of the Fresnel zone depending on the distance

Wireless path distance (d)	Radius of the Fresnel zone (r) at 2.4 GHz
50 m	1.3 m
100 m	1.8 m

General formula for calculating the diameter of the Fresnel zone:

$$r = 0.5 \times \sqrt{\lambda \times d}$$

r = Radius of the Fresnel zone

$\lambda$  = Wavelength (0.125 m at 2.4 GHz)

d = Distance between the antennas in km

Radius of the Fresnel zone with d = 100 m:

$$r = 1.8 \text{ m}$$

Result: The radius of the Fresnel zone is 1.8 m at a wavelength of 0.125 m (2.4 GHz) and a distance of 100 m between the antennas.

## 7.9 Range

Specifying ranges is very difficult due to the influence of various factors. Based on practical tests, it is possible to provide the following guideline values. They may be significantly higher or lower depending on the actual application. The range depends on the following:

- Length of the antenna cable (the shorter the cable, the lower the attenuation)
- Antenna used
- Height of the antenna (the higher, the better)
- Set transmission power
- Obstacles in the wireless path

## 7.10 Equivalent isotropically radiated power (EIRP)

The equivalent isotropically radiated power (EIRP) is a gauge of the radiation power of an antenna. The EIRP value is the sum of the transmission power in dBm and the antenna gain in dBi.

Example:

- Transmission power = 4 dBm
- Antenna gain = 8 dBi
- Attenuation by a 3 m long cable = 2.85 dB
  
- $EIRP = 4 + 8 - 2.85 \text{ dBm} = 9.15 \text{ dBm}$

## 7.11 System calculation in free space

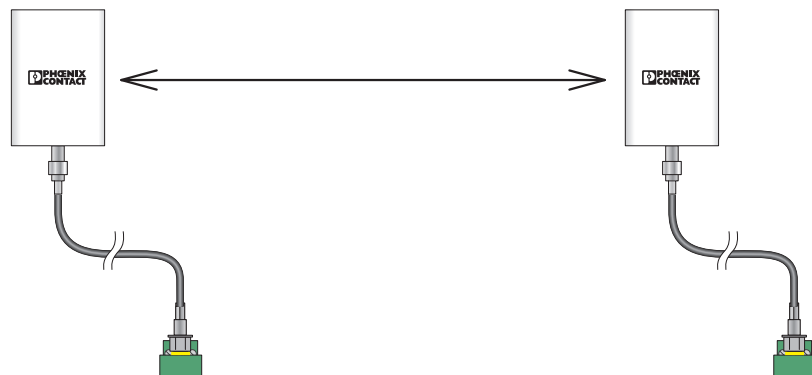


Figure 7-10 Free space path loss

Antenna gain per antenna: 8 dBi

Transmission power per Bluetooth converter: 4 dBm

Cable attenuation per cable (3 m EF 142): 2.85 dB

Free space path loss 100 m: 80 dB

**Example calculation with optimum free space**

- Wireless technology: Bluetooth
- Length of the wireless path: 100 m
- Device transmission power + antenna gain - cable attenuation (EIRP):  $\leq 10$  dBm  
(10 dBm must not be exceeded in Europe for legal reasons; adapt the cable, adapter or transmission power, if required)

EIRP [dBm] =

Transmitter power [dBm]  
 + Gain of transmitting antennas [dBi]  
 - Losses of the transmitter cable [dB]

Incoming power for the receiver [dBm] =

Transmitter power [dBm]  
 - Losses of the transmitter cable [dB]  
 + Gain of the transmitting antenna [dBi]  
 - Free space path loss [dB]  
 + Gain of the receiving antenna [dBi]  
 - Attenuation of the antenna cable at the receiver [dBm]

System reserve =

receiver sensitivity [dBm]  
 - incoming power for the receiver [dBm]  
 (recommended system reserve  $>10$  dB)

EIRP = 9.15 dBm

Free space path loss [dB] =

$32.4 + 20 \log(f[\text{MHz}]) + 20 \log(R[\text{km}]) = 32.4 + 20 \log(2400) + 20 \log(0.1) = 80$  dB

Incoming power for the receiver = -69 dBm

Receiver sensitivity = -91 dB

System reserve = 91 dB - 69 dB = 22 dB

## 7.12 Practical examples

It is not possible to provide basic calculation principles for obstacles in the wireless path as the obstacles and applications will vary too much. The practical examples given below are for guidance only and cannot be directly transferred to other applications.

### Bushes

The bush illustrated below is two meters wide and has an attenuation of approximately 15 dB.



Figure 7-11 Bush with an attenuation of approximately 15 dB

### Forest

The forest illustrated below consists of dense undergrowth with a trunk diameter of approximately 5 to 20 centimeters. In our test, the wireless signal was transmitted through a 25 m forest. The attenuation was around 40 dB.



Figure 7-12 Forest with an attenuation of around 40 dB

**PSI-WL-RS232-RS485/BT/...**

---

## 8 Detecting and removing errors

If your wireless system does not function properly, proceed as follows:

- First, ensure that you have a good wireless signal with two green bar graph LEDs.



Avoid contact between the antennas of two Bluetooth converters; otherwise the receiver might become overloaded.

Ground loops are caused by grounding of the antenna via the antenna fixing unit, grounding of the power supply, or grounding of the serial interface. To avoid ground loops, connect these components to a single ground point.

### 8.1 Loopback test during serial data transmission

With an RS-232 interface, you can use the loopback test to check the data path from the master to the slave and back again. To do so, short-circuit two terminal points of the RS-232 interface on the slave Bluetooth converter. It is then possible to transmit characters to the master Bluetooth converter using a terminal program (e.g., HyperTerminal). The characters are echoed back to the terminal program.



Note for users of Windows 7 or a more recent Windows operating system:

HyperTerminal is no longer available from Windows 7. Instead you can use any other terminal program.

To carry out a loopback test, proceed as follows:

- Close all programs on your PC, including the PSI-CONF software.
- Connect the PC to the master Bluetooth converter and start HyperTerminal via “Start, All Programs, Accessories, Communication, HyperTerminal”. The COM port settings on the PC must correspond to the interface settings on the master Bluetooth converter.
- Insert a loopback test connector onto the RS-232 interface of the slave Bluetooth converter.

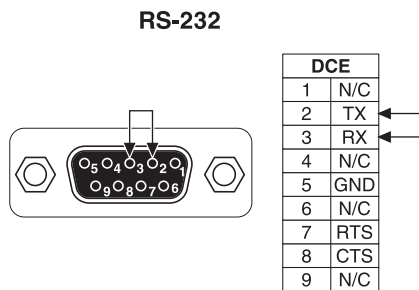


Figure 8-1 Loopback test on an RS-232 interface

## PSI-WL-RS232-RS485/BT/...

- Connect both Bluetooth converters to the power supply.
- Check the wireless connection via the LED bar graph.
- Enter several characters of your choice. HyperTerminal transmits these characters over the wireless path. On the slave side, the characters are output and immediately read again using the bridge. This returns the already transmitted characters and they appear twice on the HyperTerminal screen.
  - The screen remains blank if the check was not successful. Monitor the TX and RX LEDs on every Bluetooth converter. In this way, you can determine the point up to which data has been transmitted.
  - In case the characters only appear once, check the HyperTerminal settings for hidden outgoing characters. The following options must be enabled under “File, Properties, Settings, ASCII Setup”:  
“Echo typed characters locally” and  
“Append line feeds to incoming line ends”.

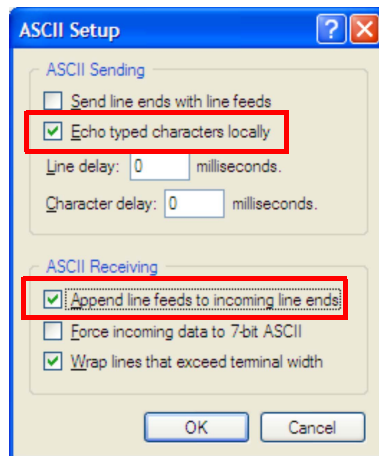


Figure 8-2 Settings in HyperTerminal

## 9 AT commands

The Bluetooth converter stores its operating characteristics in a non-volatile memory (EEPROM). You can overwrite these characteristics using commands and can thus modify the method of operation of the device. The device executes commands as long as it is in command mode.

You can enter commands for the Bluetooth converter using appropriate communication software (e.g., HyperTerminal).



Make sure that the baud rate setting for the COM port in your communication software corresponds to the set speed of the Bluetooth converter.

If the CONF/RUN slide switch is in the “CONF” position, the interface is always set to USB, RS-232, 57.6 kbps, 8 data bits, no parity, 1 stop bit, and hardware handshake.

### Switching to command mode

The device is directly in data mode when it is switched on.

- Enter the Escape string (default: **+++**) to access command mode. Command mode is used to configure the Bluetooth converter.



An interval of at least one second must be observed before and after sending the Escape string. The Escape string must be entered **within one second**.

Intervals can be set using the **AT\*AMET** command. The Escape string can be modified using the **ATS2** command.

- Enter **AT\*ADDM** to return to data mode once configuration is complete and confirm by pressing ENTER. The device only transmits data to the partner once it is in data mode.

**Command structure**

All commands transmitted to the Bluetooth converter must start with **AT** and must be confirmed by pressing ENTER. The commands can be entered in upper case or lower case, however, not in a combination of both. Unlike a modem, several commands cannot be written in one command line.



**AT** deletes the last command line executed by your Bluetooth converter (if present) and prepares your device for the new command line.

**Correcting a typing error**

When a wrong command character is entered, it can be corrected using the backspace key. Pressing the backspace key deletes the character entered last. However, **AT** at the start of the command line will not be deleted.

## 9.1 Command descriptions

**AT**

### Attention string

**AT** is the prefix of a command line and must be entered at the start of each command line (except for the +++ Escape string). Entry of **AT** without a subsequent command line is confirmed by the Bluetooth converter with OK.



If you attempt to execute a command line that is unknown or does not start with **AT**, an ERROR message is generated (except for the +++ Escape string).

**AT\***

### Command list

The **AT\*** command is used to display a list of supported AT commands.

**E**

### Echo

The Bluetooth converter is set by default to display commands on the PC screen in command mode (echo). This feature can only be used if your PC is configured for full duplex mode.



Most systems operate in full duplex mode. In this case, you can activate the echo function using the **E1** command.

If you are working in half duplex mode, disable the echo function with the **E0** command.

**S2**

### Escape string

This command specifies the ASCII value of the Escape character.

Default setting: 43 (This value corresponds to ASCII character "+").

Example: **ATS2=43**

**Z**

### Dummy command

The **ATZ** command has no function. However, it is used by some controllers to determine whether a modem is connected to the interface. Therefore, the Bluetooth converter responds to an **ATZ** with "OK".

**&F**

### Factory configuration

The **AT&F** command restores the factory settings. The factory settings can be modified using the **AT\*AMSF** command.

## 9.2 Connection commands

### \*AGDM

#### Detection mode

The **\*AGDM** command permits or prohibits other Bluetooth devices from finding your Bluetooth converter.

**? Request**

The current detection mode is displayed.

**1,x Undiscoverable**

- Other Bluetooth devices **cannot** find the Bluetooth converter when performing a search.
- Other Bluetooth devices **cannot** be connected to the Bluetooth converter.

**2,x Undiscoverable but connectable**

- Other Bluetooth devices **cannot** find the Bluetooth converter when performing a search.
- Other Bluetooth devices can be connected to the Bluetooth converter.

**3,x Discoverable and connectable**

- Other Bluetooth devices can find the Bluetooth converter when performing a search.
- Other Bluetooth devices can be connected to the Bluetooth converter.

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGDM=3,1**

“Discoverable and connectable” detection mode is set and stored.

**\*AGCM****Connection mode**

The **\*AGCM** command specifies the connection option.

**? Request**

The current connection mode is displayed.

**1,x Connection not permitted**

Other Bluetooth devices **cannot** be connected to the Bluetooth converter.

**2,x Connection permitted**

Other Bluetooth devices can be connected to the Bluetooth converter.

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGCM=2,1**

“Connection permitted” connection mode is set and stored.

**\*AGPM****Pairing mode**

The **\*AGPM** command specifies the pairing option.

**? Request**

The current pairing mode is displayed.

**1,x Pairing not permitted**

Other Bluetooth devices **cannot** be paired with the Bluetooth converter.

**2,x Pairing permitted**

Other Bluetooth devices can be paired with the Bluetooth converter.

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGPM=1,0**

“Pairing not permitted” connection mode is set but not stored.

**PSI-WL-RS232-RS485/BT/...**

---

**\*AGSM****Security mode**

The **\*AGSM** command specifies the security option.

**? Request**

The current security mode is displayed.

**1,x Security disabled**

Bluetooth security mode 1: data encryption disabled, no connection authentication required.

**2,x Security enabled**

Bluetooth security mode 3: data encryption enabled and connection authentication required.

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGSM=2,1**

“Security enabled” connection mode is set and stored.



Pairing and an identical password for the relevant Bluetooth devices are essential in order to establish a data connection when security is enabled.

**\*AGND****Name request**

The **\*AGND** command requests the Bluetooth device name of a partner. The Bluetooth address of the partner must be known.

Example: **AT\*AGND=0080371DA128**

The partner has the address: 0080371DA128

**\*AGDD****Device search**

The **\*AGDD** command searches for Bluetooth devices.

**1,x Limited request**

**2,x Standard request**

**x = specification time**

x specifies the length of the search.

Value range: 8 ... 48 (times 1.28 = seconds)

Example: **AT\*AGDD=2,10**

A standard search of 12.8 seconds is started.

Feedback:

**\*AGDD:a**

**OK**

**\*AGDDE:w, x, y, z**

**a Number of Bluetooth devices found**

**w Bluetooth address**

**x Device class (see COD)**

**y** – y = 0 -> Device name not available

– y = 1 -> Device name available

**z Device name**

**\*AGI****Request**

The **\*AGI** command requests the Bluetooth devices in the area.

**1,x,y Limited request**

**2,x,y Standard request**

**x Specification time**

x specifies the length of the search.

Value range: 8 ... 48 (times 1.28 = seconds)

**y Number**

Maximum number of Bluetooth devices to be found

Value range: 1 ... 255 (0 = no limit to number)

Example: **AT\*AGI=2,10,5**

A standard search of 12.8 seconds for a maximum of five devices is started.

Feedback:

**\*AGI:Bluetooth address, device class**

(repeated accordingly for all devices found)

## PSI-WL-RS232-RS485/BT/...

**\*AGB****Pairing**

The **\*AGB** command pairs the Bluetooth converter with the partner.

Example: **AT\*AGB=0080371DA128**

The partner has the address: 0080371DA128



The partner must accept pairing (see **\*AGPM** pairing mode) and both devices must have the same password.

**\*AGUB****Unpairing**

The **\*AGUB** command unpairs the Bluetooth converter from the partner.

Example: **AT\*AGUB=0080371DA128**

The partner has the address: 0080371DA128

**\*AGBD?****Request the paired devices**

The **\*AGBD?** command reads the list of paired Bluetooth partners from the Bluetooth converter.

Example: **AT\*AGBD?**

Feedback:

**\*AGBD:a**

**OK**

**\*AGBDE:x, y, z**

**a**    **Number of paired Bluetooth devices**

**x**    **Bluetooth address**

**y**    –    y = 0 -> Device name not available

–    y = 1 -> Device name available

**z**    **Device name**

**\*AGFP****Password**

The **\*AGFP** command is used to read and write the password.

**?    Request**

The current password is requested.

**PW,x    Write password**

“PW” must not exceed 16 characters.

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGFP=4711,1**

Password “4711” is written to the Bluetooth converter and stored.

**\*AGLN****Individual name**

The **\*AGLN** command is used to read and write the name of the Bluetooth converter.

**? Request**

The current Bluetooth name is requested.

**N,x Write name**

“N” must not exceed 240 characters (umlauts are not permitted).

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGLN=Packaging machine,1**

The name “Packaging machine” is written to the Bluetooth converter and stored.

**\*AGLC****Individual device class (COD)**

The **\*AGLC** command is used to read and specify the device class of the Bluetooth converter.

**? Request**

The individual device class (COD - Code of Device) is requested.

**C,x Specify device class**

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

**\*AGGMSR****Read client/server role**

The **\*AGGMSR** command reads the client/server role of the partner.

Example: **AT\*AGGMSR=0080371DA128**

The partner has the address: 0080371DA128

Feedback:

**\*AGGMSR:x**

**x = 0** The partner is a server.

**x = 1** The partner is a client.

**\*AGCMSR****Specify the client/server role**

The **\*AGCMSR** command specifies the client/server role of the partner.

Example: **AT\*AGCMSR=0080371DA128,x**

The partner has the address: 0080371DA128

**x = 0** The partner is a server.

**x = 1** The partner is a client.

**PSI-WL-RS232-RS485/BT/...**

---

**\*AGMSP****Client/server method**

The **\*AGMSP** command specifies the individual client/server method of the Bluetooth converter.

**? Request**

The current client/server method is displayed.

**1,x Partner may choose**

The partner may decide whether it would like to be a client or a server.

**0,x Client**

Your device always attempts to be a client (partner always a server).

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*AGMSP=1,1**

The "partner may choose" method is set and stored.

**\*AGRSS****Signal strength**

The **\*AGRSS** command requests the received signal strength from a partner. The Bluetooth address of the partner must be known.

Example: **AT\*AGRSS=0080371DA128**

The partner has the address: 0080371DA128

Feedback:

**\*AGRSS:128**

(128 = optimum signal strength)



For this request, the Bluetooth converter must have already established a data link with the partner but still be in command mode.

## 9.3 Reading the service profile



The service profile does not have to be read in “normal” applications. This section is therefore only aimed at users with well-established knowledge of Bluetooth.

### \*ARSS

#### Request the Bluetooth service profile

The \*ARSS command reads the Bluetooth service profile of the Bluetooth partner.

**AT\*ARSS=*x,y,z***

#### **x Bluetooth address**

The Bluetooth address of the opposite station is displayed.

#### **y Bluetooth service profile**

- y = 0 -> Serial port profile
- y = 1 -> Dial-up networking profile
- y = 2 -> LAN access profile

#### **z Maximum number of results**

The maximum number of search results is specified.

Feedback for “Serial port profile”:

**\*ARSS:*N***

**OK**

**\*ARSRSP:*A,B,C,D***

#### **N Number of services found**

#### **A Bluetooth address**

The Bluetooth address of the opposite station is displayed.

#### **B RFCOMM server channel**

Number of the RFCOMM server channel on which the service was found (value range: 1 ... 30)

#### **C Service name**

- C = 0 -> Service name not available
- C = 1 -> Service name available

#### **D Name of the service found**

The name of the service found is displayed.

Feedback for “Dial-up networking profile”:

**\*ARSS:*N***

**OK**

**\*ARSRDUN:*A,B,C,D,E,F***

#### **N Number of services found**

#### **A Bluetooth address**

The Bluetooth address of the opposite station is displayed.

#### **B RFCOMM server channel**

Number of the RFCOMM server channel on which the service was found (value range: 1 ... 30)

**C Service name available?**

- C = 0 -> Service name not available and "D" is invalid.
- C = 1 -> Service name available and "D" is valid.

**D Name of the service found**

The name of the service found is displayed.

**E Information about audio feedback available?**

- E = 0 -> Information about audio feedback is not available and "F" is invalid.
- E = 1 -> Information about audio feedback is available and "F" is valid.

**F Audio feedback**

The "Audio feedback" function is not supported by the Bluetooth converter.

Feedback for "LAN access profile":

**\*ARSS:N**

**OK**

**\*ARSRLAN:A,B, C, D, G, H, I, J, K, L**

**N Number of services found****A Bluetooth address**

The Bluetooth address of the opposite station is displayed.

**B RFCOMM server channel**

Number of the RFCOMM server channel on which the service was found (value range: 1 ... 30)

**C Service name available?**

- C = 0 -> Service name not available and "D" is invalid.
- C = 1 -> Service name available and "D" is valid.

**D Name of the service found**

The name of the service found is displayed.

**G Service description available?**

- G = 0 -> A service description is not available and "H" is invalid.
- G = 1 -> A service description is available and "H" is valid.

**H Service description****I Service parameter available?**

- I = 0 -> A service parameter is not available and "J" is invalid.
- I = 1 -> A service parameter is available and "J" is valid.

**J Service parameter****K Subnet IP available?**

- K = 0 -> A subnet IP address is not available and "L" is invalid.
- K = 1 -> A subnet IP address is available and "L" is valid.

**L Subnet IP**

Subnet IP address, under which the partner can be reached in the LAN network.

## 9.4 Data mode

### \*ADDM

#### Data mode

The \*ADDM command switches the Bluetooth converter from command to data mode.

### \*ADCP

#### Establish a serial data connection

The \*ADCP command establishes a serial data connection to the partner.

**AT\*ADCP=A,x,y,z**

#### A Bluetooth address

The Bluetooth address of the partner is displayed.

#### x Bluetooth service profile

- x = 0 -> Serial port profile
- x = 1 -> Dial-up networking profile
- x = 2 -> LAN access profile

#### y RFCOMM server channel

“0” can be entered for automatic selection. Experienced users can select a channel between 1 and 30.

- #### z
- z = 0 -> The partner decides whether it is a client or a server.
  - z = 1 -> The Bluetooth converter becomes the client.

Feedback:

**AT\*ADCP:K**

#### K Connection ID

ID of the current connection. This ID is required to interrupt the connection using the \*ADCC command.

### \*ADCC

#### Interrupt the serial data connection

The \*ADCC command interrupts a serial data connection to the partner.

**AT\*ADCC=K**

#### K Connection ID

The ID of the connection to be interrupted. This ID was displayed when the connection was established (\*ADCP).

If there is only one connection, this is displayed as “1”.

**PSI-WL-RS232-RS485/BT/...**

---

**\*ADDCP****Standard client profile**

The **\*ADDCP** command specifies the standard client profile of the Bluetooth converter.

**? Request**

The standard client profile is displayed.

**=0,x Serial port profile****=1,x Dial-up networking profile****=2,x LAN access profile****=255,x No profile**

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*ADDCP=0,1**

The serial port profile is set and stored as the standard client profile.

**\*ADDSP****Standard server profile**

The **\*ADDSP** command specifies the standard server profile of the Bluetooth converter.

**? Request**

The standard client profile is displayed.

**=0,x Serial port profile****=1,x Dial-up networking profile****=2,x LAN access profile****=255,x No profile**

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*ADDSP=0,1**

The serial port profile is set and stored as the standard server profile.

**\*ADMRP****Maximum number of partners**

The **\*ADMRP** command requests the maximum possible number of partners of the Bluetooth converter.

**? Request**

The maximum number of partners is displayed.

Feedback:

**\*ADMRP:7**

The Bluetooth converter can communicate with a maximum of seven slaves.

**\*ADNRP****Number of partners**

The **\*ADNRP** command specifies the number of partners. If your device is not to act as the master, enter "0".

**? Request**

The maximum number of partners is displayed.

**=a,x a = Number of partners**

x = 0 -> The setting is only valid until the next voltage interrupt.

x = 1 -> The setting is stored.

Example: **AT\*ADNRP=2,1**

Two partners are set and stored.



The number of partners (**\*ADMRP**) must not exceed the maximum number of partners (**\*ADNRP**).

**PSI-WL-RS232-RS485/BT/...****\*ADWDRP****Standard partner**

The **\*ADWDRP** command specifies the standard partners.

**a Partner ID**

“a” is between “0” and “Number of partners - 1”

**b Bluetooth address****c Connection scheme**

- c = 1 -> The connection to the partner is established in the event of data traffic.
- c = 2 -> The connection is established as soon as your device is in data mode.
- c = 3 -> The connection to the partner is established in the event of data traffic or as soon as the device is in data mode.

**d Partner update**

- d = 0 -> The partner is not updated automatically.
- d = 1 -> A new device that connects to your device is automatically added and stored in the address list. This function is only available for a partner.

**e,x Device name**

The Bluetooth device name is displayed (240 characters, maximum).

- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

Partner specification:

**AT\*ADWDRP=a, b, c, d, e, x**

Partner request:

Example: **AT\*ADWDRP=a**

Feedback:

**\*ADWDRP:b, c, d, e**

**\*ADIT****Inactivity timer**

The **\*ADIT** command determines the automatic shutdown time in the event of inactive data traffic.

**? Request**

The shutdown time is displayed.

**=a,x a = shutdown time in minutes (255, maximum)**

- a = 0 -> No automatic shutdown
- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

Example: **AT\*ADIT=10,1**

If there is no data flow after ten minutes, the connection is interrupted. This setting is stored.

**\*ADWM****Multi-drop configuration**

The **\*ADWM** command activates or deactivates the “Wireless multi-drop” function. In multi-drop operation, the master sends its serial data to all the slaves. The multi-drop function on slaves must always be deactivated (only the master is configured for multi-drop). If the multi-drop function of the master is deactivated, it is only possible to connect to one slave.

**? Request**

The multi-drop function is displayed.

**a Multi-drop active**

- a = 0 -> Multi-drop deactivated
- a = 1 -> Multi-drop activated

**b Forwarding**

- b = 0 -> The data received by a master is only forwarded to the serial interface.
- b = 1 -> The data received by a master is forwarded to all other connected slaves and to the serial interface.



The “Forwarding” function is not supported by the Bluetooth converter.

- x** - x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

**AT\*ADWM=a, b, x**

Example: **AT\*ADWM=1,0,1**

Multi-drop is activated and the data received by a master is only forwarded to the serial interface. This setting is stored.

Request: **AT\*ADWM?**

Feedback:

**\*ADWM:a, b**

## 9.5 Information commands

**\*AILBA****Bluetooth address**

The **\*AILBA** command requests the individual local Bluetooth address of the Bluetooth converter.

**? Request**

The individual local Bluetooth address is displayed.

## 9.6 Interface commands

### \*AMRS

#### RS-232 settings

The **\*AMRS** command sets the parameters of your RS-232 interface. These settings are also used for the RS-485 and RS-422 interfaces.

#### ? Request

The interface parameters are displayed.

#### a Transmission speed

Standard

- a = 2 -> 1200 bps
- a = 3 -> 2400 bps
- a = 4 -> 4800 bps
- a = 5 -> 9600 bps
- a = 6 -> 19200 bps
- a = 7 -> 38400 bps
- a = 8 -> 57600 bps
- a = 9 -> 115200 bps

Special

- a = 17 -> 7200 bps
- a = 18 -> 31250 bps
- a = 19 -> 75000 bps
- a = 20 -> 93750 bps
- a = 21 -> 136000 bps
- a = 22 -> 187500 bps

#### b Data bits

- b = 1 -> 8 data bits

#### c Stop bits

- c = 1 -> 1 stop bit
- c = 2 -> 2 stop bits

#### d Parity

- d = 1 -> None
- d = 2 -> Odd
- d = 3 -> Even

#### e Flow control

- e = 1 -> RTS/CTS
- e = 2 -> None

#### f Update settings

- f = 0 -> Following the next voltage interrupt
- f = 1 -> Immediately (after confirming by pressing ENTER)

#### x

- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

**AT\*AMRS=a, b, c, d, e, f, x**

Example: **AT\*AMRS=5,1,1,3,1,1,1**

The interface is set to 9.6 kbps, 8 data bits, 1 stop bit, even parity, and RTS/CTS flow control. This setting is accepted and stored immediately.

Request: **AT\*AMRS?**

Feedback:

**\*AMRS:a, b, c, d, e**

## **\*AMSIT**

### **Interface type**

The **\*AMSIT** command specifies your interface type (RS-232, RS-485 or RS-422).

#### **? Request**

The interface parameters are displayed.

#### **a Interface**

- a = 1 -> RS-232
- a = 2 -> RS-422
- a = 3 -> RS-485

- #### **x**
- x = 0 -> The setting is only valid until the next voltage interrupt.
  - x = 1 -> The setting is stored.

**AT\*AMSIT=a, x**

Example: **AT\*AMSIT=1,1**

The interface is set to RS-232 and stored.

Request: **AT\*AMSIT?**

Feedback:

**\*AMSIT:a**

## 9.7 Additional commands

### \*ACF

#### Read device list (favorites)

The **\*ACF** command reads your device list.

- a**    **Number of devices (favorites)**
- x**    **Bluetooth address**
- y**    **Device name**

Example: **AT\*ACF?**

Feedback:

**\*ACF:a**

**OK**

**\*ACFD:x, y**

### \*ACACF

#### Add device

The **\*ACACF** command adds a device to the device list (favorites). A maximum of ten devices is permitted.

- x**    **Bluetooth address**
- y**    **Device name (240 characters, maximum)**

**AT\*ACACF=x, y**

Example: **AT\*ACACF=0080371DA11E, Converter5**

The device with address 0080371DA11E and the name "Converter5" is added to the device list.



If the Bluetooth address already exists in the device list under another name, only the name is modified.

### \*ACDF

#### Delete device

The **\*ACDF** command deletes a device from the device list (favorites).

- x**    **Bluetooth address**

**AT\*ACDF=x**

Example: **AT\*ACDF=0080371DA11E**

The device with address 0080371DA11E is removed from the device list.

**\*ACCB****Configuration via Bluetooth**

The **\*ACCB** command enables device configuration via Bluetooth.

**? Request**

The interface parameters are displayed.

**a Interface**

- a = 0 -> Configuration is **not** possible via Bluetooth.
- a = 1 -> Configuration is also possible via Bluetooth.

**x**

- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

**AT\*ACCB=a, x**

Example: **AT\*ACCB=1,1**

Permission for configuration via Bluetooth is granted and stored.

**\*AMPM****Energy-saving mode**

The **\*AMPM** command enables energy-saving mode.

**? Request**

Energy-saving mode is displayed.

**a Mode**

- a = 1 -> No energy-saving mode
- a = 2 -> Energy-saving mode: "Sleep" activated
- a = 3 -> Energy-saving mode: "Sleep" and "Stop" activated

**x**

- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

**AT\*AMAP=a, x**

Example: **AT\*AMSIT=1,1**

Energy-saving mode is disabled and this setting is stored.

**\*AMMP****Transmission power**

The **\*AMMP** command specifies the maximum transmission power.

**? Request**

The maximum transmission power is displayed.

**a Transmission power**

Value range: 98 ... 158 (128 -> 0 dBm)

**x**

- x = 0 -> The setting is only valid until the next voltage interrupt.
- x = 1 -> The setting is stored.

**AT\*AMMP=a, x**

Example: **AT\*AMSIT=138,1**

The maximum transmission power is limited to 10 dBm and stored.

**PSI-WL-RS232-RS485/BT/...**

---

**\*AMET****Escape string waiting time**

The **\*AMET** command specifies the waiting time before and after the Escape string. To ensure that the Escape string (default: **+++**) entry for switching to command mode is valid, a data pause must be observed before and after entry.

**? Request**

The waiting time before and after the Escape string is displayed.

**a Waiting time before the string**

Value range: 50 ... 2000 ms

**b Waiting time after the string**

Value range: 50 ... 2000 ms

- x**
- x = 0 -> The setting is only valid until the next voltage interrupt.
  - x = 1 -> The setting is stored.

**AT\*AMET=a, b, x**

Example: **AT\*AMET=1000,1000,1**

The waiting time before and after the Escape string is set to one second and stored.

**\*AMSF****Specify the factory settings**

The **\*AMSF** command specifies the current configuration of the Bluetooth converter as the factory setting. The **AT&F** command can be used to restore these settings at any time.

Example: **AT\*AMSF**

Feedback: **OK**

# A Technical appendix

## A 1 Typical combinations of antennas and adapter cables

In this section, you will find typical combinations of Bluetooth converters, antennas and adapter cables for installation with or without a control cabinet.



Install the antenna outside the control cabinet or building.  
 Please also observe the installation instructions for the antenna as well as Section “For your safety” on page 13.  
 Observe the maximum radiated transmission power of 20 dBm. The transmission power can be calculated from:  
 device transmission power + antenna gain - cable attenuation.  
 Reduce the device transmission power, if necessary.

### Omnidirectional antenna, 2 dBi

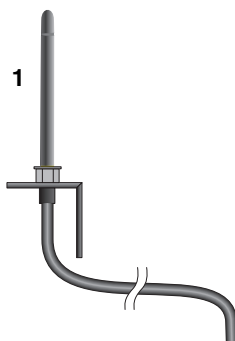


Figure A-1 Omnidirectional antenna, 2 dBi

Item	Product	Description	Connection	Order No.
1	RAD-ISM-2400-ANT-OMNI-2-1	Omnidirectional antenna, 2.4 GHz, 2 dBi gain, 1.5 m cable length, linear vertical polarization, h/v 360°/75° opening angle, IP65 protection	MCX (male)	2867461

**Omnidirectional antenna with protection against vandalism, 2.5 dBi**

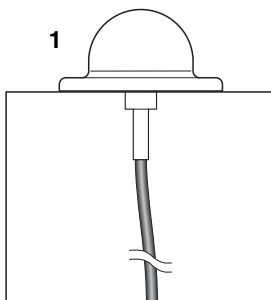


Figure A-2 Omnidirectional antenna with protection against vandalism, 2.5 dBi

Item	Product	Description	Connection	Order No.
1	RAD-ISM-2400-ANT-VAN-3-1-MCX	Omnidirectional antenna with protection against vandalism, 2.4 GHz, 3 dBi gain, IP55 protection, 1.5 m cable length, h/v 360°/85° opening angle.  Appropriate mounting material is available for wall mounting.	MCX (male)	2885702

**Omnidirectional antenna, 6 dBi, without surge protection**

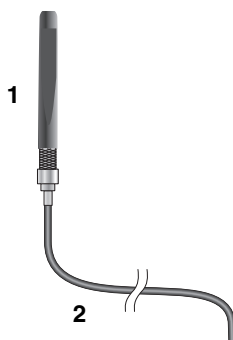


Figure A-3 Omnidirectional antenna, 6 dBi, without surge protection

Item	Product	Description	Connection	Order No.
1	RAD-ISM-2400-ANT-OMNI-6-0	Omnidirectional antenna, 2.4 GHz, 6 dBi gain, linear vertical polarization, h/v 360°/30° opening angle, IP55 protection	N (female)	2885919
	<b>Alternative:</b> RAD-2400-ANT-OMNI-6-0-SW	Omnidirectional antenna, 2.4 GHz, 6 dBi gain, linear vertical polarization, h/v 360°/20° opening angle, IP65 protection, salt water resistant	N (female)	2903219
2	RAD-PIG-EF316-MCX-N	Antenna cable, 0.5 m length, insertion loss: 0.95 dB at 2.4 GHz	MCX (male) → N (male)	2867681

## Typical combinations of antennas and adapter cables

### Omnidirectional antenna, 6 dBi, with outdoor surge protection

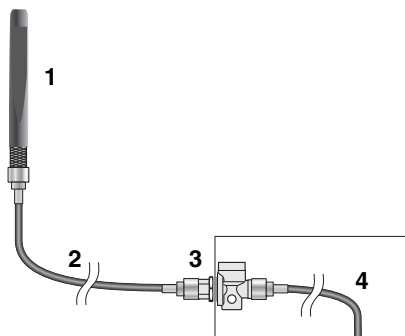


Figure A-4 Omnidirectional antenna, 6 dBi, with outdoor surge protection

Items 2 and 3 are optional.

Item	Product	Description	Connection	Order No.
1	RAD-ISM-2400-ANT-OMNI-6-0	Omnidirectional antenna, 2.4 GHz, 6 dBi gain, linear vertical polarization, h/v 360°/30° opening angle, IP55 protection	N (female)	2885919
	<b>Alternative:</b> RAD-2400-ANT-OMNI-6-0-SW	Omnidirectional antenna, 2.4 GHz, 6 dBi gain, linear vertical polarization, h/v 360°/20° opening angle, IP65 protection, salt water resistant	N (female)	2903219
2 (opt.)	RAD-CAB-EF393- 3M	Antenna cable, 3 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867649
	<b>Alternative:</b> RAD-CAB-EF393- 5M	Antenna cable, 5 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867652
	RAD-CAB-EF393-10M	Antenna cable, 10 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867665
	RAD-CAB-EF393-15M	Antenna extension cable, 15 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2885634
3 (opt.)	CN-LAMBDA/4-5.9-BB	Attachment plug with Lambda/4 technology as surge protection for coaxial signal interfaces	N (female) → N (female)	2838490
4	RAD-PIG-EF316-MCX-N	Antenna cable, 0.5 m length, insertion loss: 0.95 dB at 2.4 GHz	MCX (male) → N (male)	2867681

## Panel antenna, 9 dBi, with outdoor surge protection

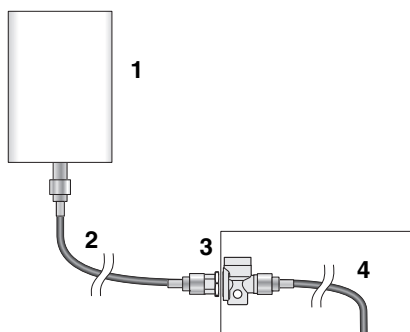


Figure A-5 Panel antenna, 9 dBi, with outdoor surge protection

Items 2 and 3 are optional.

Item	Product	Description	Connection	Order No.
1	ANT-DIR-2459-01	Panel antenna, 2.4/5 GHz, 9 dBi gain, linear vertical polarization, h/v 75°/55° opening angle at 2.4 GHz, IP67 protection	N (female)	2701186
2 (opt.)	RAD-CAB-EF393- 3M	Antenna cable, 3 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867649
	<b>Alternative:</b> RAD-CAB-EF393- 5M	Antenna cable, 5 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867652
	RAD-CAB-EF393-10M	Antenna cable, 10 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2867665
	RAD-CAB-EF393-15M	Antenna cable, 15 m length, insertion loss: approx. 0.45 dB/m at 2.4 GHz	N (male) → N (male)	2885634
3 (opt.)	CN-LAMBDA/4-5.9-BB	Attachment plug with LAMBDA/4 technology as surge protection for coaxial signal interfaces	N (female) → N (female)	2838490
4	RAD-PIG-EF316-MCX-N	Antenna cable, 0.5 m length, insertion loss: 0.95 dB at 2.4 GHz	MCX (male) → N (male)	2867681

## A 2 Configuring a PROFIBUS connection

In order to configure a point-to-point connection or point-to-multipoint network for PROFIBUS transmission, proceed as follows:

- Download the latest PSI-CONF software from the Internet at [phoenixcontact.net/products](http://phoenixcontact.net/products).
- Install the software on your computer.
- Prior to configuration, set the CONF/RUN slide switch to the CONF position (see “Setting configuration mode” on page 21).



For configuration, the following is required:

- Serial programming cable PSM-KA9SUB9/BB/2METER, Order No. 2799474
- USB cable PSI-CA-USB A/MINI B/1METER, Order No. 2313575

### A 2.1 Configuring a point-to-point connection

- Start the PSI-CONF software.



Figure A-6 PSI-CONF software

## PSI-WL-RS232-RS485/BT/...

- In the “Wireless” folder, select the device.

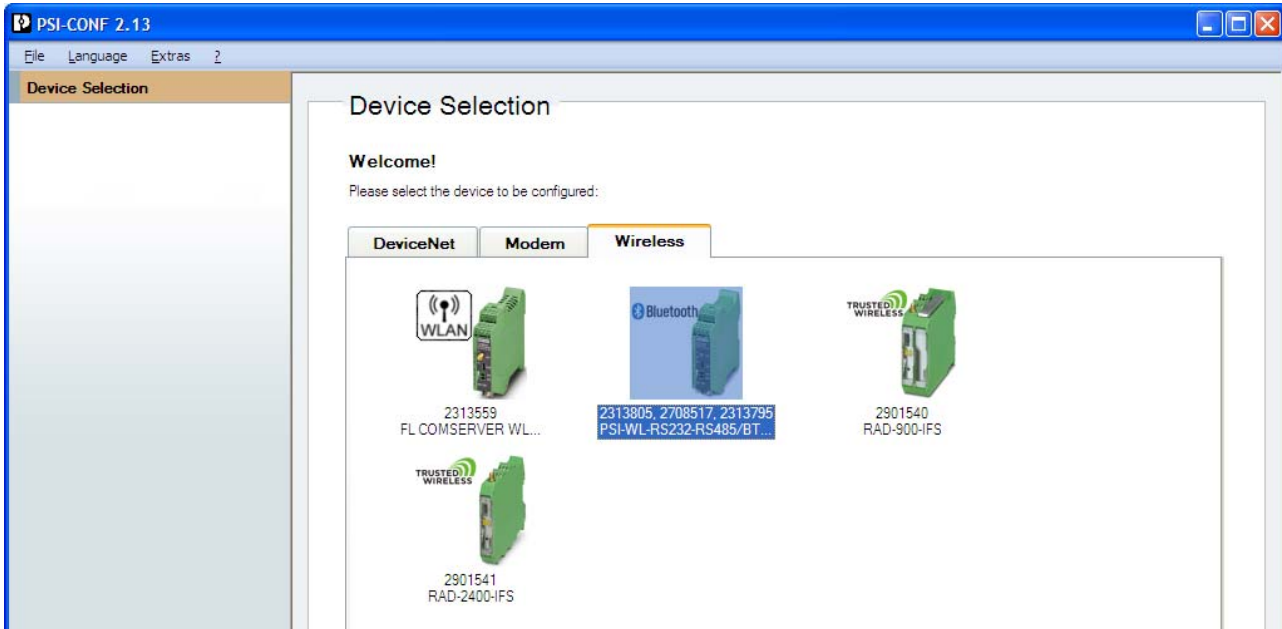


Figure A-7 PSI-CONF software: Device selection

- Select “Configuration Mode, Local configuration”.

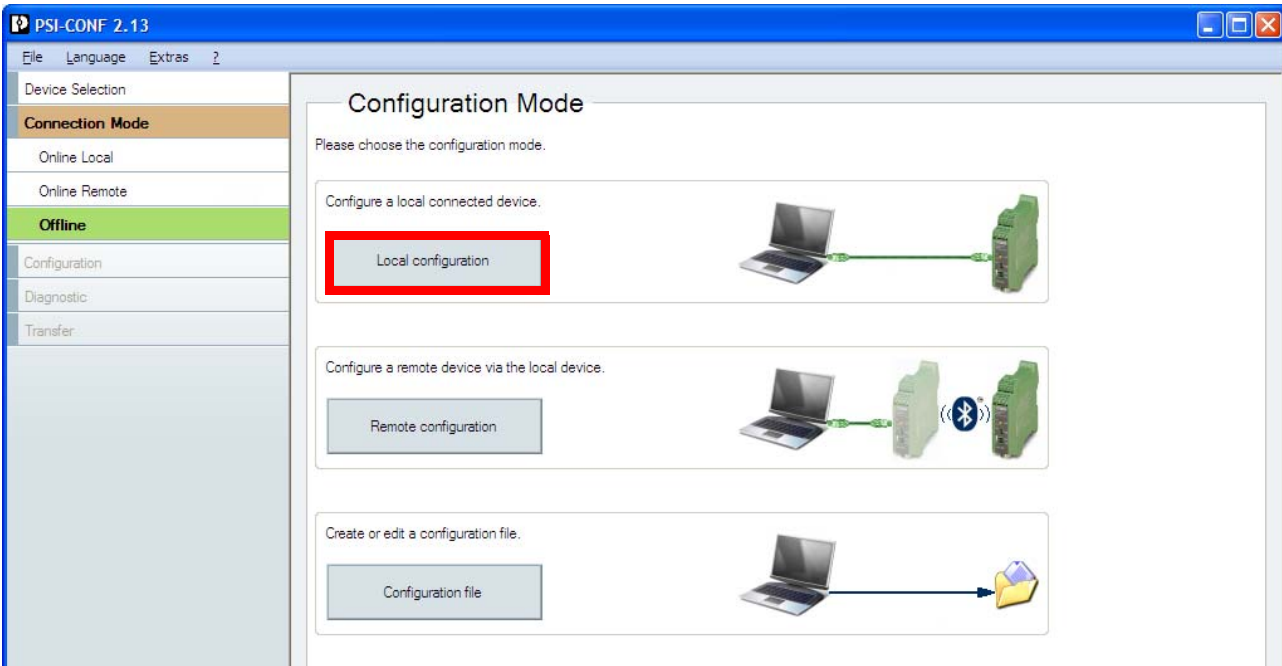


Figure A-8 PSI-CONF software: Local configuration

## Configuring a PROFIBUS connection

- Follow the installation instructions and confirm with “Next”.
- Select the “With PSI-WL.../BT/...” option in the Point to Point Wizard.

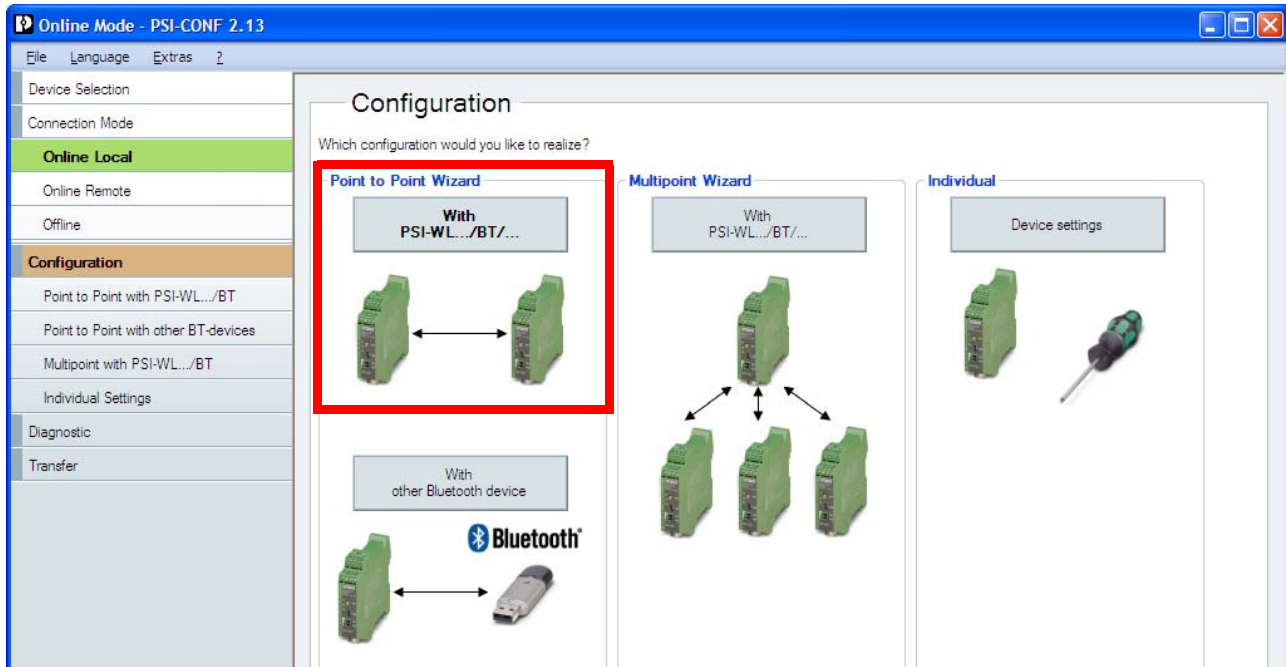


Figure A-9 PSI-CONF software: Configuration

## PSI-WL-RS232-RS485/BT/...

- Enter a name and a password.
- Select the “PROFIBUS” connection profile and set a baud rate of “187500”.
- Confirm with “Next”.

The set parameters are now transmitted to the device.

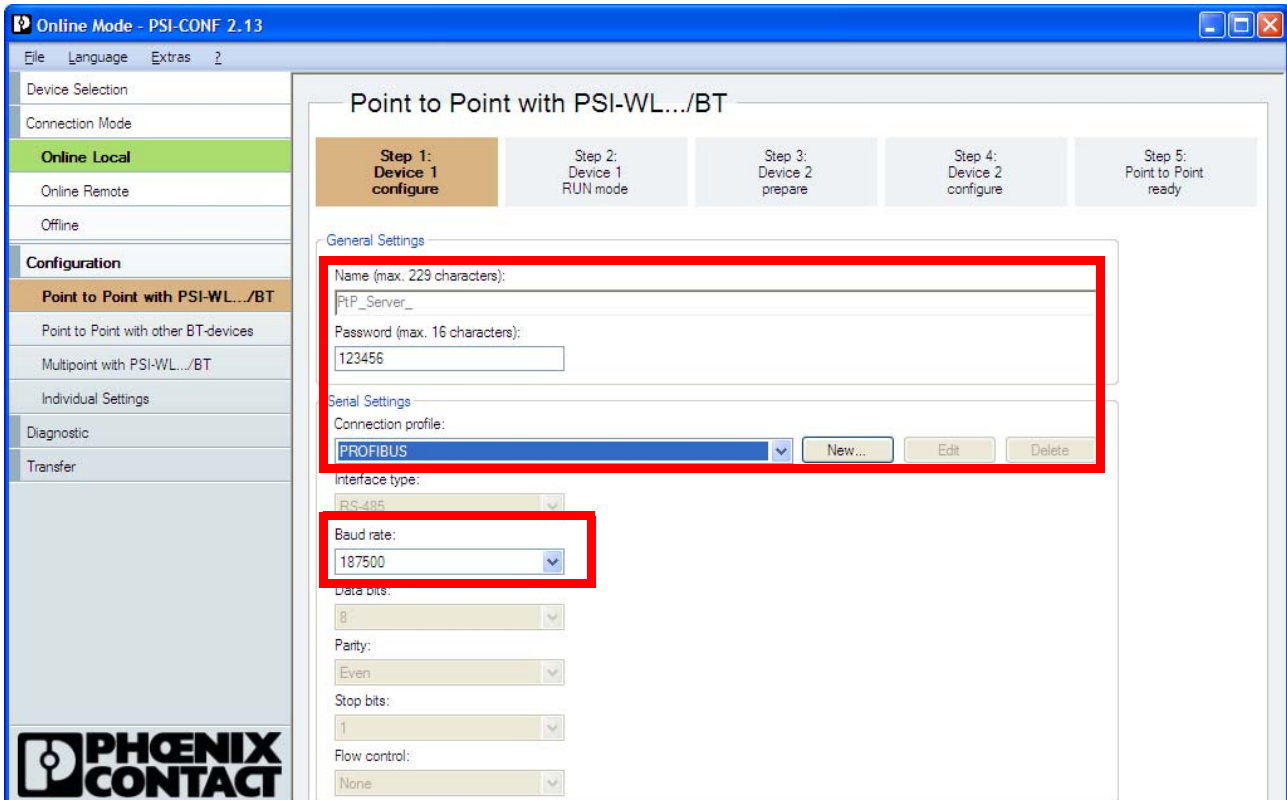


Figure A-10 PSI-CONF software: Point-to-point with PSI-WL.../BT, step 1

## Configuring a PROFIBUS connection

- Follow the software wizard with “Step 2” and “Step 3”.
- In “Step 4”, enter a name and confirm with “Next”.

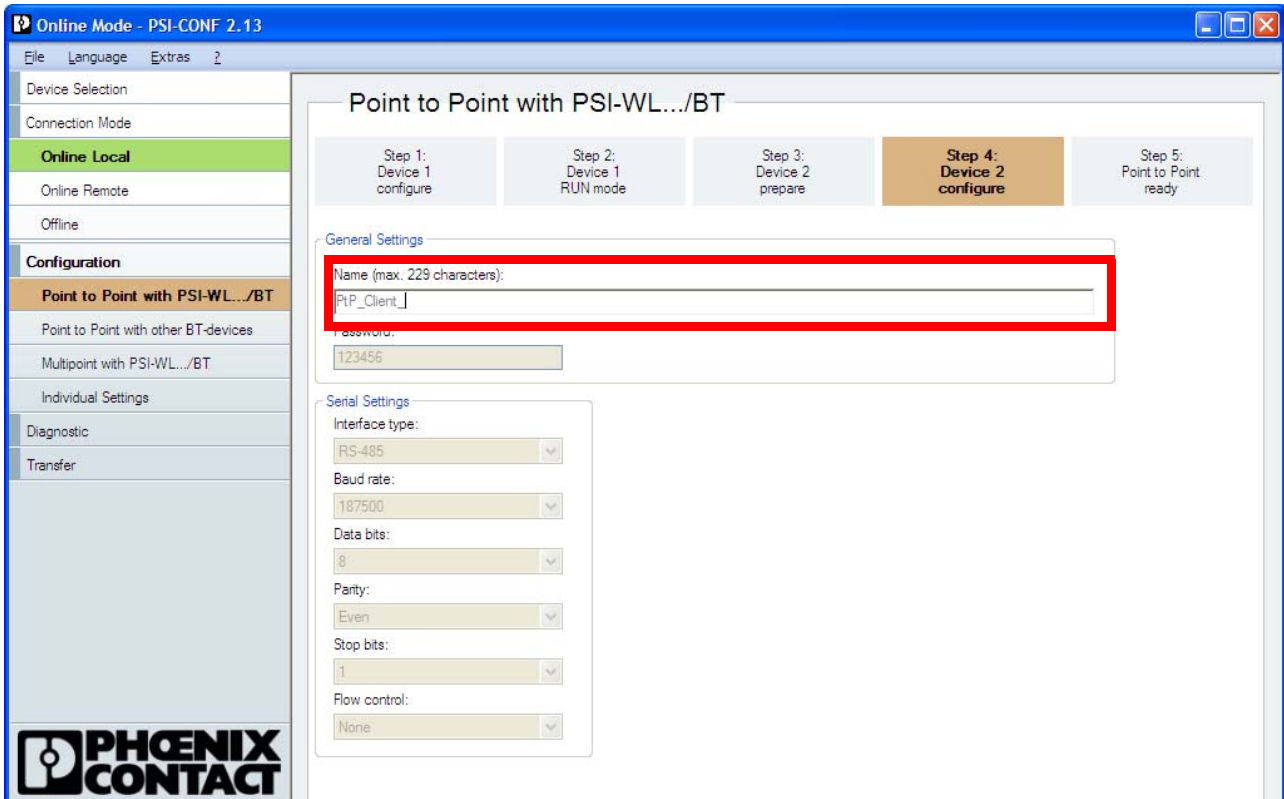


Figure A-11 PSI-CONF software: Point-to-point with PSI-WL.../BT, step 4

## PSI-WL-RS232-RS485/BT/...

- Configuration is now complete. Confirm with “Finish”.
- Exit the software via “File, Exit” and follow the instructions.

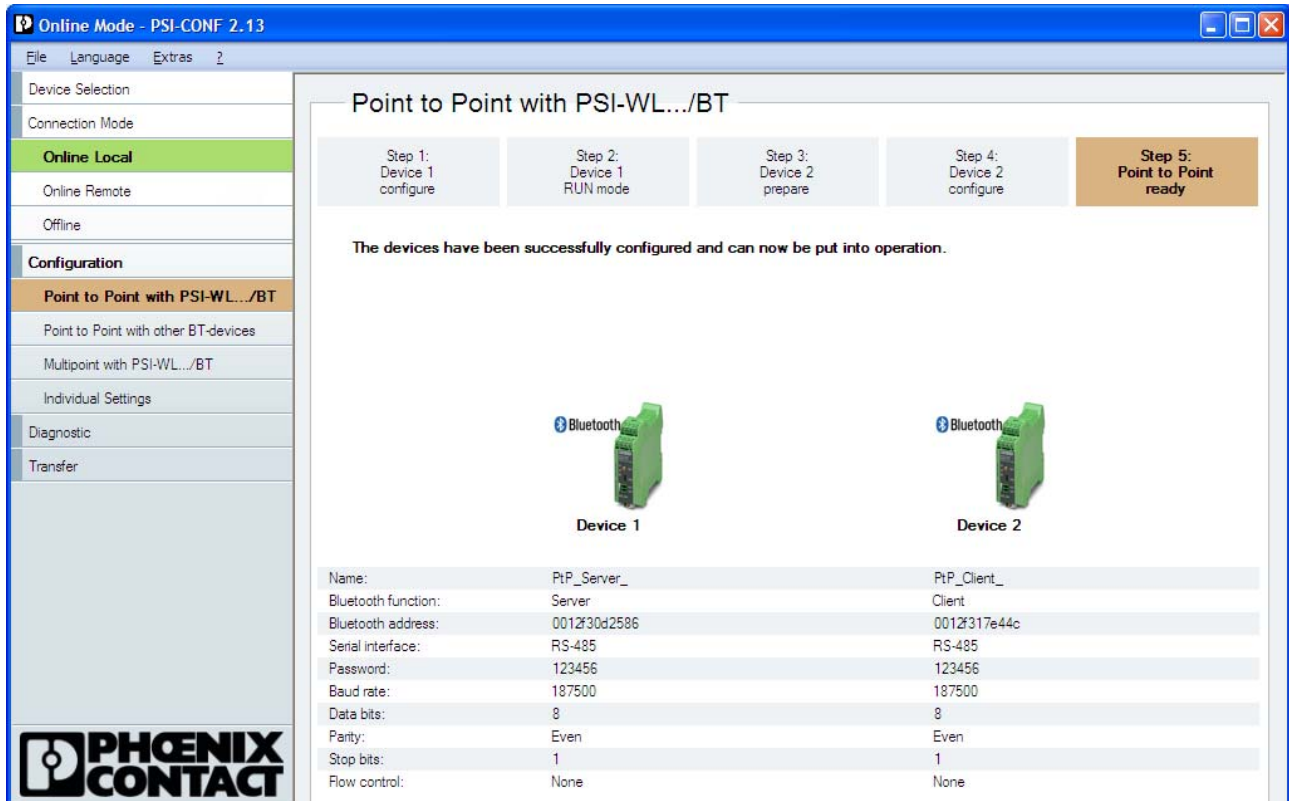


Figure A-12 PSI-CONF software: Point-to-point with PSI-WL.../BT, step 5

## A 2.2 Configuring a point-to-multipoint network (star)

- Start the PSI-CONF software.



Figure A-13 PSI-CONF software

- In the "Wireless" folder, select the device.

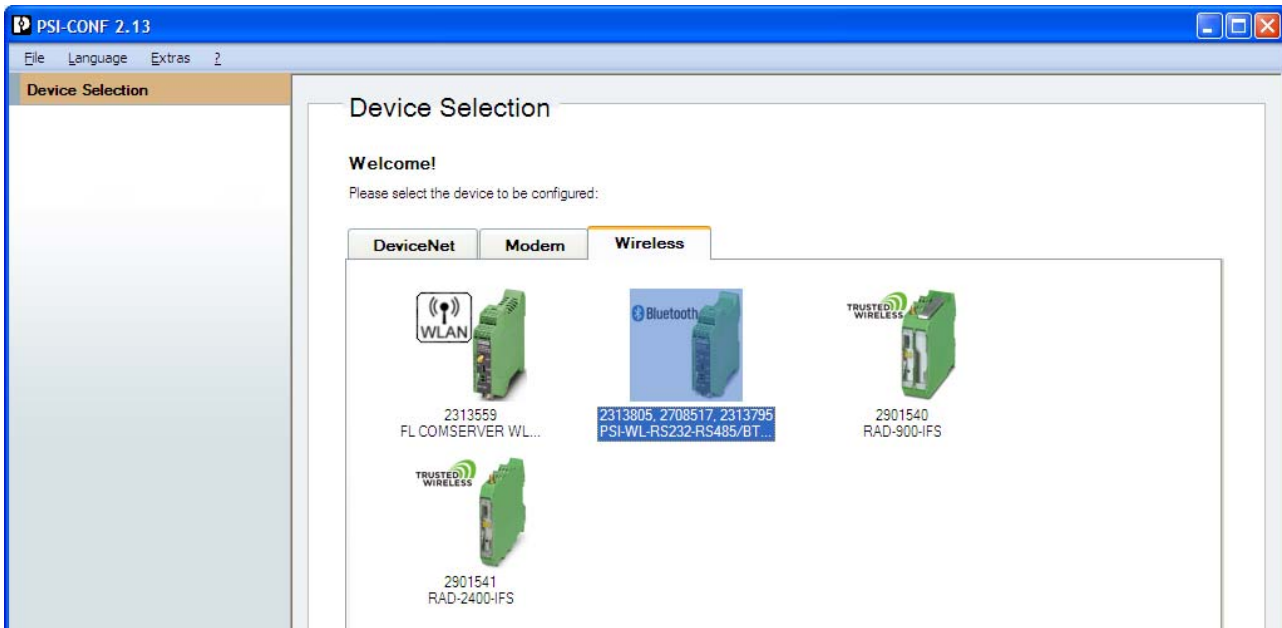


Figure A-14 PSI-CONF software: Device selection

## PSI-WL-RS232-RS485/BT/...

- Select “Configuration Mode, Local configuration”.

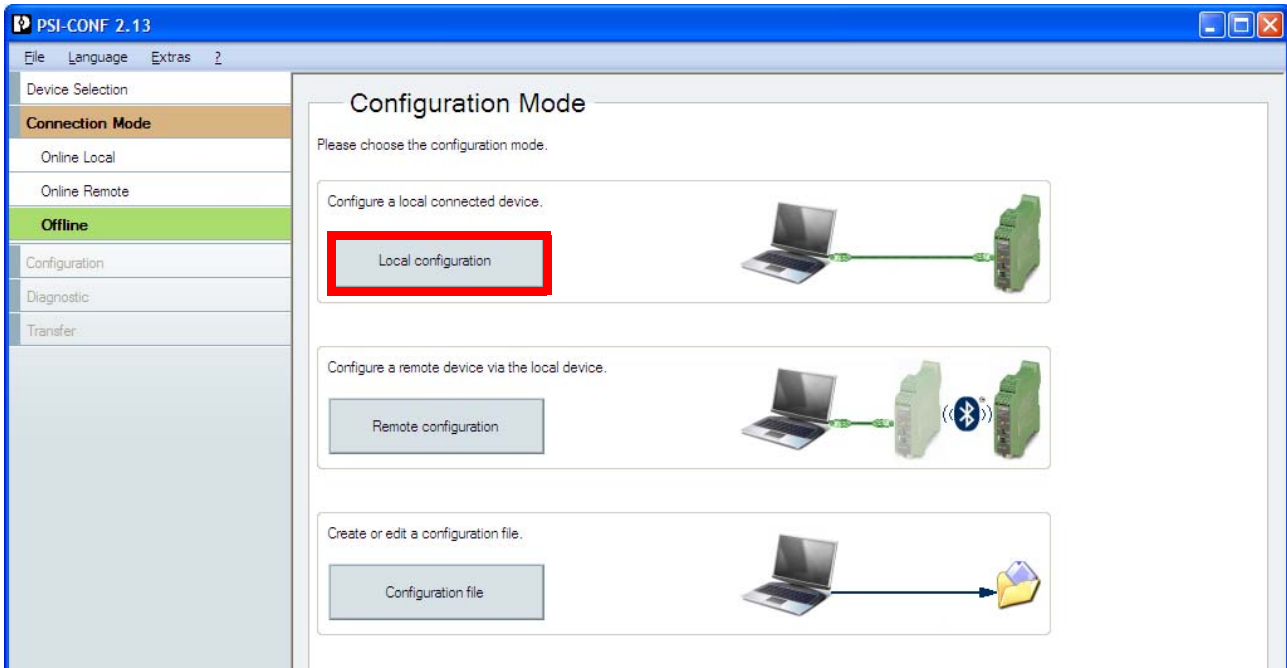


Figure A-15 PSI-CONF software: Local configuration

**Configuring a PROFIBUS connection**

- Follow the installation instructions and confirm with “Next”.
- Select the “With PSI/WL.../BT/...” option in the Multipoint Wizard.

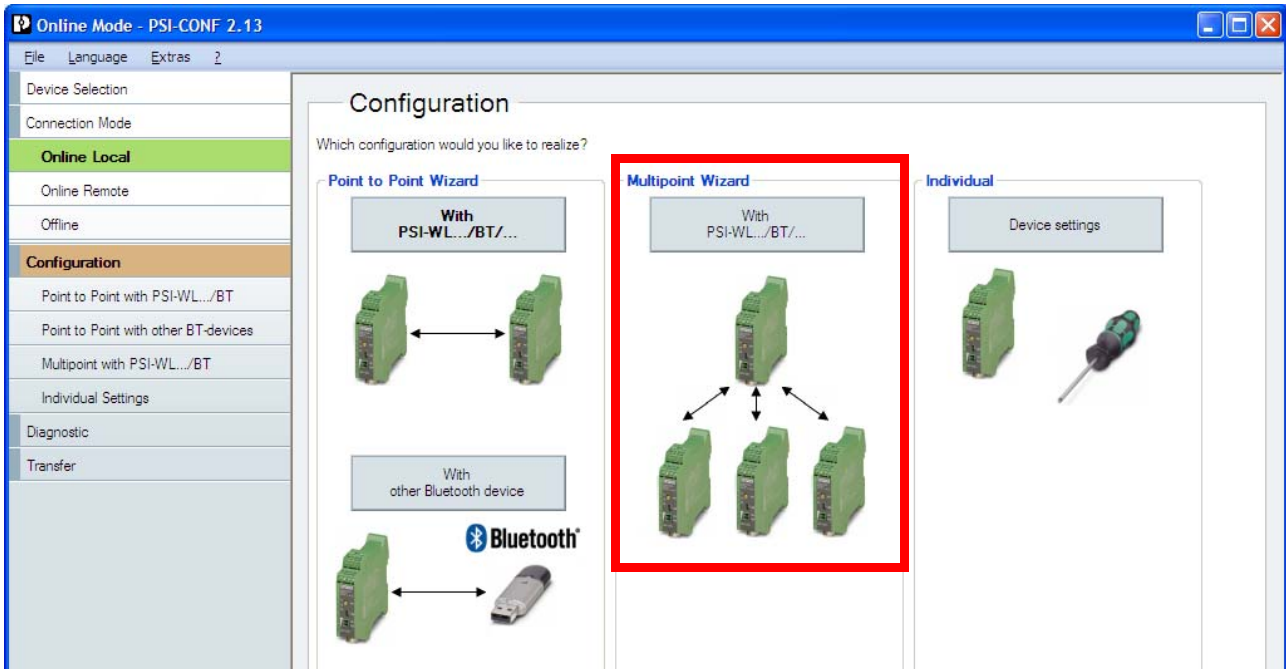


Figure A-16 PSI-CONF software: Configuration



Selecting the “Multipoint” network type increases the delay time. The delay time depends on the number of slaves in the network.

- Enter the number of slaves and select the master role (see page 18).

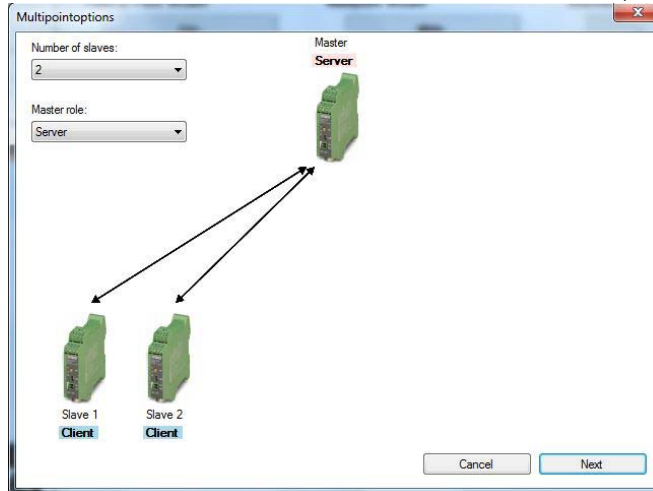


Figure A-17 Multipoint options

## PSI-WL-RS232-RS485/BT/...

- Configure the following in step 1:
  - Name
  - Password
  - Connection profile: PROFIBUS
  - Baud rate: 93750



The baud rate depends on the number of slaves in the network. The more devices in the network the lower the baud rate must be set (see “Theoretical delay times - PROFIBUS via Bluetooth converter” on page 91).

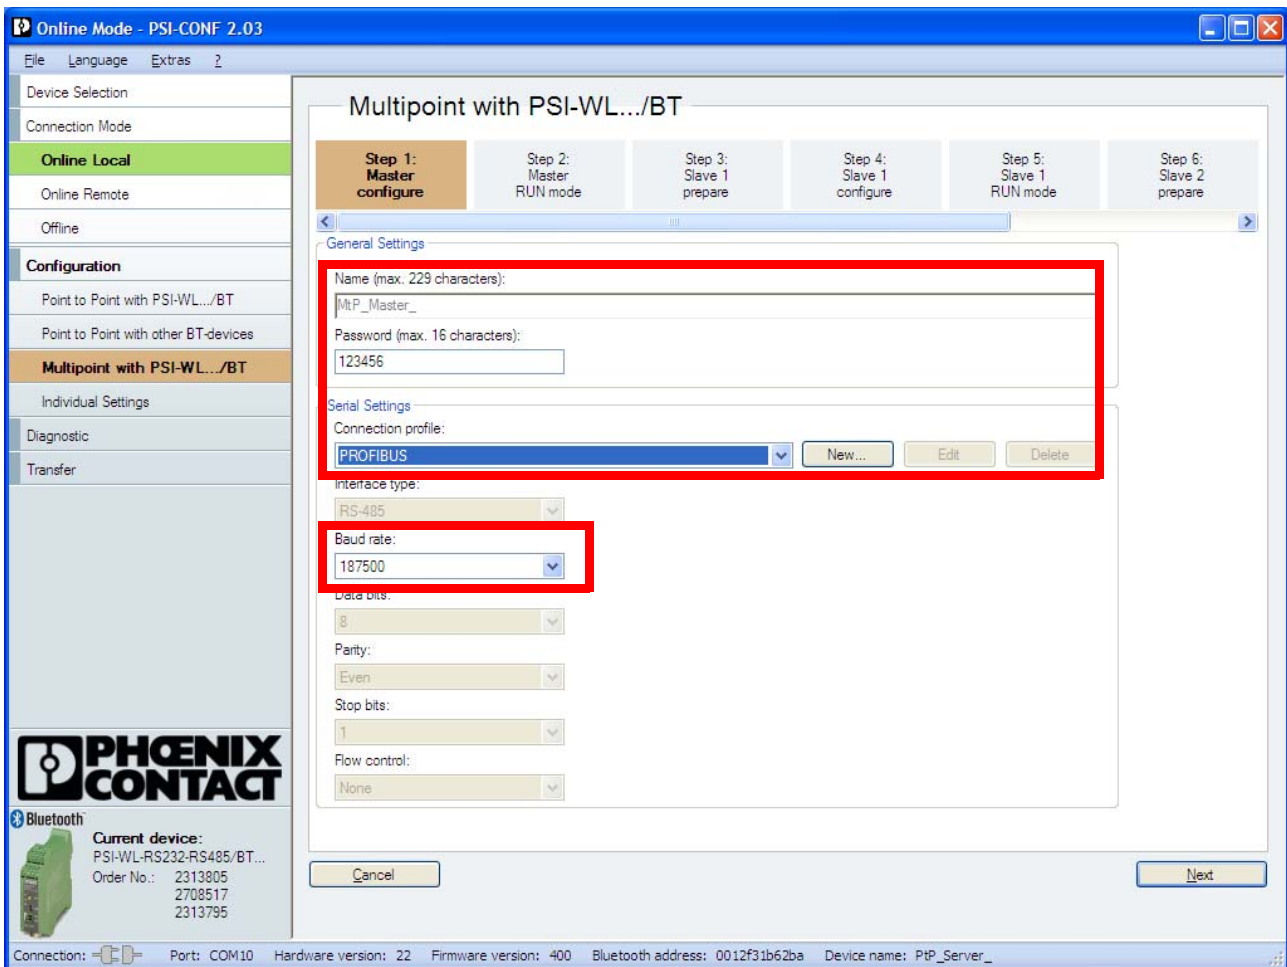


Figure A-18 PSI-CONF software: Multipoint with PSI-WL.../BT, step 1

The set parameters are now transmitted to the device.

- Follow the software wizard from “Step 2” to “Step 7”.

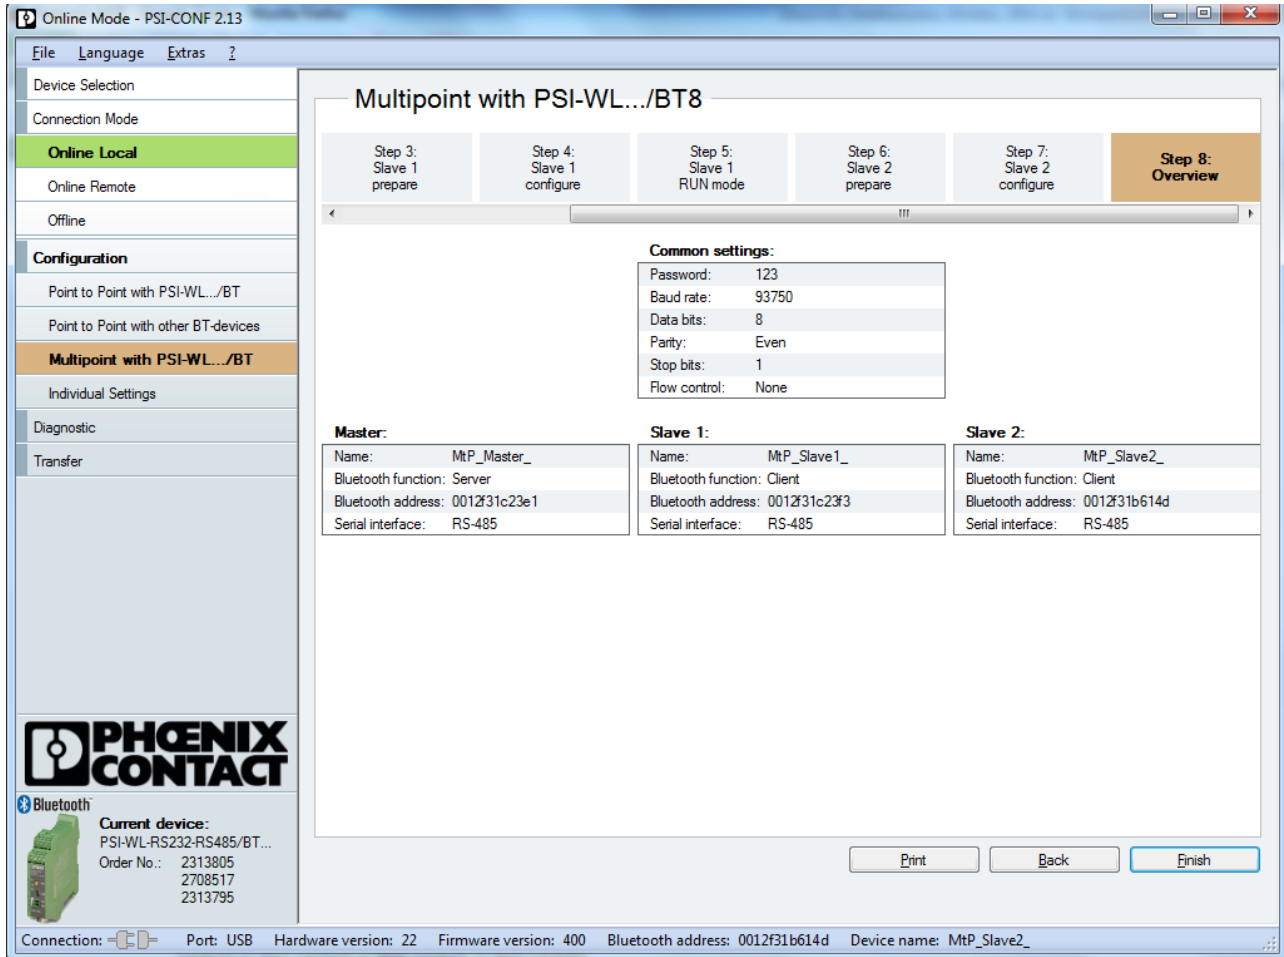


Figure A-19 PSI-CONF software: Multipoint with PSI-WL.../BT, step 8

- Configuration is now complete. Confirm with “Finish”.
- Exit the software via “File, Exit” and follow the instructions.

### A 2.3 Connecting the PROFIBUS cable

- Connect the PROFIBUS cable to both Bluetooth converters:
  - Negative data wire (green) to terminal D(A)
  - Positive data wire (red) to terminal D(B)
- Activate bus termination if the Bluetooth converter is located at the start or the end of the electrical PROFIBUS segment. Set the slide switch to the “ON” position (see “Activating the termination network” on page 20).

## A 2.4 Configuring the PROFIBUS master

- Adjust the timing in the PROFIBUS master to the signal runtime via the wireless path.

This setting is shown here using the SIMATIC® Manager, Version 5.x, as an example.



The Bluetooth converter does **not** support the process control system SIMATIC® PCS 7 and the controllers PCS 7.

The Bluetooth converters do not modify the PROFIBUS telegram (transparent transmission, “Tunneling”). They only modify the PROFIBUS cycle time. In the case of an optimum wireless connection, the Bluetooth converters will cause a delay time of approximately 50 ms, unidirectionally approximately 25 ms.

If the Bluetooth converter is connected in series with other components that also cause a delay time, the delay times must be added together. Remember to take into account long cables, repeaters, fiber optics, other wireless components, etc.

The additional delay time may be increased in the event of a poor wireless connection, or the connection may be terminated completely. In the case of a poor connection, the Bluetooth converter will not discard PROFIBUS telegrams but try to repeatedly transmit them.

- For the wireless connection, consider the following PROFIBUS situations:
  - **In the PROFIBUS master - minimum delay time of 50 ms**  
Tslot\_Init parameter (maximum wait time for receipt)
  - **In the PROFIBUS master - short interruption of the wireless connection**  
Retry-Limit parameter (maximum number of connection retries)
  - **In the PROFIBUS slave - permanent interruption of the wireless connection**  
Response monitoring time (watchdog) parameter
- You have two options for setting the Tslot\_Init parameter (maximum wait time for receipt):
  - **Automatically** - Enter the number of repeaters and the cable length under “Options, Cables”.
  - **Manually** - Directly enter the bus parameters under “User-defined, Bus Parameters”. In this case, deactivate the automatic calculation, otherwise the sum of automatic and manual entry will be used.

We recommend that you use manual entry:

- Entry: Tslot\_Init > 13000 t\_bit
- Entry: Retry limit > 3
- Recalculate
- Entry: Response monitoring time, depending on the application

Under certain circumstances, it may be required that the Tslot\_Init value is greater than 13000 t\_bit. This may occur, for example, if there is a poor wireless connection or if the components are connected in series. The value of 50 ms will increase by factor x.

## Configuring a PROFIBUS connection

The Tslot\_Init parameter is expressed in  $t_{bit}$ . The maximum value for a Siemens S7 PLC is 16383  $t_{bit}$  (S5: 9999  $t_{bit}$ ). The maximum wait time for receipt is therefore 187.5 kBit/s = 87 ms. In this case, value 13000  $t_{bit}$  corresponds to a value of 69 ms (minimum delay time of the Bluetooth converter + reserve).

- Start the SIMATIC® Manager and open your user project. Select “Options, Configure Network” from the pull-down menu.

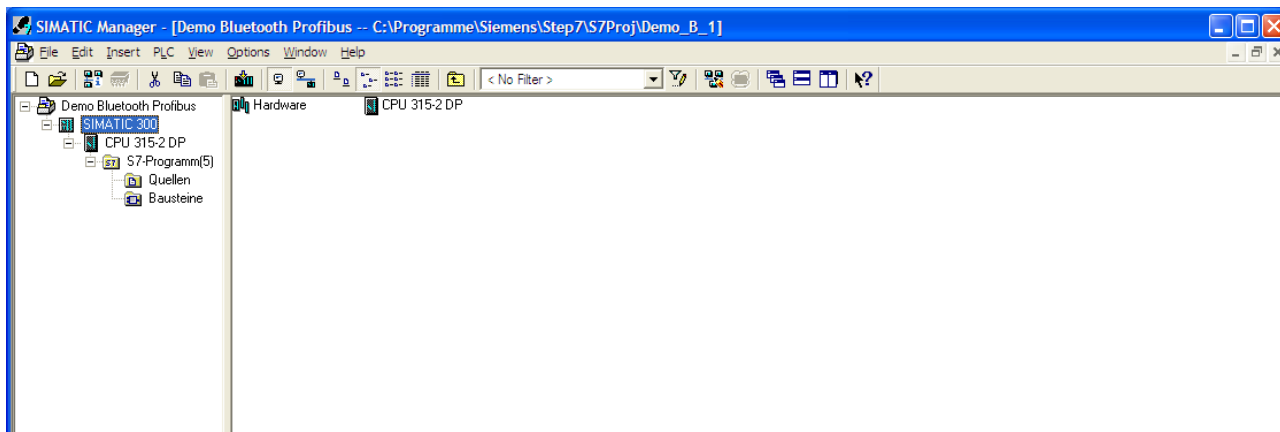


Figure A-20 SIMATIC® Manager

- In the “NetPro” window, right-click the PROFIBUS line. In the context menu, open “Object Properties”.

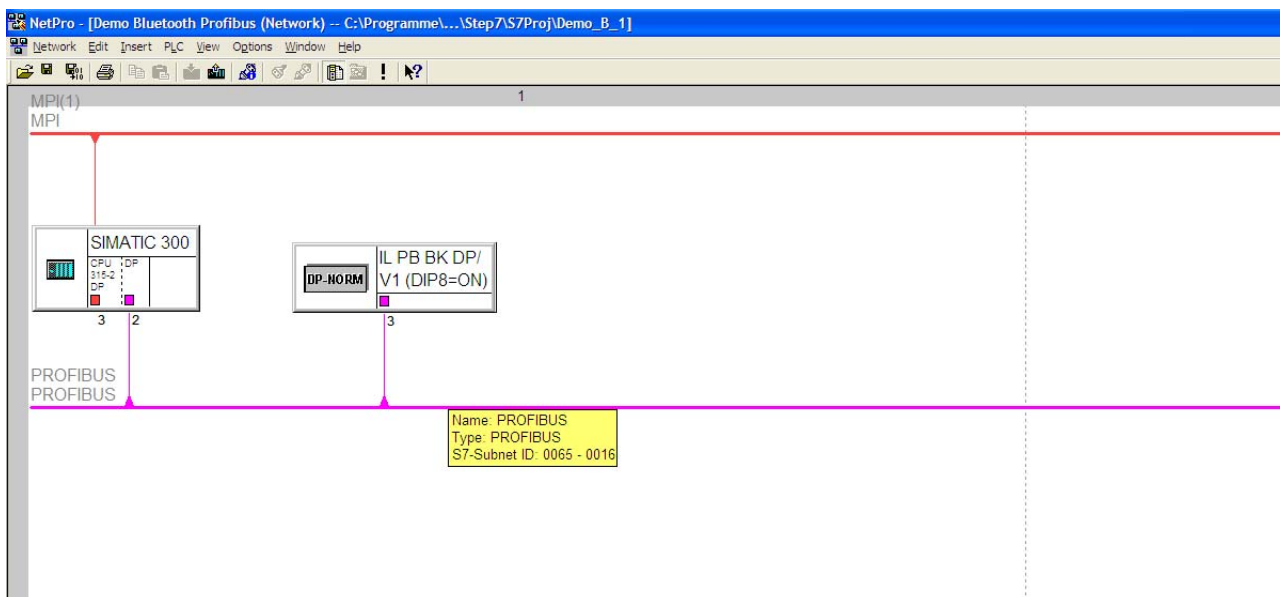


Figure A-21 “NetPro” window

## PSI-WL-RS232-RS485/BT/...

- In the “Network Settings” tab, select a transmission speed of 187.5 kbps.
- Click on “Options”.

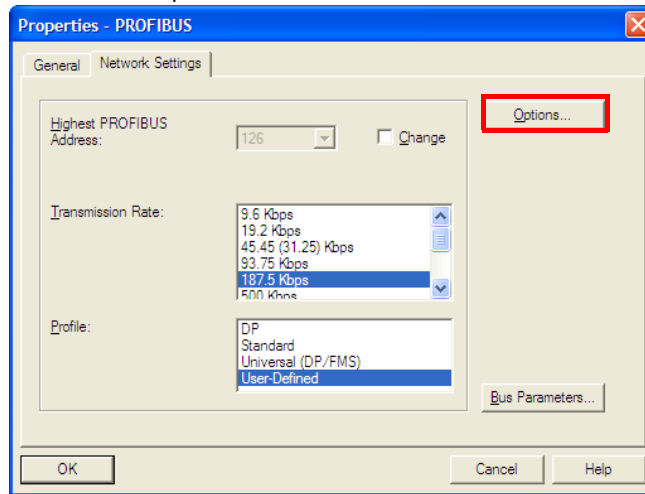


Figure A-22 “Network Settings” tab, transmission speed

- In the “Cables” tab, deactivate the “Take into account the following cable configuration” checkbox. Confirm with “OK”.

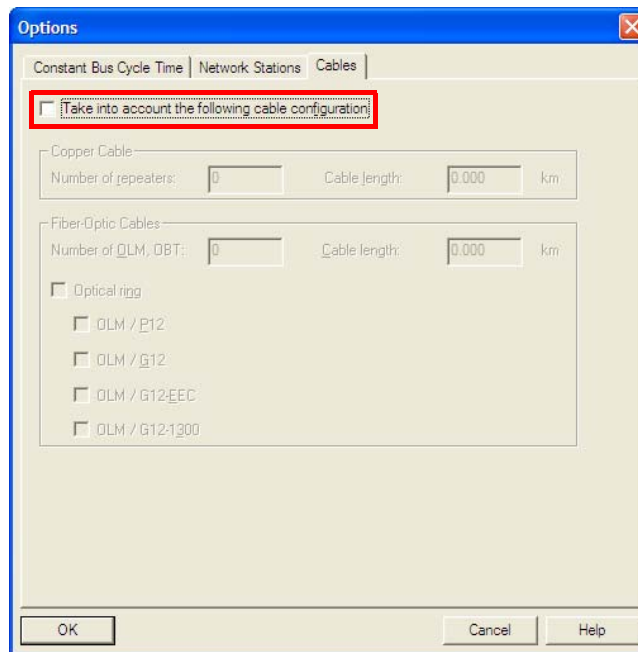


Figure A-23 “Cables” tab

## Configuring a PROFIBUS connection

- In the “Network Settings” tab, select the “User-Defined” profile and the “Bus Parameters” option.

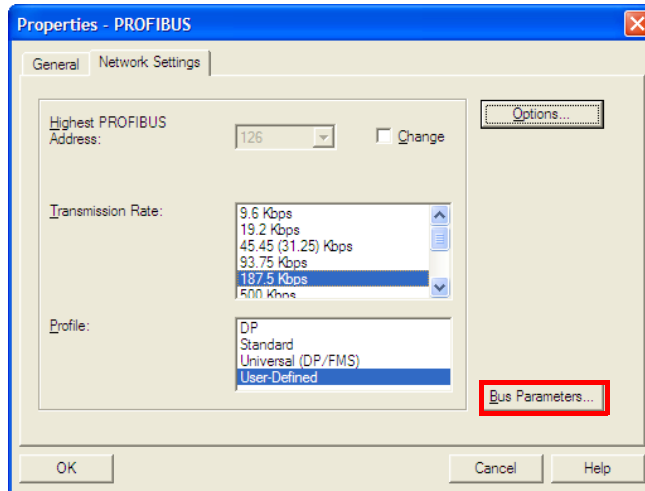


Figure A-24 “Network Settings” tab, profile

- In the “Bus Parameters” tab, the most recently valid bus parameters are shown. Enter the following values:



The value for the Tslot time and the telegram runtime of PROFIBUS depend on your application. Start with 13000 t\_bit in order to achieve the smallest possible telegram runtime. Increase the value if bus errors occur.

Tslot_Init	13000 t_bit ... 16383 t_bit
Max. Tsdr	60
Min. Tsdr	11
Tset	1
Tqui	0
Gap Factor	10
Retry limit	5

- Confirm the entry with “Recalculate”.

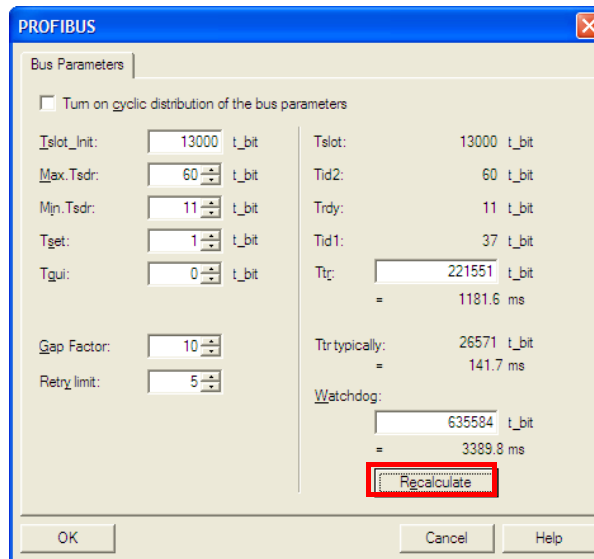


Figure A-25 “Bus Parameters” tab

- Calculating the bus parameters also modifies the response monitoring (watchdog) value. Enter 187500 t\_bit here to achieve a response monitoring (watchdog) time of 1 second for the PROFIBUS slave. Confirm with “OK”.

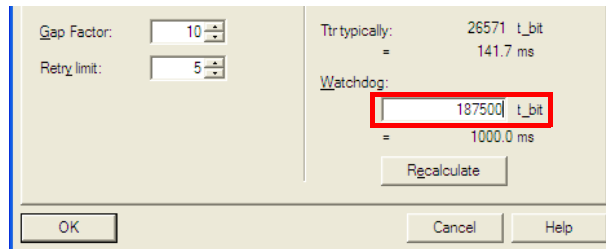


Figure A-26 “Bus Parameters” tab, response monitoring

- Go back to the “NetPro” view. Save and compile the changes.
- Transfer all settings to the PROFIBUS master.
- Test whether the PROFIBUS devices are available via the wireless path.

### Evaluating PROFIBUS errors

If the wireless connection is interrupted for a longer period, a PROFIBUS error is triggered. This may stop the CPU or the PLC. If you set up the **OB86** in STEP7 and program the handling of PROFIBUS errors in it, you can bypass the stop state. In addition, the errors can be evaluated in this way.

## Configuring a PROFIBUS connection

- Green fields = data rate possible
- Red fields = data rate not possible

Table A-1 Theoretical delay times - PROFIBUS via Bluetooth converter

Bluetooth		PROFIBUS			
	Bidirectional delay [s]	Data rate [bit/s]	Bit time [s] (=1/data rate)	Min. Tbit in relation to the Bluetooth delay [Tbit] (delay/bit time)	Max. Tbit <sup>1</sup> x bit time [s]
PtP	0.05	9600	0.000104167	480	1.706562500
		19200	0.000052083	960	0.853281250
		93750	0.000010667	4688	0.174752000
		187500	0.000005333	9375	0.087376000
		500000	0.000002000	25000	0.032766000
		1500000	0.000000667	75000	0.010922000
MIP 2 slaves	0.1	9600	0.000104167	960	1.706562500
		19200	0.000052083	1920	0.853281250
		93750	0.000010667	9375	0.174752000
		187500	0.000005333	18750	0.087376000
		500000	0.000002000	50000	0.032766000
MIP 3 slaves	0.15	9600	0.000104167	1440	1.706562500
		19200	0.000052083	2880	0.853281250
		93750	0.000010667	14063	0.174752000
		187500	0.000005333	28125	0.087376000
		500000	0.000002000	75000	0.032766000
MIP 4 slaves	0.2	9600	0.000104167	1920	1.706562500
		19200	0.000052083	3840	0.853281250
		93750	0.000010667	18750	0.174752000
		187500	0.000005333	37500	0.087376000
		500000	0.000002000	100000	0.032766000
MIP 5 slaves	0.25	9600	0.000104167	2400	1.706562500
		19200	0.000052083	4800	0.853281250
		93750	0.000010667	23438	0.174752000
		187500	0.000005333	46875	0.087376000
		500000	0.000002000	125000	0.032766000
MIP 6 slaves	0.3	9600	0.000104167	2880	1.706562500
		19200	0.000052083	5760	0.853281250
		93750	0.000010667	28125	0.174752000
		187500	0.000005333	56250	0.087376000
		500000	0.000002000	150000	0.032766000
MIP 7 slaves	0.35	9600	0.000104167	3360	1.706562500
		19200	0.000052083	6720	0.853281250
		93750	0.000010667	32813	0.174752000
		187500	0.000005333	65625	0.087376000
		500000	0.000002000	175000	0.032766000

<sup>1</sup> Max Tbit according to Simatic<sup>®</sup> Manager = 16383

**PSI-WL-RS232-RS485/BT/...**

---

## B Appendixes

### B 1 List of figures

Figure 3-1:	Dimensions [mm] .....	16
Figure 3-2:	Block diagram .....	16
Figure 3-3:	Structure .....	17
Figure 3-4:	Point-to-point connection, point-to-multipoint network (star) .....	18
Figure 4-1:	Opening the housing .....	19
Figure 4-2:	Slide switch for termination network .....	20
Figure 4-3:	CONF/RUN slide switch .....	21
Figure 4-4:	Reset button .....	22
Figure 5-1:	Mounting on a DIN rail .....	23
Figure 5-2:	Removal .....	24
Figure 5-3:	Power supply .....	25
Figure 5-4:	RS-232 interface .....	26
Figure 5-5:	RS-422 interface .....	27
Figure 5-6:	RS-485 interface .....	27
Figure 5-7:	Diagnostics indicators during normal operation .....	28
Figure 7-1:	Antenna polarization .....	34
Figure 7-2:	Dispersion on a rough surface .....	37
Figure 7-3:	Diffraction on an edge .....	38
Figure 7-4:	Reflection on a metal surface .....	38
Figure 7-5:	Reduction of radio waves when penetrating a wall .....	39
Figure 7-6:	Angle of the transmitter and receiver .....	40
Figure 7-7:	Radio dead spot .....	40
Figure 7-8:	Wireless path with strong wind .....	41
Figure 7-9:	Fresnel zone .....	42
Figure 7-10:	Free space path loss .....	43
Figure 7-11:	Bush with an attenuation of approximately 15 dB .....	45
Figure 7-12:	Forest with an attenuation of around 40 dB .....	45
Figure 8-1:	Loopback test on an RS-232 interface .....	47
Figure 8-2:	Settings in HyperTerminal .....	48
Figure A-1:	Omnidirectional antenna, 2 dBi .....	71
Figure A-2:	Omnidirectional antenna with protection against vandalism, 2.5 dBi ..	72
Figure A-3:	Omnidirectional antenna, 6 dBi, without surge protection .....	72
Figure A-4:	Omnidirectional antenna, 6 dBi, with outdoor surge protection .....	73

**PSI-WL-RS232-RS485/BT/...**

---

Figure A-5:	Panel antenna, 9 dBi, with outdoor surge protection .....	74
Figure A-6:	PSI-CONF software .....	75
Figure A-7:	PSI-CONF software: Device selection .....	76
Figure A-8:	PSI-CONF software: Local configuration .....	76
Figure A-9:	PSI-CONF software: Configuration .....	77
Figure A-10:	PSI-CONF software: Point-to-point with PSI-WL.../BT, step 1 .....	78
Figure A-11:	PSI-CONF software: Point-to-point with PSI-WL.../BT, step 4 .....	79
Figure A-12:	PSI-CONF software: Point-to-point with PSI-WL.../BT, step 5 .....	80
Figure A-13:	PSI-CONF software .....	81
Figure A-14:	PSI-CONF software: Device selection .....	81
Figure A-15:	PSI-CONF software: Local configuration .....	82
Figure A-16:	PSI-CONF software: Configuration .....	83
Figure A-17:	Multipoint options .....	83
Figure A-18:	PSI-CONF software: Multipoint with PSI-WL.../BT, step 1 .....	84
Figure A-19:	PSI-CONF software: Multipoint with PSI-WL.../BT, step 8 .....	85
Figure A-20:	SIMATIC® Manager .....	87
Figure A-21:	“NetPro” window .....	87
Figure A-22:	“Network Settings” tab, transmission speed .....	88
Figure A-23:	“Cables” tab .....	88
Figure A-24:	“Network Settings” tab, profile .....	89
Figure A-25:	“Bus Parameters” tab .....	90
Figure A-26:	“Bus Parameters” tab, response monitoring .....	90

## B 2 List of tables

Table 4-1:	Slide switch for termination network .....	20
Table 4-2:	CONF/RUN slide switch .....	21
Table 5-1:	Bar graph.....	28
Table 6-1:	Without terminal device addressing (RS-232, RS-422, etc.).....	31
Table 6-2:	With termination device addressing (RS-485, 2-wire).....	32
Table 6-3:	Multi-drop connection .....	32
Table 7-1:	Antenna selection .....	34
Table 7-2:	Level.....	35
Table 7-3:	Attenuation of accessories.....	35
Table 7-4:	Antenna gain .....	36
Table 7-5:	Free space path loss .....	37
Table 7-6:	Attenuation of different materials .....	39
Table 7-7:	Radius of the Fresnel zone depending on the distance .....	42
Table A-1:	Theoretical delay times - PROFIBUS via Bluetooth converter .....	91

**PSI-WL-RS232-RS485/BT/...**

---

## B 3 Index

### A

Accessories .....	7, 71
Adapter cable.....	71
Antenna	
Alignment .....	35
Installation .....	34
Selection .....	34
Antenna cable .....	33
Antenna connection .....	28
AT command.....	49
Attenuation.....	35

### B

Bar graph .....	28
Block diagram .....	16
Bus termination	
See Termination resistor	

### C

Checking the location.....	33
Circuit diagram	
See Block diagram	
Client.....	18
Coaxial cable .....	33
Command mode .....	49
CONF/RUN slide switch.....	21
Configuration.....	30
Configuration mode.....	21
Connection assignment .....	26
Connection mode.....	53
Connections.....	17, 26
Crosstalk.....	18

### D

Data Communication Equipment (DCE).....	26
Data mode .....	61
Default setting .....	22
Delivery state	
See Resetting to the default settings	
Detection mode.....	52
Device search .....	55
Diffraction.....	38
Dimensions .....	16

Dispersion.....	37
-----------------	----

### E

EEPROM .....	49
EIRP (equivalent isotropically radiated power)	
See Equivalent isotropically radiated power	
Energy-saving mode .....	69
Equivalent isotropically radiated power.....	43
Escape string .....	49
Example calculation	
See System calculation	

### F

Free space path loss.....	37, 43
Fresnel zone .....	41
Function elements.....	17

### H

HazLoc approval.....	14
----------------------	----

### I

Information command .....	65
Interface command .....	66

### L

Level .....	35
Loopback test .....	47
ITroubleshooting	

### M

Master.....	18
Mounting.....	23
Multidrop connection .....	32
Multipath propagation .....	37

### O

Omnidirectional antenna .....	34
Opening the housing.....	19
Operating mode	
See Configuration mode	
Ordering data.....	7

**PSI-WL-RS232-RS485/BT/...****P**

Pairing .....	56
Pairing mode .....	53
Penetration .....	39
Pigtail .....	35
Planning of wireless systems .....	33
Point-to-multipoint network .....	18, 81
Point-to-point connection .....	18, 31, 75
Power supply	
See Supply voltage	
Practical test .....	33
Product description .....	15
PROFIBUS .....	75
PROFIBUS cable .....	85
PROFIBUS master .....	86
PROFIBUS network .....	31
Programming connection .....	31

**R**

Radiated power	
See Equivalent isotropically radiated power	
Radio dead spot .....	40
Radio waves .....	37
Rain .....	41
Range .....	43
Reflection .....	38
Removal .....	24
Reset button .....	22
Resetting to the default settings .....	22, 51
RS-232 interface .....	26
RS-422 interface .....	27
RS-485 interface .....	27

**S**

Safety notes .....	13
Security mode .....	54
Serial data mode .....	31
Serial interface .....	26
Server .....	18
Service profile .....	59
Shielding .....	26
Signal strength .....	28, 58
SIMATIC® Manager .....	87
Slave .....	18
Slide switch .....	20, 21

**Star**

See Point-to-multipoint network

Supply voltage .....	25
System calculation .....	43
System configuration .....	18

**T**

Technical data .....	7
Termination network	
See Termination resistor	
Termination resistor .....	20
Transmission power	
See Equivalent isotropically radiated power	
Troubleshooting .....	47
Typing error .....	50

**U**

UL-Hinweis .....	11
------------------	----

**W**

Weather influences .....	41
Wind .....	41
Wireless performance diagnostics .....	28



# SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899


At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product suppliers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.

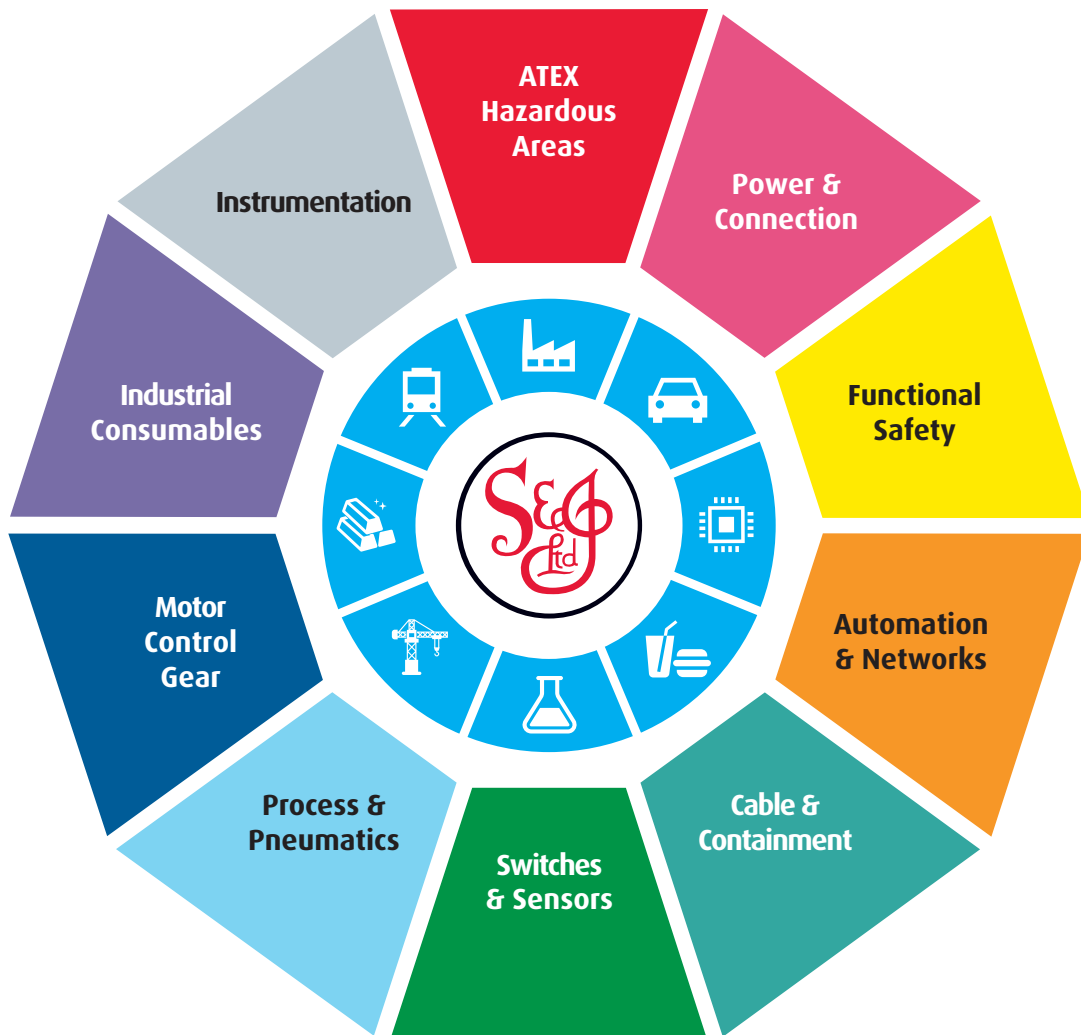

Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

# [www.scatts.co.uk](http://www.scatts.co.uk)