



Abmessungen

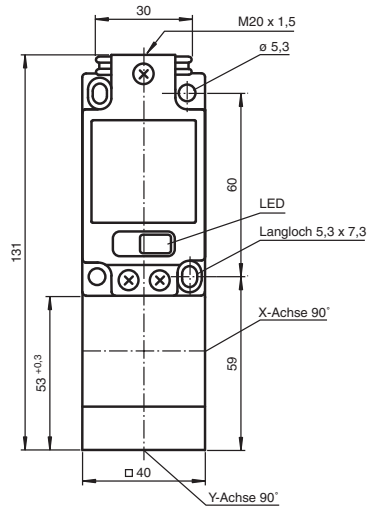

Dimensions

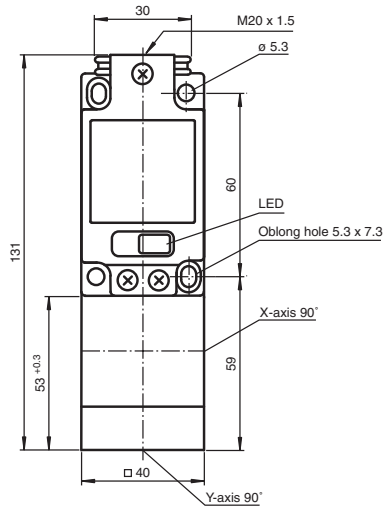

**Ultraschall-Sensor
Ultrasonic Sensor
UC3000+U9+E7+R2**

 


Doc. No.: 45-1552B
DIN A3 -> DIN
Part. No.: 036606
Date: 05/07/2010




Elektrischer Anschluss/Kurven/Zusätzliche Informationen


Normsymbol/Anschluss:
(Version E7, npn)



Charakteristische Ansprechkurve

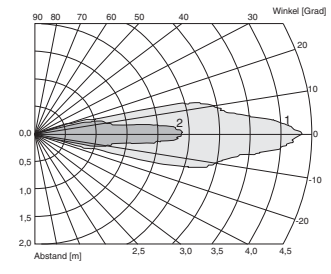


LED-Fenster

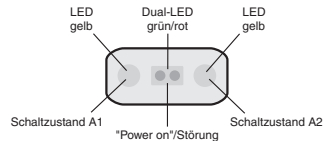


Electrical Connection / Curves / Additional Information

 
Standard symbol/Connection:
(Version E7, npn)



Characteristic response curves

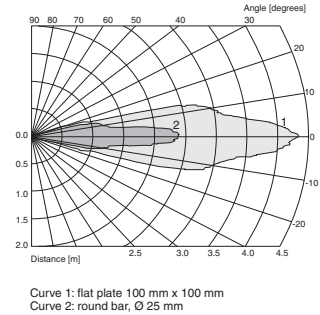

LED-Window

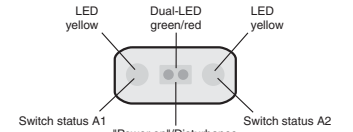

Technische Daten

Allgemeine Daten	
Erfassungsbereich	300 ... 3000 mm
Blindzone	0 ... 300 mm
Normmessplatte	100 mm x 100 mm
Wandlerfrequenz	ca. 130 kHz
Ansprechverzögerung	bei Werkseinstellung minimal (EM, NONE): ≤80 ms (2 Messzyklen) default (EM, MXN, 5, 2): ≤160 ms (4 Messzyklen) dynamisch (EM, DYN): ≤120 ms (3 Messzyklen)
Anzeigen/Bedienelemente	
LED gelb	Schaltzustand Schaltausgang 1 Schaltzustand Schaltausgang 2
LED rot/grün	permanent grün : "Power on", blinkt bei Standby-Betrieb rot blinkend : "Störung", (z. B. Störerschallpegel zu hoch)
Elektrische Daten	
Betriebsspannung	U _B 20 ... 30 V DC, Welligkeit 10 % _{SS}
Leerlaufstrom	I ₀ ≤ 60 mA
Schnittstelle	
Schnittstellentyp	RS 232, 9600 Bit/s, no parity, 8 Datenbits, 1 Stoppbit
Eingang/Ausgang	
Synchronisation	1 Synchronanschluss, bidirektional 0-Pegel: -U _B ... (-U _B + 1 V), 1-Pegel: (-U _B + 5 V) ... +U _B
Impulsdauer	≥ 100 µs
Pausendauer	≥ 2 ms
Synchronisationsfrequenz	≤ 20 Hz, bei externer Synchronisation
Ausgang	
Ausgangstyp	2 Schaltausgänge npn, Schließer/Öffner
Bemessungsstrom	I _e 200 mA, kurzschluss-/überlastfest
Spannungsfall	U _d ≤ 3 V DC
Auflösung	< 1 mm
Reproduzierbarkeit	≤ 0,1 % des Endwertes
Abstandshysterese	H ≤ 1 % des eingestellten Schaltabstandes
Temperatureinfluss	≤ 2 %
Umgebungsbedingungen	
Umgebungstemperatur	-25 ... 70 °C (248 ... 343 K)
Lagertemperatur	-40 ... 85 °C (233 ... 358 K)
Mechanische Daten	
Schutzart	IP65
Anschluss	Klemmraum, Aderquerschnitt ≤ 2,5 mm ²
Material	
Gehäuse	PBT
Wandler	Epoxidharz/Glashohlkugelmischung; Schaum Polyurethan
Masse	180 g
Normen- und Richtlinienkonformität	
Normenkonformität	
Normen	EN 60947-5-2:2007 IEC 60947-5-2:2007

Technical data

General specifications	
Sensing range	300 ... 3000 mm
Unusable area	0 ... 300 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 130 kHz
Response delay	for factory setting minimum (EM, NONE): ≤80 ms (2 measuring cycles) default (EM, MXN, 5, 2): ≤160 ms (4 measuring cycles) dynamic (EM, DYN): ≤120 ms (3 measuring cycles)
Indicators/operating means	
LED yellow	switching state switch output 1 switching state switch output 2
LED red/green	permanently green : "Power on", flashes during standby operation red flashing : "Error", (e. g. background noise level too high)
Electrical specifications	
Operating voltage	U _B 20 ... 30 V DC, ripple 10 % _{SS}
No-load supply current	I ₀ ≤ 60 mA
Interface	
Interface type	RS 232, 9600 bit/s, no parity, 8 data bits, 1 stop bit
Input/output	
Synchronization	1 synchronous connection, bidirectional 0-level: -U _B ... (-U _B + 1 V), 1-level: (-U _B + 5 V) ... +U _B
Pulse length	≥ 100 µs
Pause length	≥ 2 ms
Synchronization frequency	≤ 20 Hz, with external synchronization
Output	
Output type	2 switch outputs npn, normally open/closed
Rated operational current	I _e 200 mA, short-circuit/overload protected
Voltage drop	U _d ≤ 3 V DC
Resolution	< 1 mm
Repeat accuracy	≤ 0.1 % of full-scale value
Range hysteresis	H ≤ 1 % of the set operating distance
Temperature influence	≤ 2 %
Ambient conditions	
Ambient temperature	-25 ... 70 °C (248 ... 343 K)
Storage temperature	-40 ... 85 °C (233 ... 358 K)
Mechanical specifications	
Protection degree	IP65
Connection	terminal compartment, ≤ 2.5 mm ² conductor csa
Material	
Housing	PBT
Transducer	epoxy resin/hollow glass sphere mixture; polyurethane foam
Mass	180 g
Compliance with standards and directives	
Standard conformity	
Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007

Beschreibung der Sensorfunktionen

Die Ausgänge des Sensors lassen sich in zwei unterschiedlichen Betriebsarten betreiben: Schaltbetrieb mit 2 einstellbaren Schaltpunkten oder RS 232-Betrieb (RS 232, 9600, n, 8, 1). Die Betriebsart wird mit DIP-Schalter 10, die Schaltpunkte werden mit den DIP-Schaltern 1-4 und 5-8 eingestellt (siehe Tabelle). Mit Schalter 9 wird festgelegt, ob die Schaltausgänge als Schließer oder als Öffner arbeiten. Für weitere Hinweise zur RS 232-Schnittstelle sei auf die Druckschrift „Befehlsatz der Ultraschall-Sensoren mit RS 232-Schnittstelle“ verwiesen.

Achtung: Vor Anschluss der RS 232-Schnittstelle ist auf die richtige Einstellung des DIP-Schalters S10 zu achten.

Synchronisation

Zur Unterdrückung gegenseitiger Beeinflussung verfügt der Sensor über einen Synchronisations-Eingang. Ist der Eingang unbeschaltet, arbeitet der Sensor mit einer intern erzeugten Taktrate. Der Sensor kann durch Anlegen einer Rechteckspannung synchronisiert werden. Eine fallende Flanke führt zum Absetzen eines einzelnen Ultraschallimpulses. Ein Low-Pegel > 1 s oder ein offener Synchronisationseingang führt zum Normalbetrieb des Sensors. Ein High-Pegel > 1 s führt zum Standby-Betrieb des Sensors (Anzeige grüne LED).

Mehrere Funktionen sind möglich:

- Zwei (bzw. bis zu 5) Sensoren können synchronisiert werden, indem ihre Synchronisationseingänge miteinander verbunden werden. Die Sensoren senden in diesem Fall abwechselnd Ultraschallimpulse aus.
 - Mehrere Sensoren werden mit dem selben Synchronisationssignal angesteuert. Die Sensoren arbeiten im Gleichtakt.
 - Die Synchronisationsimpulse werden zyklisch jeweils einem Sensor zugeführt. Die Sensoren arbeiten im Multiplexbetrieb.
- Wenn der Sensor synchronisiert wird, erhöht sich die Ansprechzeit, da die Messzykluszeit durch die Synchronisation erhöht wird.

Description of the sensor functions

The outputs of the sensor can be used in two different operating modes: Switching mode with 2 adjustable switching points, or RS 232 mode (RS 232, 9600, n, 8, 1). Select the operating mode with DIP switch 10. The switching points are set with the DIP switches 1-4 and 5-8 (see table). Switch 9 is used to set the close or open function of the switch outputs.

For further information on the sensor's command set, please see the publication "Command Set for Ultrasonic Sensors with RS 232 Interface".

Caution: Ensure that DIP switch S10 is correctly set before connecting the RS 232 interface.

Synchronisation

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. It can be synchronised by applying a square wave voltage. A falling edge leads to the transmission of a single ultrasonic pulse. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor. A high level > 1 s will result in the standby operation of the sensor (green LED).


Several functions are available:

- Two to five sensors can be synchronised by interconnecting their synchronisation inputs. In this case, the sensors alternately transmit ultrasonic pulses.
 - Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchronised.
 - The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.
- The response time increases when sensors are synchronised as the measuring cycle time is increased by the synchronisation.

Einstellung des Auswertefensters mittels Kodierschalter im Klemmraum

Schalter 1 2 3 4	NDE [mm]	Schalter 5 6 7 8	FDE [mm]
0 0 0 0	300	0 0 0 0	400
0 0 0 1	450	0 0 0 1	550
0 0 1 0	600	0 0 1 0	700
0 0 1 1	750	0 0 1 1	850
0 1 0 0	900	0 1 0 0	100
0 1 0 1	1050	0 1 0 1	1150
0 1 1 0	1200	0 1 1 0	1300
0 1 1 1	1350	0 1 1 1	1450
1 0 0 0	1500	1 0 0 0	1600
1 0 0 1	1700	1 0 0 1	1800
1 0 1 0	1900	1 0 1 0	2000
1 0 1 1	2100	1 0 1 1	2200
1 1 0 0	2300	1 1 0 0	2400
1 1 0 1	2500	1 1 0 1	2600
1 1 1 0	2700	1 1 1 0	2800
1 1 1 1	2900	1 1 1 1	3000

Kodierschalter im Klemmraum

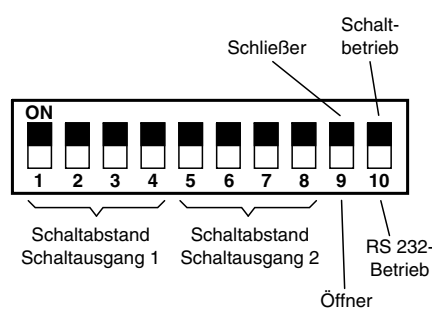

1 ON, 0 OFF
Der Sensor lässt sich durch seinen umfangreichen Befehlssatz über die RS 232-Schnittstelle entsprechend der Applikation konfigurieren.

RS 232-Befehlssatz (Kurzübersicht)

Befehl	Bedeutung	Parameter	Zugriff
VS0	Velocity of Sound at 0 °C	VS0 in [cm/s]	lesen und setzen
TO	Temperature Offset	TO in [0.1 K]	lesen und setzen
TEM	TEMPerature	TEM in [0.1 K]	lesen und TO anpassen
REF	REFerence measurement	Entfernung REF in [mm]	anpassen von VS0
VS	Velocity of Sound	VS in [cm/s]	lesen
UDS	Use DIP Switches	UDS binär [0/1]	lesen und setzen
SD1[1]	Switching Distance 1 1	Entfernung SD11 in [mm]	lesen und setzen
SD12	Switching Distance 1 2	Entfernung SD12 in [mm]	lesen und setzen
SD2[1]	Switching Distance 2 1	Entfernung SD21 in [mm]	lesen und setzen
SD22	Switching Distance 2 2	Entfernung SD12 in [mm]	lesen und setzen
SH1	Switching Hysteresis 1	Hysteresis in [%]	lesen und setzen
SH2	Switching Hysteresis 2	Hysteresis in [%]	lesen und setzen
BR	Blind Range	Blindzone bis [mm]	lesen und setzen
RR	Range Reduction	Blindzone ab [mm]	lesen und setzen
NEF	No Echo is Failure	1: „kein Echo“ ist Fehler, 0: „kein Echo“ ist kein Fehler	lesen und setzen
FSF	Fail Safe Function	Ausgangsschaltfunktion im Fehlerfall	lesen und setzen
CBT	Constant Burst Time	Burstlänge in [µs]	lesen und setzen
CCT	Constant Cycle Time	Zeit in [ms]	lesen und setzen
SSY	Startup SYNchronised	SSY binär [0/1]	lesen und setzen
FTO	Filter TimeOut	Anzahl der zu filternden Messungen ohne Echo	lesen und setzen
EM	Evaluation Method	Auswertemethode { 0 = NONE; PT1[f,p,c]; MXN[m,n]; DYN[p] }	lesen und setzen
CON	CONservative filter	Zählerschwelle als Zahl	lesen und setzen
OPM	Operation Method	Betriebsart Schaltausgang { S,R,W,L,H } Analogausgang { S,L }	lesen und setzen
OM	Output Mode	OM kodiert [Schließer NO = 0, Öffner NC = 1]	lesen und setzen
MD	Master Device	Funktion als Master (0 = NONE),AD,RD,RT,SS,ATB,RDB,RTB }	lesen und setzen
DIP	DIP switch settings	Stellung der DIP-Schalter als hexadezimal kodierter String	lesen
AD	Absolute Distance	Entfernung in [mm]	lesen
RT	RunTime	Echolaufzeit in Maschinentakten [1 Mz = 1.085 µs]	lesen
SS1	Switching State 1	SS1 binär [0: inaktiv, 1 aktiv] (unabhängig von OM)	lesen
SS2	Switching State 2	SS2 binär [0: inaktiv, 1 aktiv] (unabhängig von OM)	lesen
ADB	Absolute Distance Binary	Entfernung in [mm], binär	lesen
RTB	RunTime Binary	Echolaufzeit in Maschinentakten [1 Mz = 1.085 µs], binär	lesen
ER	Echo Received	Echo erkannt: nein, ja [0/1]	lesen
VER	VERsion	Version string: xxxx	lesen
ID	IDentification	ID string: P&F UC...-E6/E7-R2 Eprom: xxxx Version yyyy	lesen
DAT	DATe	Datumsstring: z. B. Date: 06/11/96 Time: 16:14:26	lesen
ST	STatus	Status als hexadezimal kodierter String	lesen
RST	ReSeT	führt einen Reset aus	Befehl
DEF	DEFault settings	zurücksetzen auf Voreinstellungen	Befehl
SUC	Store User Configuration	speichern aller Einstellungen	Befehl
RUC	Recall User Configuration	zurücksetzen auf gespeicherte Einstellungen	Befehl


Programmierhinweise

Achtung: Zur Programmierung des Sensors über die eingebaute RS 232-Schnittstelle ist vor Anschluss des Schnittstellenkabels der DIP-Schalter 10 in die Position OFF (RS 232-Betrieb) zu stellen.

Anschluss des Interface-Kabels UC-FP/U9-R2 (Zubehör).

Schnittstellenkabel Aderfarbe	Sensorklemmraum Klemme Nr.
braun (TD)	4 (RD)
schwarz (RD)	2 (TD)
blau (GND)	3 (-U _B)


Struktur der Filterfunktionen

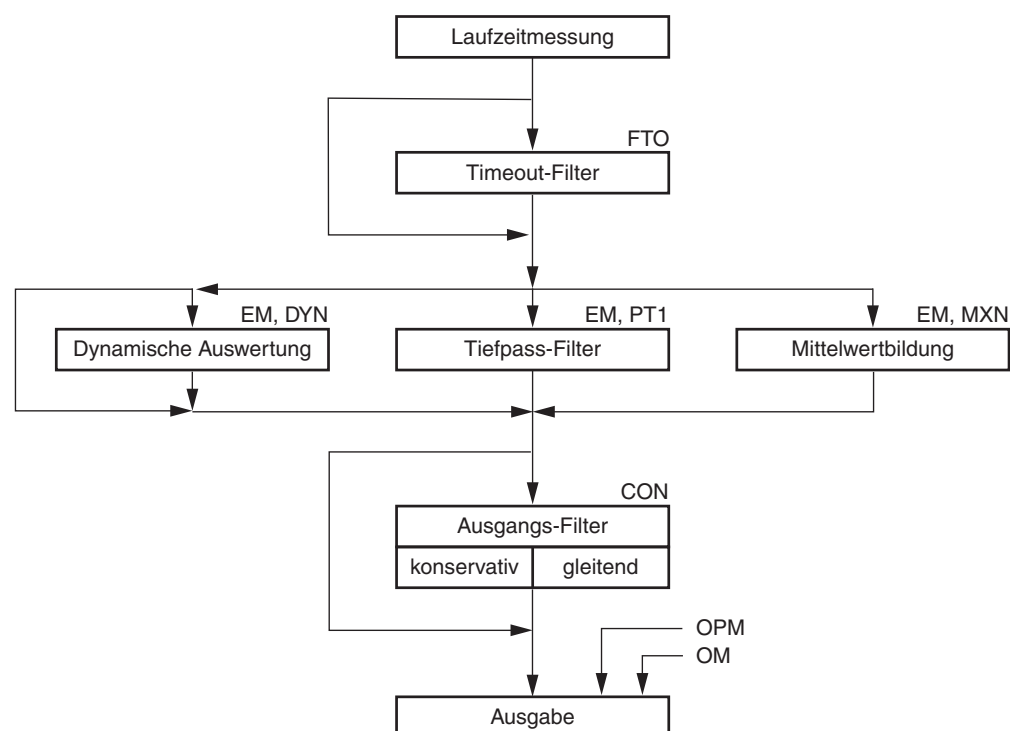

Adjustment of the evaluation window via coding switch in terminal compartment

Switch 1 2 3 4	NDE [mm]	Switch 5 6 7 8	FDE [mm]
0 0 0 0	300	0 0 0 0	400
0 0 0 1	450	0 0 0 1	550
0 0 1 0	600	0 0 1 0	700
0 0 1 1	750	0 0 1 1	850
0 1 0 0	900	0 1 0 0	100
0 1 0 1	1050	0 1 0 1	1150
0 1 1 0	1200	0 1 1 0	1300
0 1 1 1	1350	0 1 1 1	1450
1 0 0 0	1500	1 0 0 0	1600
1 0 0 1	1700	1 0 0 1	1800
1 0 1 0	1900	1 0 1 0	2000
1 0 1 1	2100	1 0 1 1	2200
1 1 0 0	2300	1 1 0 0	2400
1 1 0 1	2500	1 1 0 1	2600
1 1 1 0	2700	1 1 1 0	2800
1 1 1 1	2900	1 1 1 1	3000

DIP Switches in Terminal Compartment

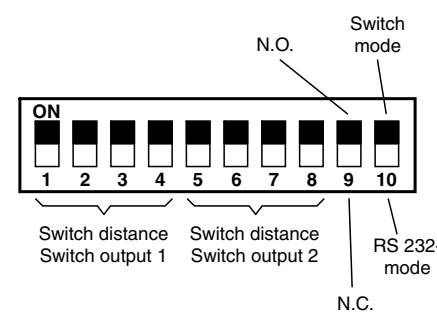

1 ON, 0 OFF
Thanks to its extensive command set, the sensor can be configured to suit the application via the RS 232 interface.

RS 232 command set (overview)

Command	Meaning	Parameter	Access
VS0	Velocity of Sound at 0 °C	VS0 in [cm/s]	read and set
TO	Temperature Offset	TO in [0.1K]	read and set
TEM	TEMPerature	TEM in [0.1K]	read and adapt to TO
REF	REFerence measurement	REF distance in [mm]	adaptation of VS0
VS	Velocity of Sound	VS in [cm/s]	read
UDS	Use DIP Switches	UDS binary [0/1]	read and set
SD1[1]	Switching Distance 1 1	SD11 distance in [mm]	read and set
SD12	Switching Distance 1 2	SD12 distance in [mm]	read and set
SD2[1]	Switching Distance 2 1	SD21 distance in [mm]	read and set
SD22	Switching Distance 2 2	SD12 distance in [mm]	read and set
SH1	Switching Hysteresis 1	Hysteresis in [%]	read and set
SH2	Switching Hysteresis 2	Hysteresis in [%]	read and set
BR	Unusable area (Blind Range)	Unusable area to [mm]	read and set
RR	Range Reduction	Unusable area from [mm]	read and set
NEF	No Echo is Failure	1: "no echo" is failure; 0: "no echo" is not failure	read and set
FSF	Fail Safe Function	Shutdown function in event of failure	read and set
CBT	Constant Burst Time	Burst time in [µs]	read and set
CCT	Constant Cycle Time	Time in [ms]	read and set
SSY	Startup SYNchronised	SSY binary [0/1]	read and set
FTO	Filter TimeOut	Number of measurements without echo to be filtered	read and set
EM	Evaluation Method	Evaluation method { 0 = NONE; PT1[f,p,c]; MXN[m,n]; DYN[p] }	read and set
CON	CONservative filter	Counter threshold as number	read and set
OPM	Operation Method	Switch output operating mode { S,R,W,L,H } analogue output { S,L }	read and set
OM	Output Mode	OM coded [close NO = 0, open NC = 1]	read and set
MD	Master Device	Function as master (0 = NONE),AD,RD,RT,SS,ATB,RDB,RTB }	read and set
DIP	DIP switch settings	DIP switch setting as hexadecimal string	read
AD	Absolute Distance	Distance in [mm]	read
RT	RunTime	Echo run time in machine cycles [1 machine cycle = 1.085µs]	read
SS1	Switching State 1	SS1 binary [0: inactive, 1 active] (independent of OM)	read
SS2	Switching State 2	SS2 binary [0: inactive, 1 active] (independent of OM)	read
ADB	Absolute Distance Binary	Distance in [mm], binary	read
RTB	RunTime Binary	Echo run time in machine cycles [1 machine cycle = 1.085µs], binary	read
ER	Echo Received	Echo detected: no, yes [0/1]	read
VER	VERsion	Version string: xxxx	read
ID	IDentification	ID string: P&F UC...-E6/E7-R2 Eprom: xxxx Version yyyy	read
DAT	DATe	Date string: e.g. Date: 06/11/96 Time: 16:14:26	read
ST	STatus	Status as hexadecimal string	read
RST	ReSeT	Performs a reset	Command
DEF	DEFault settings	Restores defaults	Command
SUC	Store User Configuration	Stores all settings	Command
RUC	Recall User Configuration	Restores stored settings	Command


Programming instructions

Caution: When programming the sensor via the integrated RS 232 interface, ensure that DIP switch 10 is in the OFF (RS 232 mode) position before connecting the interface cable.

Electrical connection of interface cable UC-FP/U9-R2 (see accessories).

Interface cable Conductor colour	Sensor terminal compartment Terminal no.
brown (TD)	4 (RD)
black (RD)	2 (TD)
blue (GND)	3 (-U _B)

Structure of the filter functions

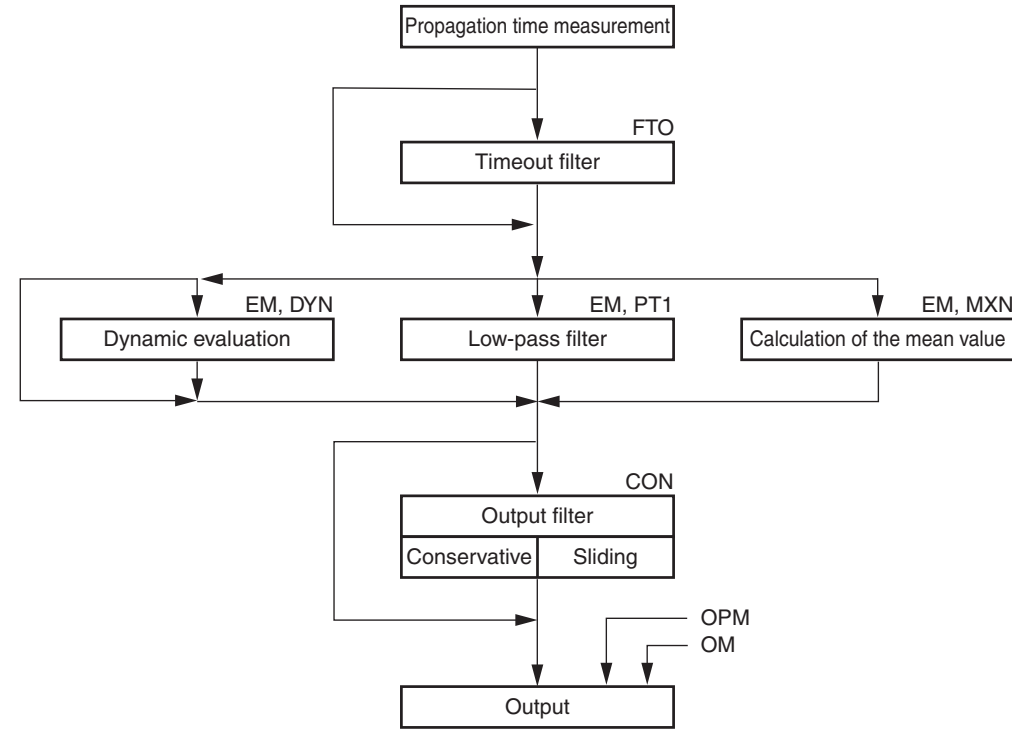



SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899

At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product suppliers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.



Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk