




Programming adapter UC-PROG1-USB

- USB 2.0 interface
- Simple insertion in the sensor connection lead

Programming adapter



Dimensions

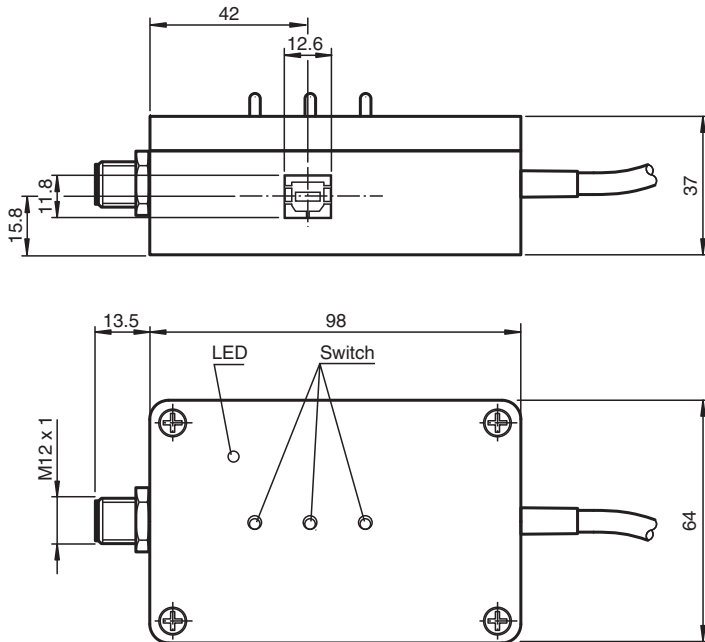

Technical Data

Electrical specifications			
Operating voltage	U_B	10 ... 30 V DC, via sensor supply	
No-load supply current	I_0	Sensor Interface < 10 mA USB interface ≤ 50 mA	
General information		galvanically isolated	
Interface			
Interface type		USB 2.0	
Protocol		Serial Communication	
Transfer rate		max. 9.6 kBit/s	
Approvals and certificates			
CCC approval		CCC approval / marking not required for products rated ≤36 V	
Ambient conditions			

Release date: 2021-01-27 Date of issue: 2021-02-05 Filename: 271216_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com




Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com



Technical Data

Ambient temperature	-25 ... 70 °C (-13 ... 158 °F)
Storage temperature	-40 ... 85 °C (-40 ... 185 °F)
Mechanical specifications	
Degree of protection	IP20
Connection	USB: Square type B socket 5-pin, M12 x 1 connector Female cordset, M12, 5-pin, PVC cable
Material	
Housing	Polycarbonate
Mass	260 g
Cable length	2 m

Accessories

	PACTware 4.1	FDT Framework
	Microsoft .NET	
	PACTware 5.X	FDT Framework

Additional Information

Description

The programming device allows the connected sensor to be programmed easily via the USB interface of a PC. A variety of sensor parameters can be programmed in this way, enabling the sensor to be optimally configured for the task in question.

The sensor is parameterized using the PACTware™ parameterization software. PACTware™ and the sensor-specific device type manager are available to download from the sensor product page at <http://www.pepperl-fuchs.com>.


Alternatively, you can use a terminal program to configure parameters at command level. To do this, you will need to use the programming device as a virtual COM interface. See the "Changing the Communication Mode" section. You can download the description of the sensor commands from the sensor product page at <http://www.pepperl-fuchs.com>.

The programming device is powered by the 5 V supplied by the USB interface. The connected sensor is powered by the control unit or a power supply connected on the control side (see Figure 1). The supply voltages between the programming device and the sensor are galvanically isolated from one another.

The power LED on the programming device serves as an indicator for the sensor voltage.

Connecting the Programming Device

1. First, connect the sensor to a power supply or your control unit or integrate it in your process in accordance with the instructions on the sensor data sheet.
2. Check that the sensor is functioning correctly.
3. Switch off the power supply.
4. Now disconnect the sensor and loop the programming device into the circuit as shown in the diagram below.
5. Connect the UC-PROG1-USB programming device to your computer via the USB interface. To do this, use a standard USB interface cable with a USB-A to USB-B connector.

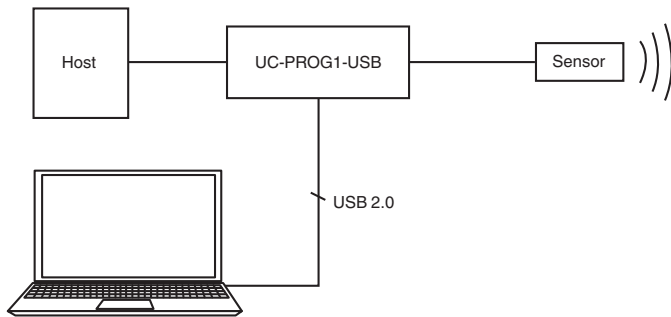

Programming the Sensor

1. Move the "connect to" switch into the "comm" position.
Note: When the switch is in this position, the sensor signals on lines 4 and 5 are not looped through to the control unit.
2. The position that the "output load" and "output logic" switches need to be in depends on the output function of the sensor. Set the switches as shown in the following table or in accordance with the description of the connected sensor.

Output type	Output: Load	Output: Logic
E4	Pull: up	Inv
E5	Pull: down	Inv
E6	Pull: down	Inv
E7	Pull: up	Inv
I	Pull: down	Noninv
U	Pull: down	Noninv

3. Switch on the supply voltage. The sensor starts in standby mode.
4. Send the first communication call to the sensor within 25 seconds. If the communication call is sent too late, then it is no longer possible to establish communication. In this case, switch the supply voltage to the sensor off again. Repeat the procedure to establish communication from step 3 onward.
5. Program the sensor.
6. Move the "connect to" switch into the "process" position. The sensor signals on lines 4 and 5 are now looped through to the control unit. All sensor functions can now be tested.

Removing the Programming Device

1. Switch off the supply voltage.
2. Remove the programming device from the sensor circuit.
3. Reconnect the sensor in its original position.
4. The programmed parameters will now be stored in the sensor in the nonvolatile memory until you overwrite them by reprogramming the sensor.

Changing the Communication Mode

 
To change the communication mode, you must move a DIP switch inside the programming device. Using this switch, you can change between HID (Human Interface Device) mode and VirtualComInterface mode.

Programming adapter

UC-PROG1-USB

To change the communication mode, proceed as follows:

1. Disconnect all connections between the programming device and the power supply, the control unit, the sensor, and the PC.
2. Loosen the four screws on the housing.
3. Carefully remove the cover on the device.
4. Set the programming switches as follows:
 - Operating as a virtual serial interface:

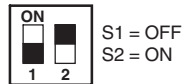

- Operating in HID mode (parameterization with PACTware™):



5. Carefully replace the cover on the housing.
6. Screw the cover back on the housing.



**SCATTERGOOD
& JOHNSON LTD**
ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899

At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product manufacturers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.



Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk