



Certification Information

- * Certification Number BVS 22 ATEX E 032X
- * Certification Number IECEx BVS 22.0029X
- * Approved to (Gas) II 2G Ex db eb IIC T6 Gb
- * Approved to (Dust) II 2D Ex tb IIIC T80°C Db
- * Ingress Protection IP66 (EN60529)
- * Ambient Temperature Range -20°C to +40°C

Features

- * Chemical & impact resistant Polyamide enclosure
- * Maximum switch rating of 6A AC15 230V
- * Maximum switch rating of 6A DC13 24V
- * 1 x M20 entry as standard
- * Custom built assemblies are available
- * Enclosure dimensions 165 x 85 x 77.5mm



GHG41183/SJ35

3 Gang Control Stations (Zone 1 & Zone 21)					
Part Number	Description	Function	Accessory	Contacts / Voltage	Action
GHG41183/SJ31R-G	Indicator Push Button Station	Visual Indication	Red & Green Lens	20 - 250V AC/DC	
		START	START & Green Inserts	1NO + 1NC	Momentary
		STOP	STOP & Red Inserts		
GHG41183/SJ32R-G	Momentary Start Push Button Station With Indicator & Emergency Stop	Visual Indication	Red & Green Lens	20 - 250V AC/DC	
		START	START & Green Inserts	1NO + 1NC	Momentary
		Emergency Stop	-		Pull To Reset
GHG41183/SJ33R-G	Indicator Double Push Button Emergency Stop Station	Visual Indication	Red & Green Lens	20 - 250V AC/DC	
		START / STOP	START, STOP, Green & Red Inserts	1NO + 1NC	Momentary
		Emergency Stop	-		Pull To Reset
GHG41183/SJ34	Momentary Start Push Button Station With Potentiometer & Emergency Stop	Potentiometer 0-10 kΩ	-	-	Rotary
		START	START & Green Inserts	1NO + 1NC	Momentary
		Emergency Stop	-		Pull To Reset
GHG41183/SJ35	Momentary Start & Stop Push Button Station With Emergency Stop	START	START & Green Inserts	1NO + 1NC	Momentary
		STOP	STOP & Red Inserts		
		Emergency Stop	-	2NC	Pull To Reset
GHG41183/SJ21-4	Momentary Start With Emergency Stop Push Button Station	START	START & Green Inserts	1NO + 1NC	Momentary
	Emergency Stop Station	Emergency Stop	-	2NO + 2NC	Pull To Reset
GHG41183/SJ21-4NC	Momentary Start With Emergency Stop Push Button Station	START	START & Green Inserts	1NO + 1NC	Momentary
	Emergency Stop Station	Emergency Stop	-	4NC	Pull To Reset

- Zone 0
- Zone 1
- Zone 2
- Zone 20
- Zone 21
- Zone 22
- IEC Ex



Use certified Ex cable glands suitable for the cable type and enclosure. Fit serrated washers and locknuts where metal glands are installed into Exe enclosures with clearance holes (section 4.5.4 of the CompEx Guide). Only one adaptor or reducer is recommended per entry. Seal unused entries with certified stopping plugs. All accessories are available from stock.