

Charakteristische Ansprechkurve

Courbe de response caractéristique

Curve di risposta caratteristica

Characteristic response curve

Curva de respuesta característica


Möglicher Abstand (Versatz) der optischen Achsen von Sender und Empfänger.

Permissible distance (offset) between the optical axis of the emitter and receiver.

Ecart possible entre les axes optiques de l'émetteur et du récepteur.

Desplazamiento posible de los ejes ópticos del emisor y receptor.

Distanza possibile (sfalsato) d egli assi ottici di trasmettitore e ricevitore.

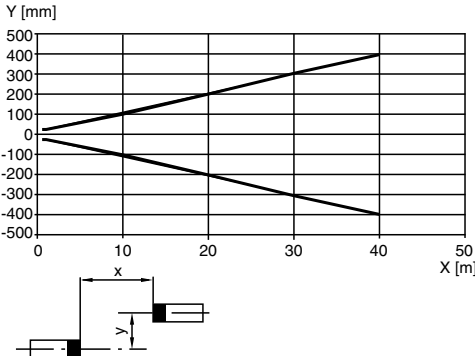

Relative Empfangslichtstärke


Intensité relative de la lumière reçue

Intensita relativa della luce ricevuta

Relative received light strength

Potencia relativa de recepción lumínica

Funktionsreserve, Stability control, Réserve de fonctionnement, Reserva de función, Riserva di funzionamento

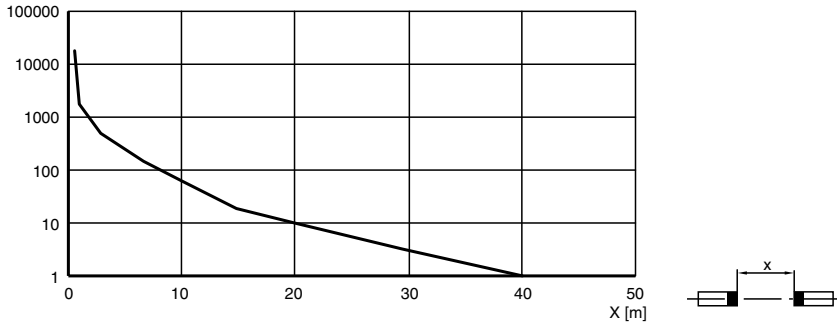


Lichtfleckdurchmesser = f (Abstand)

Diámetro del haz de luz = f (Distancia)

Light spot diameter = f (Distance)

Diametro impronta luce = f (distanza)

Diamètre de la tache lumineuse = f (distance)

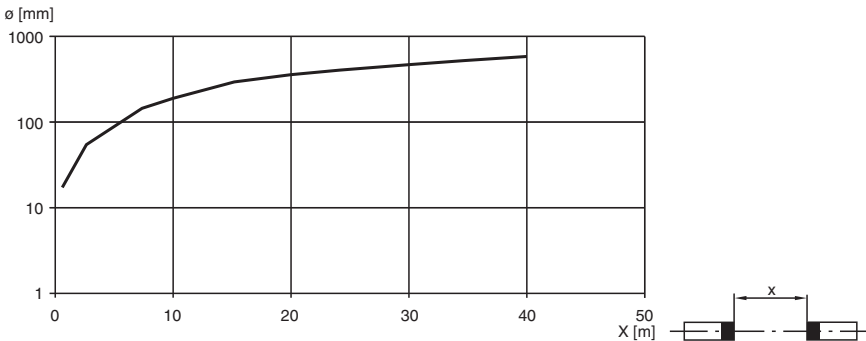

D

Funktionsbeschreibung

Sicherheitshinweise

- Vor der Inbetriebnahme Betriebsanleitung lesen
- Anschluss, Montage und Einstellung nur durch Fachpersonal
- Kein Sicherheitsbauteil gemäß EU-Maschinenrichtlinie

Montagehinweise

Der Sensor kann über die Durchgangsbohrungen direkt befestigt werden oder über einen der Haltewinkel bzw. Klemmkörper (diese sind nicht im Lieferumfang enthalten).

Die Untergrundfläche muss plan sein, um Gehäuseverzug beim Festziehen zu vermeiden. Es empfiehlt sich, die Mutter mit Federscheiben zu sichern, um einer Dejustierung des Sensors vorzubeugen.

Justage

Nach Anlegen der Betriebsspannung leuchtet die LED grün.

Sender und Empfänger gegenüber ausrichten bis die gelbe LED im Empfänger konstant leuchtet. Durch Schwenken der Sensoren kann man herausfinden, wann dieser Bereich verlassen wird. Dann blinkt die gelbe Leuchtanzeige bis sie bei weiteren Drehen ausgeht. In der Mitte zwischen beiden Stellungen liegt die exakte Justierung.

Die gelbe LED im Empfänger leuchtet konstant.

Ausrichthilfe (rote LED)

Zur besseren Ausrichtbarkeit bei großen Reichweiten befindet sich eine 2.LED (rot) im Optikteil des Empfängergerätes:

- 1)LED leuchtet konstant: Signal < Schalterpunkt
- 2)LED blinkt: Signal zwischen 1 x Schalterpunkt und 2 x Schalterpunkt
- 3)LED aus: Signal > 2 x Schalterpunkt (Funktionsreserve)

Reinigung

Wir empfehlen in regelmäßigen Abständen den Lichtaustritt zu reinigen und Verschraubungen, sowie die Steckverbindungen zu überprüfen.

GB

Function description

Security Instructions

- Read the operating instructions before attempting commissioning
- Installation, connection and adjustments should only be undertaken by specialist personnel
- No safety component in accordance with EU machine guidelines

Mounting instructions

The sensor can be fastened over the through-holes directly or with one of the support angles or clamping components (this are not contained in the scope of supply).

The base surface must be flat to avoid distorting the housing during mounting. It is advisable to secure the bolts with washers so that the sensor does not become misaligned.

Adjustment

Connect the sensor to operating voltage, the LED green lights up constantly.

Emitter and receiver align to opposite: Yellow LED (receiver) lights up constantly.

By painning the sensors, both horizontally and vertically, one can determine when the sensor is aligned correctly. When the yellow LED starts flashing the light beam is on the edge of the useful alignment zone, and when the Led is off , then there is no alignment. The correct adjustment is with the light beam in the center of these two extremes in both the horizontal and vertical modes. The yellow LED is permanently on.

Alignment aid (red LED)

For the better adjustment with large ranges a 2.LED (red) is in the optic of the receiver device:

- 1)LED lights up constantly: Signal < switching point
- 2)LED flashes: Signal between 1 x switching point and 2 x switching point
- 3)LED out: Signal > 2 x switching point (function reserve)

Maintenance

We recommend that you frequently clean the optical surfaces and check the electrical connections and mechanical fixations.



SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS


At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product manufacturers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.

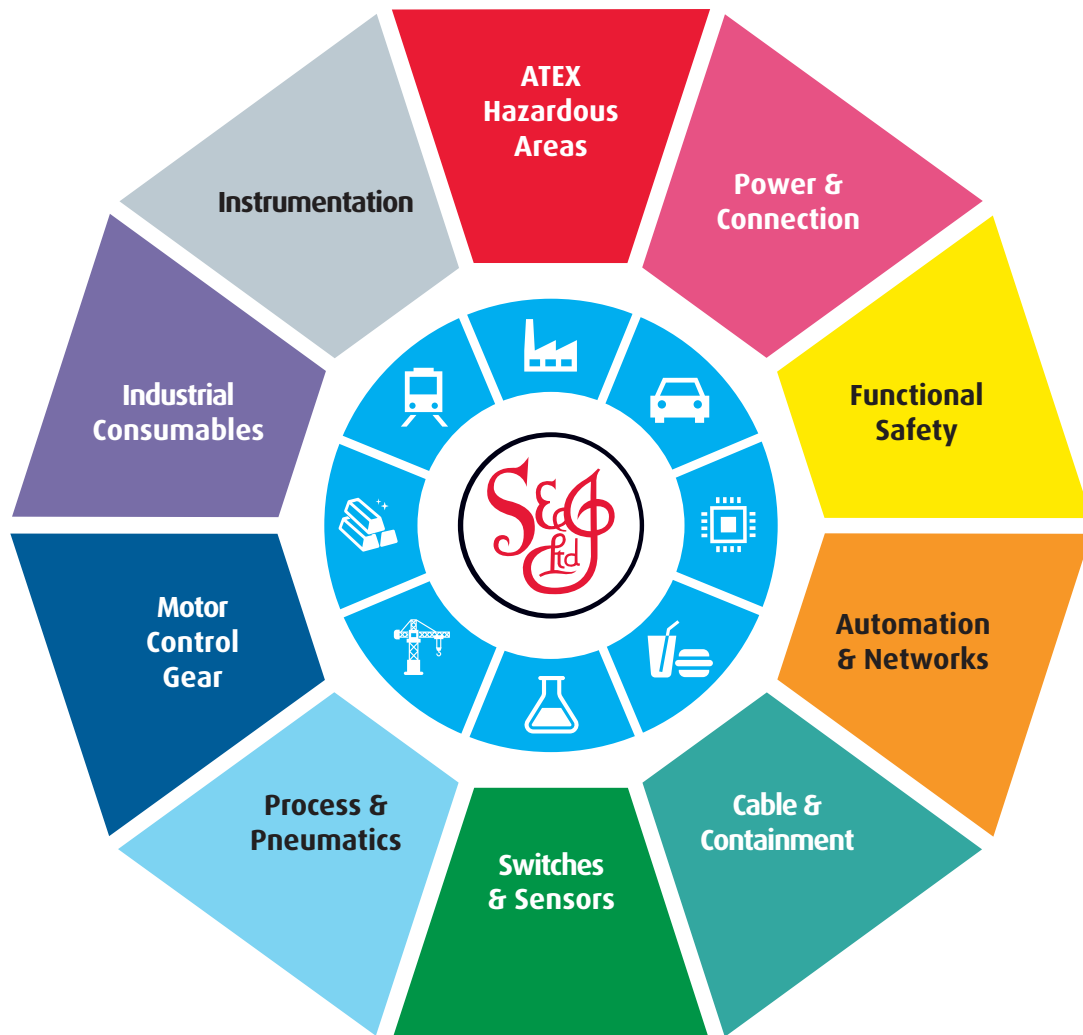

Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk