

IB IL 24 PWR IN-PAC

Inline power terminal, 24 V DC, without fuse



Data sheet
5567_en_08

© PHOENIX CONTACT 2018-03-23

1 Description

The terminal is designed for use within an Inline station. It enables the 24 V supply voltage to be fed into the main circuit (U_M). In addition, this terminal can be used to supply power for a 24 V segment circuit (U_S).



This terminal does not have a protocol chip and, therefore, is not a bus device.

Features

- Supply of the 24 V main voltage U_M
- Feed-in or provision of the 24 V segment voltage U_S
- Main circuit protected by an external fuse
- Segment circuit can be protected by an external fuse
- Approved for use as a power terminal in connection with a safety-related segment circuit



When using the terminal in a safety-related segment circuit, pay attention to the corresponding notes!



WARNING: Explosion hazard when used in potentially explosive areas

When using the terminal in potentially explosive areas, observe the corresponding notes.



This data sheet is only valid in association with the IL SYS INST UM E user manual.



Make sure you always use the latest documentation. It can be downloaded from the product at [phoenixcontact.net/products](https://www.phoenixcontact.net/products).


2	Table of contents	
1	Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	3
5	Internal circuit diagram	6
6	Notes on using the terminal block in potentially explosive areas	7
7	Terminal point assignment.....	8
8	Connection example.....	9
9	Notes on using the terminal in connection with a safety-related segment circuit.....	9
10	Local diagnostic indicator	9

3 Ordering data

Description	Type	Order No.	Pcs./Pkt.
Inline power terminal, complete with accessories (connector and labeling field), 24 V DC, without fuse	IB IL 24 PWR IN-PAC	2861331	1
Accessories			
Connector, colored, for Inline power and segment terminal blocks (Connector/Adapter)	IB IL SCN-PWR IN-CP	2727637	10
Connector, for Inline power and segment terminal blocks (Connector/Adapter)	IB IL SCN-PWR IN	2727462	10
Labeling field, width: 12.2 mm (Marking)	IB IL FIELD 2	2727501	10
Insert strip, Sheet, white, unlabeled, can be labeled with: Office printing systems: Laser printer, mounting type: insert, lettering field size: 62 x 10 mm (Marking)	ESL 62X10	0809492	1
Documentation			
User manual, English, Automation terminals of the Inline product range	IL SYS INST UM E	-	-
Application note, English, Inline terminals for use in zone 2 potentially explosive areas	AH EN IL EX ZONE 2	-	-

4 Technical data

Dimensions (nominal sizes in mm)

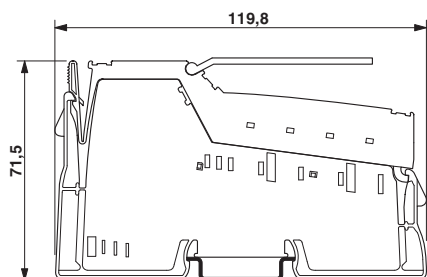

Width	12.2 mm
Height	119.8 mm
Depth	71.5 mm

General data

Color	green
Weight	59 g (with connector)
Mounting type	DIN rail

General data	
Ambient temperature (operation)	-25 °C ... 55 °C
Ambient temperature (storage/transport)	-25 °C ... 85 °C
Permissible humidity (operation)	10 % ... 95 % (non-condensing)
Permissible humidity (storage/transport)	10 % ... 95 % (non-condensing)
Air pressure (operation)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Air pressure (storage/transport)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Degree of protection	IP20
Protection class	III, IEC 61140, EN 61140, VDE 0140-1
Connection data	
Designation	Inline connector
Connection method	Spring-cage connection
Conductor cross section solid / stranded	0.08 mm ² ... 1.5 mm ² / 0.08 mm ² ... 1.5 mm ²
Conductor cross section [AWG]	28 ... 16
Stripping length	8 mm
Connection data for UL approvals	
Designation	Inline connector
Connection method	Spring-cage connection
Conductor cross section solid / stranded	0.2 mm ² ... 1.5 mm ² / 0.2 mm ² ... 1.5 mm ²
Conductor cross section [AWG]	24 ... 16
Stripping length	8 mm
Interface: Inline local bus	
Connection method	Inline data jumper
Transmission speed	500 kbps / 2 Mbps (Can be used in Inline stations with these transmission speeds)
Main circuit supply U_M	
Supply voltage	24 V DC (via Inline connector)
Supply voltage range	19.2 V ... 30 V (including all tolerances, including ripple)
Power supply unit	max. 8 A (Sum of U _M + U _S ; 4 A, maximum, when used in potentially explosive areas.)
Segment circuit supply U_S	
Supply voltage	24 V DC (via Inline connector)
Supply voltage range	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Power supply unit	max. 8 A (Sum of U _M + U _S ; 4 A, maximum, when used in potentially explosive areas.)

Protection**NOTE: Electronics may be damaged when overloaded**

Provide external fuses for each 24 V area.

If you use a fuse, the power supply unit must be capable of supplying four times the nominal current of the fuse. This ensures that the fuse trips reliably in the event of a fault.

Configuration and parameter data in a PROFIBUS system

Required parameter data	0 Byte
Required configuration data	0 Byte

Electrical isolation/isolation of the voltage areas**Test section****Test voltage**

7.5 V supply (bus logics)/24 V supply (I/O)	500 V AC , 50 Hz , 1 min.
24 V supply (I/O) / functional earth ground	500 V AC , 50 Hz , 1 min.
7.5 V supply (bus logics) / functional earth ground	500 V AC , 50 Hz , 1 min.



To achieve electrical isolation between the logic level and the I/O area, supply these areas from separate power supply units. Interconnection of the power supply units in the 24 V area is not permitted (see IL SYS INST UM E user manual).



When supply voltages U_M/U_S are supplied separately from the supply voltage U_{24V} , they are electrically isolated from one another. This is only ensured if two separate power supply units are used.

Error messages to the higher level control or computer system

None

Protective circuit

Surge protection	Suppressor diode
Reverse polarity protection	Parallel polarity protection diode
Overload protection, short-circuit protection in the segment circuit	No

Approvals

For the latest approvals, please visit phoenixcontact.net/products.

5 Internal circuit diagram

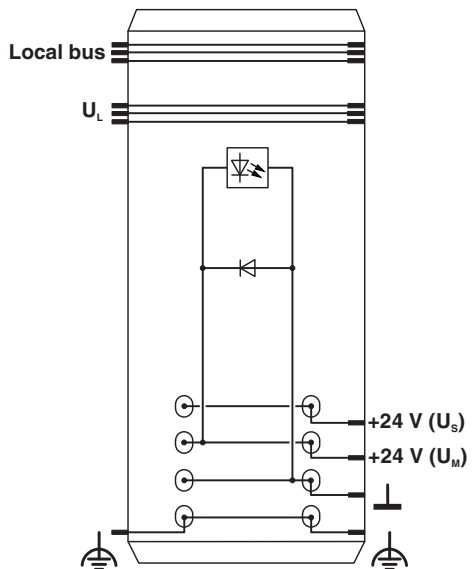


Figure 1 Internal wiring of the terminal points

Key:



LED



Diode



Capacitive connection to functional earth ground (FE)



Please refer to the IL SYS INST UM E user manual for an explanation of other symbols used.

6 Notes on using the terminal block in potentially explosive areas



WARNING: Explosion hazard

Please make sure that the following notes and instructions are observed.

Approval according to ATEX Directive 2014/34/EU

Ⓜ II 3 G Ex nA IIC T4 Gc X

Installation notes

$T_{amb} = -25\text{ °C} \dots +55\text{ °C}$

The category 3 device is designed for installation in zone 2 potentially explosive areas.

The device meets the requirements of EN 60079–0 and EN 60079–15.

- Observe the specified conditions for use in potentially explosive areas! Also observe the requirements of EN 60079-14.
- Install the device in a suitable approved housing (with at least IP54 protection) that meets the requirements of EN 60079-15.
- Only assemble, disassemble as well as connect and disconnect cables when the power is disconnected.
- Only devices that are designed for operation in Ex Zone 2 and the conditions at the installation location may be connected to the circuits in Zone 2.
- For safe operation, lockable plug connections must have a functional interlock (e. g. locking clip, screw connection etc.). Insert the interlock. Repair any damaged connectors immediately.
- Only connect one cable per terminal point. If you want to connect two flexible cables per terminal point, then use a TWIN ferrule.
- Use transient protection so that short-term surge voltages do not exceed 119 V.
- The air pressure during operation must not exceed 106 kPa.
- Perform a dielectric test after installing the device in the housing.
- For all supply and signal lines connected to the station, make sure that there is a connection to ground potential.
- Make sure that the maximum permissible current of 4 A flowing through potential jumpers U_M and U_S (total current) is not exceeded.
- When using the device in potentially explosive areas, observe the specifications in the application note AH DE IL EX ZONE 2 (German) / AH EN IL EX ZONE 2 (English).

7 Terminal point assignment

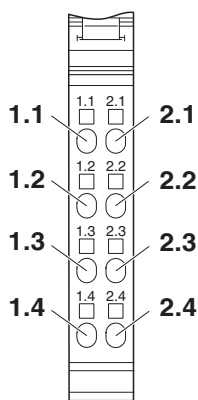


Figure 2 Terminal point assignment

Terminal point	Assignment		
1.1, 2.1	24 V DC	U_S	Supply point for the segment voltage U_S (24 V DC); Connection of a bridge or a switch
1.2, 2.2	24 V DC	U_M	24 V supply for main circuit Connection of a switch or a jumper on the segmentation level. These terminal points are connected with each other and with the potential jumper of the unprotected main supply U_M .
1.3, 2.3	GND	Reference potential of the I/O supply	The reference potential is routed directly to the potential jumper and simultaneously functions as reference ground for the main and segment supplies.
1.4, 2.4	FE	Functional earth ground	Functional earth ground of the power terminal and, therefore, of the Inline station. The contacts are directly connected to the potential jumper and the FE spring on the bottom of the housing.
Terminal points 1.1, 1.2, and 1.3 are connected with a capacitor to FE.			



NOTE: Electronics may be damaged when overloaded

Ensure that the maximum permissible current of 8 A flowing through potential jumpers U_M and U_S (total current) is not exceeded.

When used in potentially explosive areas:

Make sure that the maximum permissible current of 4 A flowing through potential jumpers U_M and U_S (total current) is not exceeded.

8 Connection example



NOTE: Electronics may be damaged when overloaded
Protect the 24 V supply with an external fuse.



NOTE: Electronics may be damaged when overloaded
Use the intended power connector for supplying the voltage.
The full current carrying capacity is ensured by internal bridging of the terminal points (see connection assignment).

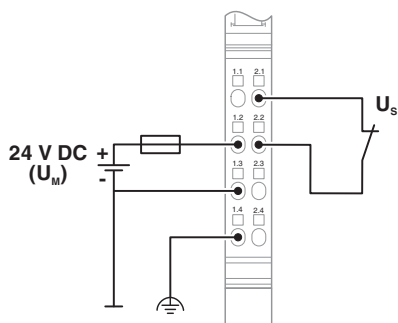


Figure 3 Example connection of the U_M supply voltage and of an external switch for providing the U_S segment voltage



Most I/O terminals draw their supply voltage from the segment circuit.



The switch can be used to create a switched segment circuit.

If this is not needed for your application, you can provide the segment voltage in one of the following ways:

- 1 Jumper connections 1.1 and 1.2 or 2.1 and 2.2.
- 2 Supply the segment voltage separately.
- 3 Use an additional segment terminal.

9 Notes on using the terminal in connection with a safety-related segment circuit

As of hardware Version 00, the terminal is approved for supplying the supply voltage directly after a safety-related segment circuit.



The requirements in the current documentation for the safety terminal that opens the safety-related segment circuit must be observed in order to ensure that the function of the safe segment circuit is not adversely affected.

The documentation can be found on the Internet at phoenixcontact.net/products.

10 Local diagnostic indicator



Figure 4 Local diagnostic indicator

LED	Color	Meaning
UM	Green	24 V voltage (in the main circuit U_M)

Function identification

Black



SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899

At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product suppliers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.



Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk