

# ELR W3- 24DC/500AC- xI

## Hybrid motor starter (CONTACTRON)

Data sheet  
108539\_en\_01

© PHOENIX CONTACT 2018-10-22



### 1 Description

The 3-phase hybrid motor starter with reversing function and current monitoring provides the following functions.

- Forward running
- Reverse running
- Motor overload protection
- EMERGENCY STOP to performance level PLe

The amount of cabling required is reduced to a minimum by the internal locking circuit and the load wiring.



Make sure you always use the latest documentation.  
It can be downloaded from the product at [phoenixcontact.net/products](https://phoenixcontact.net/products).



This document is valid for the products listed in the "Ordering data".

## 2 Table of contents

|      |                                                  |    |
|------|--------------------------------------------------|----|
| 1    | Description .....                                | 1  |
| 2    | Table of contents .....                          | 2  |
| 3    | Ordering data .....                              | 3  |
| 4    | Technical data .....                             | 6  |
| 5    | Safety regulations and installation notes.....   | 8  |
| 5.1  | UL note .....                                    | 9  |
| 6    | Operating and indication elements .....          | 10 |
| 7    | Connection notes .....                           | 10 |
| 7.1  | Mains connection and line protection .....       | 10 |
| 7.2  | Connecting cables .....                          | 11 |
| 7.3  | Block diagram.....                               | 11 |
| 8    | Function.....                                    | 11 |
| 8.1  | Status and diagnostics indicators.....           | 11 |
| 8.2  | Diagnostic function.....                         | 11 |
| 8.3  | Parameterization - Nominal current setting ..... | 13 |
| 9    | Application examples .....                       | 14 |
| 9.1  | Safety door (emergency stop) .....               | 14 |
| 9.2  | Motor protection .....                           | 15 |
| 9.3  | Motor with brake.....                            | 15 |
| 9.4  | Auxiliary relay connection .....                 | 15 |
| 10   | Safety functions .....                           | 16 |
| 10.1 | Safe shutdown .....                              | 16 |
| 10.2 | Motor protection .....                           | 16 |
| 11   | Trigger characteristic .....                     | 17 |
| 12   | Derating curves for 100 % operating time .....   | 18 |

### 3 Ordering data

| Description                                                                                                                                                | Type                   | Order No. | Pcs./Pkt. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|-----------|-----------|
| "4 in 1" three-phase semiconductor reversing contactor with 24 V DC input, 2 A output current, emergency stop function, and adjustable overload shutdown.  | ELR W3- 24DC/500AC- 2I | 2297031   | 1         |
| "4 in 1" three-phase semiconductor reversing contactor with 24 V DC input, 9 A output current, emergency stop function, and adjustable overload switching. | ELR W3- 24DC/500AC- 9I | 2297057   | 1         |
| Accessories                                                                                                                                                | Type                   | Order No. | Pcs./Pkt. |
| 3-phase loop bridge for 2 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 2              | 2900746   | 1         |
| 3-phase loop bridge for 3 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 3              | 2900747   | 1         |
| 3-phase loop bridge for 4 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 4              | 2900748   | 1         |
| 3-phase loop bridge for 5 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 5              | 2900749   | 1         |
| 3-phase loop bridge for 6 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 6              | 2900750   | 1         |
| 3-phase loop bridge for 7 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 7              | 2900751   | 1         |
| 3-phase loop bridge for 8 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 8              | 2900752   | 1         |
| 3-phase loop bridge for 9 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                     | BRIDGE- 9              | 2900753   | 1         |
| 3-phase loop bridge for 10 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 0.3 m, with ferrules.                    | BRIDGE-10              | 2900754   | 1         |
| 3-phase loop bridge for 2 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.              | BRIDGE- 2-3M           | 2901543   | 1         |
| 3-phase loop bridge for 3 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.              | BRIDGE- 3-3M           | 2901656   | 1         |
| 3-phase loop bridge for 4 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.              | BRIDGE- 4-3M           | 2901659   | 1         |

**ELR W3- 24DC/500AC- xl**

| <b>Accessories</b>                                                                                                                                                                                               | <b>Type</b>    | <b>Order No.</b> | <b>Pcs./Pkt.</b> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|------------------|------------------|
| 3-phase loop bridge for 5 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                    | BRIDGE- 5-3M   | 2901545          | 1                |
| 3-phase loop bridge for 6 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                    | BRIDGE- 6-3M   | 2901697          | 1                |
| 3-phase loop bridge for 7 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                    | BRIDGE- 7-3M   | 2901698          | 1                |
| 3-phase loop bridge for 8 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                    | BRIDGE- 8-3M   | 2901700          | 1                |
| 3-phase loop bridge for 9 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                    | BRIDGE- 9-3M   | 2901701          | 1                |
| 3-phase loop bridge for 10 CONTACTRON modules, with screw connection and 22.5 mm housing width, connecting cable: 3 m, with ferrules included.                                                                   | BRIDGE-10-3M   | 2901702          | 1                |
| 3-phase loop bridge for 2 modules from the CONTACTRON family with screw connection and 22.5 mm housing width, 1 m long connecting cable, without ferrules.                                                       | BRIDGE- 2-1M   | 2901542          | 1                |
| 3-phase loop bridge for 3 modules from the CONTACTRON family with screw connection and 22.5 mm housing width, 1 m long connecting cable, without ferrules.                                                       | BRIDGE- 3-1M   | 2901655          | 1                |
| 3-phase loop bridge for 4 modules from the CONTACTRON family with screw connection and 22.5 mm housing width, 1 m long connecting cable, without ferrules.                                                       | BRIDGE- 4-1M   | 2901658          | 1                |
| 3-phase loop bridge for 5 modules from the CONTACTRON family with screw connection and 22.5 mm housing width, 1 m long connecting cable, without ferrules.                                                       | BRIDGE- 5-1M   | 2901544          | 1                |
| 3-phase loop bridge for 6 modules in the CONTACTRON family with 1 m long connecting cable without ferrules, 22.5 mm housing width.                                                                               | BRIDGE- 6-1M   | 2901649          | 1                |
| The BRIDGE COVER covering hood is used to cover unused plugs on the CONTACTRON bridge that may subsequently be used to extend the system. The hood can be used with the screw and Push-in version of the bridge. | BRIDGE COVER   | 2906240          | 10               |
| Plastic label, Card, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 15 x 5 mm     | US-EMLP (15X5) | 0828790          | 10               |
| Plastic label, Sheet, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 15 x 5 mm                   | UC-EMLP (15X5) | 0819301          | 10               |
| Modular power distribution board with CrossLink® interface, 125 A, 3-pos., touch-proof and protection against polarity reversal, width: 225 mm                                                                   | EM-CPS-225     | 1002634          | 1                |

**ELR W3- 24DC/500AC- xI**

| <b>Accessories</b>                                                                                                                             | <b>Type</b>         | <b>Order No.</b> | <b>Pcs./Pkt.</b> |
|------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|------------------|------------------|
| Modular power distribution board with CrossLink® interface, 125 A, 3-pos., touch-proof and protection against polarity reversal, width: 405 mm | EM-CPS-405          | 1002635          | 1                |
| Connection module with integrated spring-loaded terminals for cables from 1.5 to 16 mm <sup>2</sup> , 3-pos., maximum 63 A                     | EM-CPS-TB3/63A      | 1002633          | 4                |
| Device adapter with fuse holder for 16 A fuse (10x38/ Class CC), CrossLink® interface and fixed DIN rail                                       | EM-CPS-DA-22,5F/16A | 1002668          | 1                |

## 4 Technical data

### Device supply

|                                            |                                                 |
|--------------------------------------------|-------------------------------------------------|
| Rated control circuit supply voltage $U_S$ | 24 V DC                                         |
| Control supply voltage range               | 19.2 V DC ... 30 V DC                           |
| Rated control supply current $I_S$         | 40 mA                                           |
| Protective circuit                         | Surge protection<br>Reverse polarity protection |

### Control input right/left

|                               |                                           |
|-------------------------------|-------------------------------------------|
| Rated actuating voltage $U_C$ | 24 V DC                                   |
| Rated actuating current $I_C$ | 5 mA                                      |
| Switching threshold           | 9.6 V ("0" signal)<br>19.2 V ("1" signal) |
| Switching level               | < 5 V DC (For EMERGENCY STOP)             |
| Typical response time         | < 35 ms                                   |
| Typical turn-off time         | < 40 ms                                   |

### AC output

|                                                   |                                  |
|---------------------------------------------------|----------------------------------|
| Rated operating voltage $U_e$                     | 500 V AC ( 50/60 Hz )            |
| Operating voltage range                           | 42 V AC ... 550 V AC             |
| Load current range see to derating                | 180 mA ... 2.4 A / 1.5 A ... 9 A |
| Trigger characteristic in acc. with IEC 60947-4-2 | Class 10A / Class 10A            |
| Cooling time                                      | 20 min. (for auto reset)         |
| Rated operating current $I_e$ AC-51               | 2.4 A / 9 A                      |
| Rated operating current $I_e$ AC-53a              | 2.4 A / 6.5 A                    |
| Leakage current                                   | 0 mA / 0 mA                      |
| Protective circuit                                | Surge protection                 |

### Acknowledge output

|                                                            |                                       |
|------------------------------------------------------------|---------------------------------------|
| Confirmation: floating change-over contact, signal contact |                                       |
| Switching capacity according to IEC 60947-5-1              | 3 A (230 V, AC15)<br>2 A (24 V, DC13) |

### Status and diagnostics indicators

|                           |            |
|---------------------------|------------|
| Status display            | Yellow LED |
| Indication                | Red LED    |
| Operating voltage display | Green LED  |

### General data

|                             |                                     |
|-----------------------------|-------------------------------------|
| Mounting position           | Vertical (horizontal DIN rail)      |
| Mounting                    | Can be aligned with spacing = 20 mm |
| Operating mode              | 100% operating factor               |
| Degree of protection        | IP20                                |
| Power dissipation min./max. | 0.88 W / 4.1 W ; 0.88 W / 4.1 W     |
| Dimensions W/H/D            | 22.5 mm / 106.6 mm / 113.7 mm       |

**Connection data**

|                                   |                                             |
|-----------------------------------|---------------------------------------------|
| Connection name                   | <b>Control circuits</b>                     |
| Connection method                 | Screw connection                            |
| Conductor cross section, solid    | 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> |
| Conductor cross section, flexible | 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> |
| Conductor cross section [AWG]     | 24 ... 14                                   |
| Stripping length                  | 8 mm                                        |

|                                   |                                             |
|-----------------------------------|---------------------------------------------|
| Connection name                   | <b>Load circuit</b>                         |
| Connection method                 | Screw connection                            |
| Conductor cross section, solid    | 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> |
| Conductor cross section, flexible | 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> |
| Conductor cross section [AWG]     | 24 ... 14                                   |
| Stripping length                  | 8 mm                                        |

**Ambient conditions**

|                                         |                                     |
|-----------------------------------------|-------------------------------------|
| Ambient temperature (operation)         | -25 °C ... 70 °C (observe derating) |
| Ambient temperature (storage/transport) | -40 °C ... 80 °C                    |

**Standards/regulations**

|           |                                                    |
|-----------|----------------------------------------------------|
| Standards | DIN EN 50178<br>EN 60947<br>IEC 61508<br>ISO 13849 |
|-----------|----------------------------------------------------|

**Insulation characteristics**

|                                                                                                                            |                                                                                                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rated insulation voltage                                                                                                   | 500 V                                                                                                                                                                                                           |
| Rated surge voltage / insulation                                                                                           | 6 kV                                                                                                                                                                                                            |
| Insulation characteristics between the control input and control supply voltage, and auxiliary circuit to the main circuit | Safe isolation (IEC 60947-1/EN 50178) at operating voltage ≤ 300 V AC<br>Basic isolation (IEC 60947-1) at operating voltage 300 ... 500 V AC<br>Safe isolation (EN 50178) at operating voltage 300 ... 500 V AC |
| Isolation characteristics between the control input and control supply voltage to auxiliary circuit                        | Safe isolation (IEC 60947-1) in the auxiliary circuit ≤ 300 V AC<br>Safe isolation (EN 50178) in the auxiliary circuit ≤ 300 V AC                                                                               |
| Degree of pollution                                                                                                        | 2                                                                                                                                                                                                               |

**Conformance/Approvals**

|                                               |                                                              |
|-----------------------------------------------|--------------------------------------------------------------|
| ATEX PTB 07 ATEX 3145                         | ⊕ II (2) G [Ex e] [Ex d] [Ex px]<br>⊕ II (2) D [Ex t] [Ex p] |
| UL, USA/Canada                                | NLDX.E228652                                                 |
| Safety Integrity Level according to IEC 61508 | ≤ 3 (Safe shutdown)                                          |
| Safety Integrity Level according to IEC 61508 | 2 (Motor protection)                                         |
| Category acc. to EN ISO 13849                 | ≤ 3 (Safe shutdown)                                          |
| Performance level according to ISO 13849      | ≤ e (Safe shutdown)                                          |

## 5 Safety regulations and installation notes

- When working on the device, observe the national safety and accident prevention regulations.
- Disregarding these safety regulations may result in death, serious personal injury or damage to equipment.
- Startup, mounting, modifications, and upgrades should only be carried out by a skilled electrical engineer!
- Disconnect the power to the module.
- For emergency stop applications, the machine must be prevented from restarting automatically by a higher-level control system.
- During operation, parts of electrical switching devices carry hazardous voltages.
- During operation, the protective covers must not be removed from the electric switchgear.
- Keep the product documentation in a safe place.
- The device is an associated item of equipment. Do not install the device in potentially explosive areas. When installing and operating associated equipment, the applicable safety directives must be observed.
- Observe the safety regulations that are applicable when motors are used in the Ex area (ATEX directive 2014/34/EU).
- If you use the "Automatic RESET" mode, the drive is switched on again after the cooling time has expired - if a control signal is still present. The cooling time is 20 minutes. For applications in the Ex-protection area, automatic restart is not permitted.
- The equipment must not be exposed to mechanical or thermal influences that exceed the limits as described in the operating instructions. If required, the device should be installed in an appropriate housing with a suitable degree of protection (e. g. IP54) according to IEC 60529/EN 60529 to provide protection against mechanical and electrical damage. Where dust is present, the device must be installed in suitable housing (IP64, minimum) according to EN 60079-14.
- Install the device according to the instructions in the installation instructions. Access to circuits within the device is not permitted.
- The operating equipment cannot be repaired by the user and must be replaced by an equivalent device. Repairs may only be carried out by the manufacturer.
- For safety technical data, please refer to this document and certificates (EC-type examination certificate and other approvals if appropriate).
- The device executes a function diagnosis when the drive is switched on or is in the switched on state. In addition, an authorized electrician or a skilled worker who is well acquainted with the relevant standards can conduct the "Motor overload protection" safety function test. For this test, the drive must be operated with right or left rotation (forward or reverse running), and the

current flow in a conductor is interrupted (e.g. by removing the fuse in the L1 or L3 phase). The hybrid motor starter then switches off the drive within 1.5 to 2 s. The LEDs for right or left rotation go out, and the ERR-LED and the reply output are set.

- Secure the device during safety-related applications with an access protection.
- Only use power supply units with safe isolation with SELV / PELV voltage in accordance with EN 50178/ VDE 0160(SELV / PELV). This prevents short circuits between primary and secondary sides.
- Observe the minimum permissible load current in safety-relevant applications:  
ELR W3-.../500AC-2I:  $\geq 180$  mA  
ELR W3-.../500AC-9I:  $\geq 1.5$  A

### Area of application

- In circuits in potentially dust-explosive areas of zones 21 and 22, it must be guaranteed that the equipment connected to this circuit complies with category 2D or 3D or is certified as such.
- This is a product for environment A (industry). The device can cause unwanted radio interference if used in Class B environments (household). In this case, the user may be obligated to take the necessary precautionary measures.

## 5.1 UL note



### **WARNING: Risk of electric shock and fire**

The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted.

To reduce the risk of fire or electric shock, current-carrying parts and the other components of the controller should be examined and replaced if damaged.

Failure to follow instructions can result in death, serious injury, or equipment damage.



### **NOTE**

Use copper cables approved for at least 75 °C.

The device is designed for use with a "low voltage, limited energy, isolated power supply".

| <b>SCCR ( single and group installation)</b>                                                                                                                                                 |                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| Suitable for use on a circuit capable of delivering not more than 5 kA rms symmetrical amperes, 500 Volts maximum when protected by a 20 A class RK5 fuse (coordination type 1).             |                                     |
| Suitable for use on a circuit capable of delivering not more than 100 kA rms symmetrical amperes, 500 Volts maximum when protected by a 30 A class J or class CC fuse (coordination type 1). |                                     |
| FLA                                                                                                                                                                                          | 2.4 A (500 V AC) / 6.5 A (500 V AC) |

## 6 Operating and indication elements

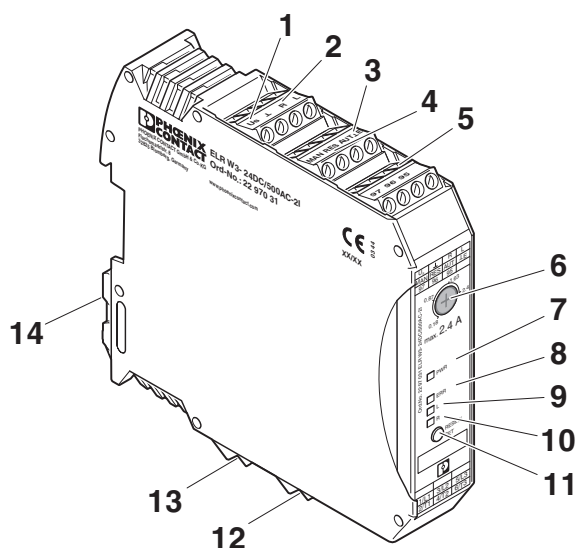


Figure 1 Operating and indication elements

- 1 Input: Control supply voltage
- 2 Control input: Forward/reverse running
- 3 ⊥ E: Benchmark forward/reverse running
- 4 Acknowledgment inputs MAN, RES, AUT
- 5 Feedback
- 6 Potentiometer for nominal current parameterization
- 7 LED PWR: Control supply voltage
- 8 LED ERR: Message/error
- 9 LED L: Reverse running
- 10 LED R: Forward running
- 11 Reset button
- 12 3-phase input voltage
- 13 3-phase output voltage
- 14 Metal lock for fixing to DIN rail

## 7 Connection notes



### WARNING: Danger to life by electric shock!

Never perform work on the device when voltage is present.

### 7.1 Mains connection and line protection

- When connecting the 3-phase network, it is essential to observe the terminal identification.
- The following specifications apply for the fuses used.

|                                         |                     |
|-----------------------------------------|---------------------|
| 25 A gG / 10 kA / 500 V                 | Coordination type 1 |
| 16 A B-circuit breaker / 1.5 kA / 400 V | Coordination type 1 |
| 30 A CC / 30 kA / 500 V                 | Coordination type 1 |
| 16 A FA (6.3 x 32 mm) / 1.5 kA / 500 V  | Coordination type 2 |
| 16 A FF/gR (10 x 38 mm) / 10 kA / 500 V | Coordination type 2 |

- The control supply voltage and control voltage inputs must be operated with power supply modules according to IEC 61131-2 (max. 5 % residual ripple).
- In order to avoid inductive or capacitive coupling of noise emissions where long control wires are used, we recommend the use of shielded conductors.



### NOTE: Electrical safety

Only connect conductors with the same conductor cross section to a terminal point.

## 7.2 Connecting cables

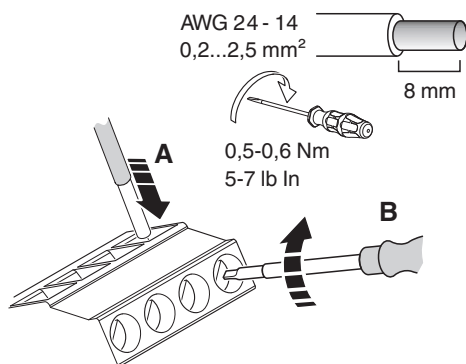


Figure 2 Screw connection

- Strip off each individual wire to 8 mm.
- Insert the wire into the corresponding connection terminal block.
- Use a screwdriver to tighten the screw in the opening above the connection terminal block.

## 7.3 Block diagram

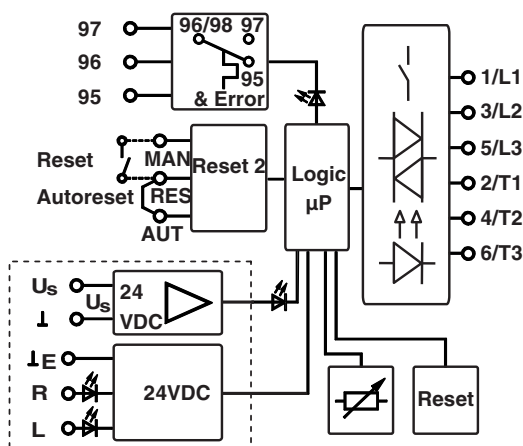


Figure 3 Block diagram

## 8 Function

### 8.1 Status and diagnostics indicators

The device visualizes the operating statuses with a total of four LEDs.

|         |        |                                                       |
|---------|--------|-------------------------------------------------------|
| LED PWR | Green  | Device status                                         |
| LED L   | Yellow | Reverse running                                       |
| LED R   | Yellow | Forward running                                       |
| LED ERR | Red    | Internal or external error                            |
|         |        | Process errors: overcurrent, asymmetry, phase failure |

After applying the control supply voltage, all LEDs light up once as an LED test.

### 8.2 Diagnostic function

Various diagnostic functions enable the hybrid motor starter to detect many internal errors and also external errors (I/O errors).

If an error is detected, the device is switched to the safe shutdown state.

You cannot acknowledge internal errors. They are stored in the device. Afterwards the device cannot be started up again.

In case of external errors, an error acknowledgment is required to exit the safe shutdown state.

## ELR W3- 24DC/500AC- xI

Explanation: A = LED switched off / E = LED lights continuously / B = LED flashes ca. 2 Hz (50:50) / Aut = Automatic / Man = Manual / Nm = Not possible / Ne = Not required

| Status                                                                | Description                                                                                                                                    | PWR   | ERR | L      | R | Error acknowledgment |
|-----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|-------|-----|--------|---|----------------------|
|                                                                       |                                                                                                                                                | Green | Red | Yellow |   |                      |
| OFF                                                                   | Supply voltage not present                                                                                                                     | A     | A   | A      | A | -                    |
| Ready to operate                                                      | Supply voltage present                                                                                                                         | E     | A   | A      | A | -                    |
| Drive switched on                                                     | Reverse running (L)                                                                                                                            | E     | A   | E      | A | -                    |
|                                                                       | Forward running (R)                                                                                                                            | E     | A   | A      | E | -                    |
| Internal error                                                        | Internal device error - <b>device replacement required</b>                                                                                     | E     | E   | A      | A | Nm                   |
| External error in controller or I/O devices (maintenance requirement) | <b>Motor protection function:</b> The motor current is higher than the motor nominal current specification: Cooling time elapsing (20 minutes) |       |     |        |   |                      |
|                                                                       | Error during reverse running                                                                                                                   | E     | B   | E      | A | Aut                  |
|                                                                       | Error during forward running                                                                                                                   | E     | B   | A      | E | Aut                  |
|                                                                       | After 2 minutes, "L" or "R" flashes: manual reset is possible                                                                                  |       |     |        |   |                      |
|                                                                       | Error during reverse running                                                                                                                   | E     | B   | B      | A | Man                  |
|                                                                       | Error during forward running                                                                                                                   | E     | B   | A      | B | Man                  |
|                                                                       | <b>Error when restoring the system state:</b> Manual acknowledgment possible after 2 min.                                                      | E     | B   | B      | B | Man                  |
|                                                                       | <b>Symmetry:</b> The two motor currents deviate from each other by more than 33 %.                                                             | E     | B   | A      | A | Man                  |
|                                                                       | <b>Blocking:</b> The max. measurable motor current is exceeded for more than 2 s.                                                              |       |     |        |   |                      |
|                                                                       | Error during reverse running                                                                                                                   | E     | B   | B      | A | Man                  |
|                                                                       | Error during forward running                                                                                                                   | E     | B   | A      | B | Man                  |

### Error acknowledgment

The following options are available for error acknowledgment.

#### Manual (reset button)

Press the reset button on the front of the device.

When pressing the reset button for more than 2 s (approximately), the device returns to the error state.

Pressing the reset button for more than 6 s changes the device to the "Parameterization" mode.

#### Manual (remote acknowledgment point)

Connect a button (N/O contact) between the MAN and RES terminals.

An acknowledgement is triggered as soon as a positive edge is detected at the MAN input. If no negative edge is detected after approx. 2 s, the device adopts an error state since manipulation or an error in the acknowledgment circuit may have occurred.

#### Automatic

Establish an electrical connection between the RES and AUT terminals.

Following triggering of motor protection monitoring and subsequent cooling, the device performs an automatic acknowledgment.



The RES terminal provides the voltage for the reset.

In variants with a rated control supply voltage of 24 V DC, this is 24 V DC.



#### NOTE: device damage

Only connect conductors to the terminals MAN, RES and AUT which are a maximum of 30 m long.

### Feedback

As soon as the device detects an error or indicates a message, the reply relay is switched, i.e. the N/O contact is closed or the N/C contact is opened. This behavior matches that of a motor protection switch or motor protection relay.



The feedback is for signaling purposes only and is not part of the safety chain. It is therefore not included in the safety considerations.

### 8.3 Parameterization - Nominal current setting

- Press the reset button for more than 6 s to change to the "Parameterization" mode. The green PWR LED flashes once.

In the Parameterization mode, the LEDs are switched off every 2 s for 0.3 s to distinguish this mode from other operating modes.

- Set the nominal drive current with the 240° potentiometer. The nominal current is specified in 16 stages. The four LEDs show the set current.

| Code |     |   |   | Nominal current [mA] |      |
|------|-----|---|---|----------------------|------|
| PWR  | ERR | L | R | 2 A                  | 9 A  |
| 0    | 0   | 0 | 0 | 180                  | 1500 |
| 0    | 0   | 0 | 1 | 250                  | 2000 |
| 0    | 0   | 1 | 0 | 410                  | 2500 |
| 0    | 0   | 1 | 1 | 560                  | 3000 |
| 0    | 1   | 0 | 0 | 710                  | 3500 |
| 0    | 1   | 0 | 1 | 870                  | 4000 |
| 0    | 1   | 1 | 0 | 1020                 | 4500 |
| 0    | 1   | 1 | 1 | 1170                 | 5000 |
| 1    | 0   | 0 | 0 | 1330                 | 5500 |
| 1    | 0   | 0 | 1 | 1480                 | 6000 |
| 1    | 0   | 1 | 0 | 1630                 | 6500 |
| 1    | 0   | 1 | 1 | 1790                 | 7000 |
| 1    | 1   | 0 | 0 | 1940                 | 7500 |
| 1    | 1   | 0 | 1 | 2090                 | 8000 |
| 1    | 1   | 1 | 0 | 2250                 | 8500 |
| 1    | 1   | 1 | 1 | 2400                 | 9000 |

- Store this value by pressing the reset button again (non-volatile area of the mass storage).
- Press the reset button for more than 2 s (and less than 6 s) to display the set current for 3 s. This function is only possible if 1) the device is not activated, and 2) there is no error at the device.

## 9 Application examples



### NOTE

Switching off the control voltage supply with a controlled motor always results in wear in the hybrid motor starter.



Further application examples can be downloaded via the product at [phoenixcontact.net/products](http://phoenixcontact.net/products).

### 9.1 Safety door (emergency stop)

In applications where safety shutdown is a normal operating state, e.g., for safety door or two-hand applications, it is the control circuit that is switched and not the control supply voltage.

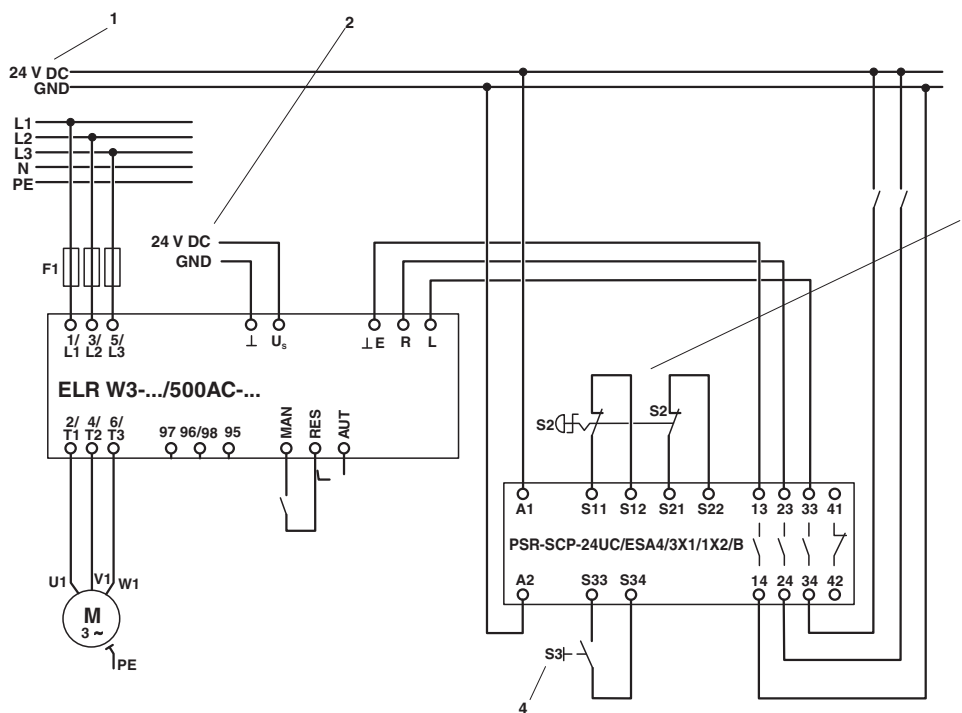


Figure 4 Safety door (emergency stop)

- 1 Supply 1
- 2 Supply 2
- 3 Emergency stop
- 4 Reset button

If shutdown is performed, e.g., from a “safe controller” with semiconductor outputs, the residual voltage must be  $< 0.5 \text{ V AC}$ .

Interruptions  $\leq 1 \text{ ms}$  are filtered.

## 9.2 Motor protection

All safety-related functions are implemented by the hybrid motor starter without external influences. Special circuit technology is not required.

If the motor currents deviate by more than  $\geq 33\%$ , the motor shuts down within 2 minutes.

If the motor currents deviate by more than  $\geq 67\%$ , (e.g., phase failure), the motor shuts down within 2 seconds.

The deviation can be calculated using the following formulas.

$$\text{Value } (I_{\max}) > I_{\text{nom}} \Rightarrow (I_{\max} - I_{\min})/I_{\max}$$

$$\text{Value } (I_{\max}) < I_{\text{nom}} \Rightarrow (I_{\max} - I_{\min})/I_{\text{nom}}$$



In the event of high clock rates, the motor protection function may trip due to the increased switch-on currents

## 9.3 Motor with brake

If a motor with brake (connection in the motor terminal board) is connected, the 400 V AC brake must be linked to the 2/T1 and 6/T3 terminals. A 230 V AC brake must be connected to the 4/T2 terminals and the star point of the motor.



### NOTE

Increase motor current monitoring to the nominal brake current. This should be set accordingly on the hybrid motor starter.

## 9.4 Auxiliary relay connection

Auxiliary relay (e. g. PLC RSC 230UC/21, order no.: 2966207) for activating external brakes or acknowledgements, e. g. to the PLC, must be connected to the 4T2 and N connections of the system.

## 10 Safety functions

| System conditions                                                  |           |
|--------------------------------------------------------------------|-----------|
| Database for failure rates                                         | SN 29500  |
| System type (consisting of subsystems)                             | Type B    |
| Standard used                                                      | IEC 61508 |
| Beta factor                                                        | 1 %       |
| MTTF [years] (mean time to failure at ambient temperature of 40°C) | 39.3      |

### 10.1 Safe shutdown

|                                                                                  |                                                                    |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------|
| HFT (hardware fault tolerance)                                                   | 1                                                                  |
| Ambient temperature                                                              | 40 °C                                                              |
| MTTF <sub>D</sub> [years] - mean time to dangerous failure                       | 517                                                                |
| Shutdown time [ms]                                                               | 80                                                                 |
| λ <sub>sd</sub> [FIT] - safe, detectable                                         | 664                                                                |
| λ <sub>su</sub> [FIT] - safe, undetectable                                       | 968                                                                |
| λ <sub>dd</sub> [FIT] - dangerous, detectable                                    | 218                                                                |
| λ <sub>du</sub> [FIT] - dangerous, undetectable                                  | 2.67                                                               |
| SFF [%] - safe failure fraction                                                  | 99                                                                 |
| DCS [%] - diagnostic coverage safe                                               | 40.7                                                               |
| DC [%] - diagnostic coverage                                                     | 98                                                                 |
| PFH <sub>D</sub> [FIT] probability of a dangerous failure per hour               | 2.67                                                               |
| PFD <sub>avg</sub> (6 months/36 months) Average Probability of Failure on Demand | $0.4 \cdot 10^{-5} / 2.4 \cdot 10^{-5}$                            |
| Safety level according to                                                        | IEC/CEI 61508-1: up to SIL 3<br>ISO 13849-1: up to category 3 PL e |

### 10.2 Motor protection

|                                                                                  |                                           |
|----------------------------------------------------------------------------------|-------------------------------------------|
| HFT (hardware fault tolerance)                                                   | 0                                         |
| Ambient temperature                                                              | 40 °C                                     |
| MTTF <sub>D</sub> [years] - mean time to dangerous failure                       | 447                                       |
| Shutdown time [ms]                                                               | According to Class 10A, IEC/CEI 60947     |
| λ <sub>sd</sub> [FIT] - safe, detectable                                         | 637                                       |
| λ <sub>su</sub> [FIT] - safe, undetectable                                       | 870                                       |
| λ <sub>dd</sub> [FIT] - dangerous, detectable                                    | 239                                       |
| λ <sub>du</sub> [FIT] - dangerous, undetectable                                  | 17                                        |
| SFF [%] - safe failure fraction                                                  | 99                                        |
| DCS [%] - diagnostic coverage safe                                               | 42.3                                      |
| DC [%] - diagnostic coverage                                                     | 93                                        |
| PFD <sub>avg</sub> (6 months/36 months) Average Probability of Failure on Demand | $0.04 \cdot 10^{-3} / 0.24 \cdot 10^{-3}$ |
| Safety level according to                                                        | IEC/CEI 61508-1: up to SIL 2              |



Additional safety data is available on request.

## 11 Trigger characteristic

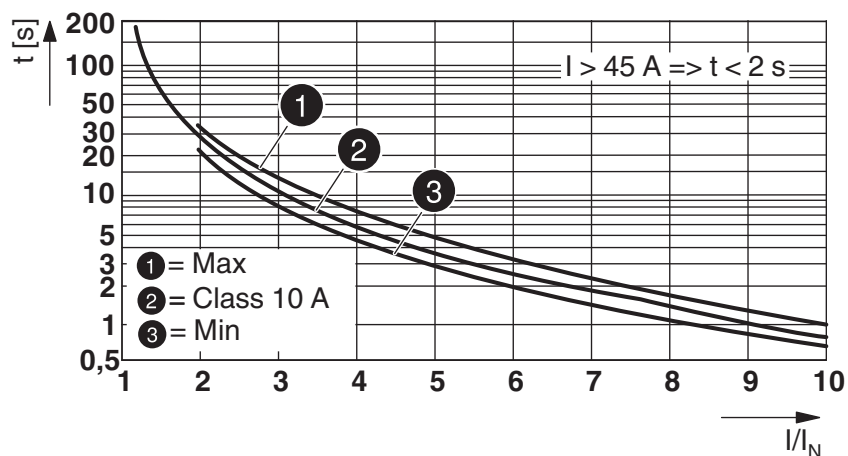


Figure 5 Trigger characteristic

$t$  [s] Release time in seconds

$I/I_N$  Overcurrent factor: the ratio between the actual current and the parameterized nominal current

## 12 Derating curves for 100 % operating time

Additional data is available on request.

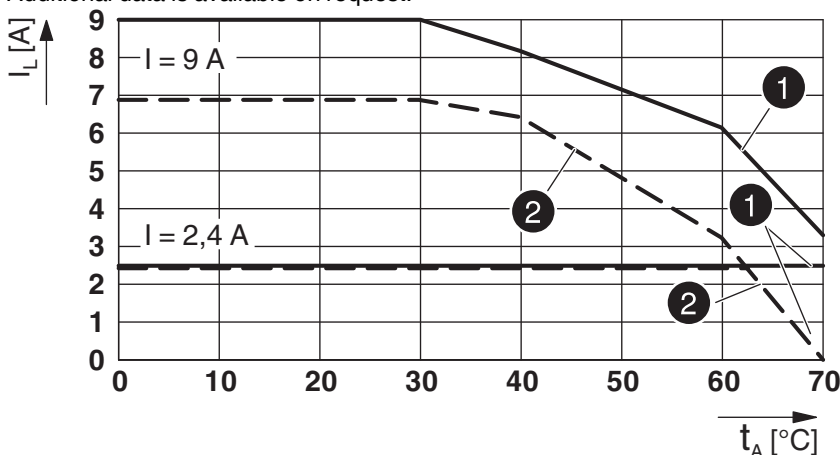


Figure 6 Derating curve

$I_L$  = Load current [A]

$t_A$  = Ambient temperature [°C]

$I_A$  = Starting current [A]

① = Aligned with 20 mm spacing

② = Aligned without spacing

The adjustment factors described here refer to hybrid motor starters with a maximum load current of 9 A. You can determine the maximum permissible rated current of the motor using the load current, the overcurrent factor (see data sheet of the relevant motor), and the 9 A derating curve.

| 9 A derating curve           |   |   |   |   |   |      |      |      |      |      |
|------------------------------|---|---|---|---|---|------|------|------|------|------|
| Overcurrent factor $I_A/I_N$ | 1 | 2 | 3 | 4 | 5 | 6    | 7    | 8    | 9    | 10   |
| Adjustment factor K          | 1 | 1 | 1 | 1 | 1 | 0.96 | 0.83 | 0.72 | 0.64 | 0.58 |

| Example 1                                                                      |       |
|--------------------------------------------------------------------------------|-------|
| Motor with overcurrent factor $I_A/I_N$ (from motor data sheet)                | 8     |
| Adjustment factor K                                                            | 0.72  |
| Max. permissible load current $I_L$ at 30°C, not aligned (from derating curve) | 9 A   |
| Max. permissible rated current $I_N$ of the motor                              | 6.5 A |

| Example 2                                                                  |       |
|----------------------------------------------------------------------------|-------|
| Motor with overcurrent factor $I_A/I_N$ (from motor data sheet)            | 5     |
| Adjustment factor K                                                        | 1     |
| Max. permissible load current $I_L$ at 60°C, aligned (from derating curve) | 3.2 A |
| Max. permissible rated current $I_N$ of the motor                          | 3.2 A |



# SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS


At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product suppliers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.

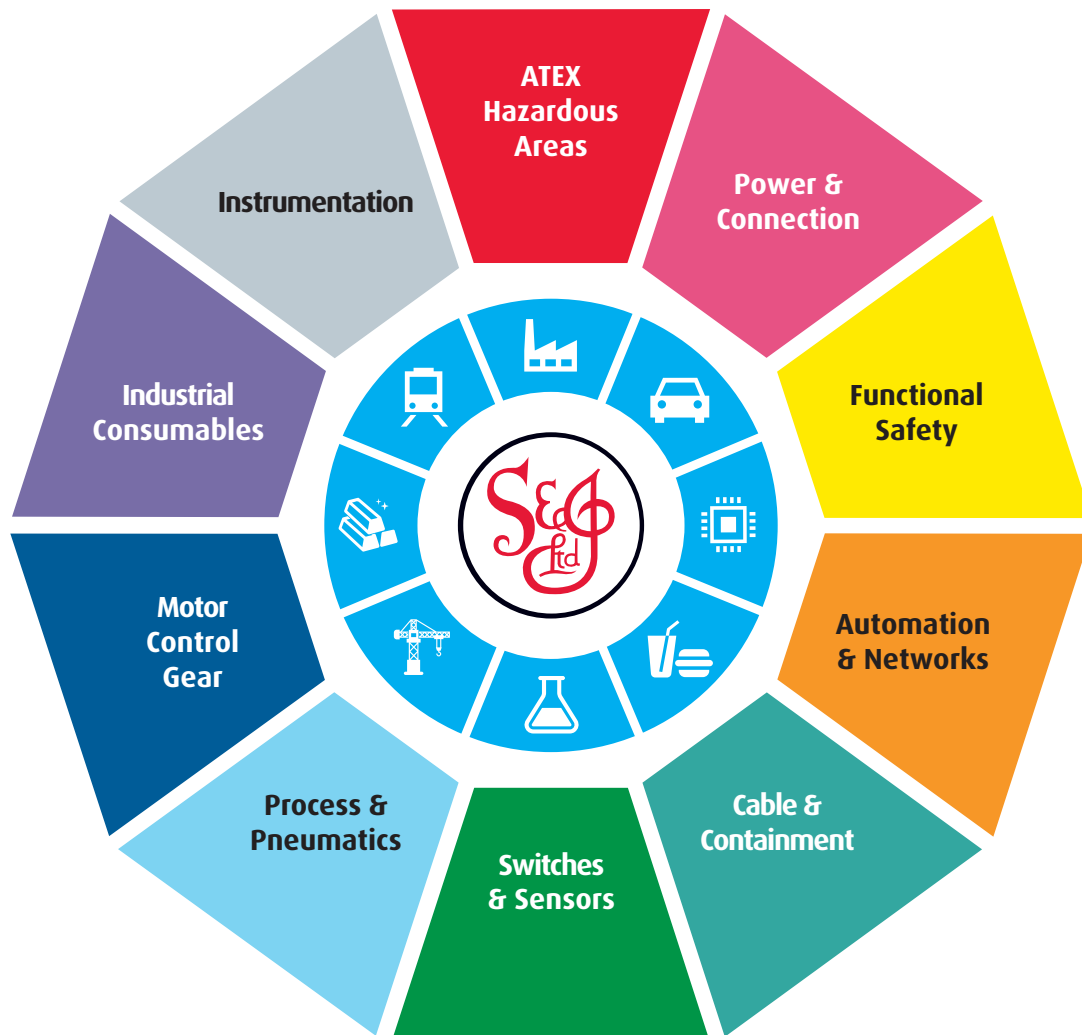

Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

# [www.scatts.co.uk](http://www.scatts.co.uk)