

User Guide OPTISTICKSmart



Overview

The OPTISTICKSmart is used for fast and accurate repeat drive programming. It can also be used to communicate with the Optidrive via the OPTITOOLS Mobile smartphone app and OPTITOOLS Studio.

Note

Parameters can only be copied between drives of the same product range and power rating (size).

Compatibility

This Option is suitable for use on the following product ranges:

- Optidrive P2 (ODP-2-.... Drives)
- Optidrive Eco (ODV-3-... Drives)
- Optidrive E3 (ODE-3-... Drives)
- Optidrive Elevator (ODL-2-...Drives)

Model Code

OPT-3-STICK-IN

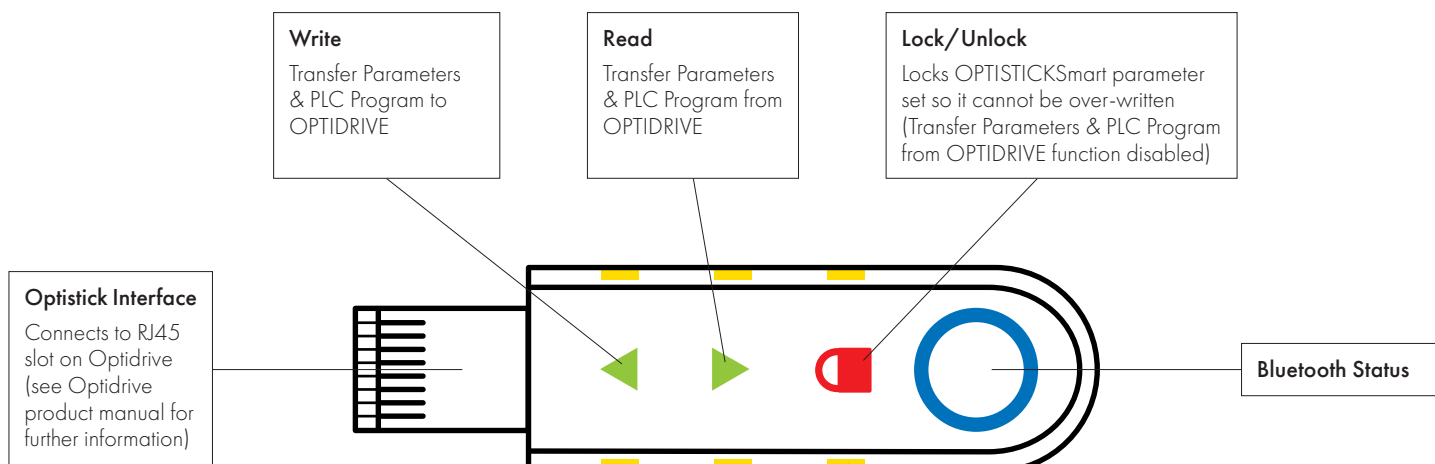
Compliance

Hereby, Inverter Drives Ltd declares that the radio equipment type Bluetooth Wireless Access Point, model OPTISTICKSmart, is in compliance with Directive 2014/53/EU.

The full test of the EU declaration of conformity is available at the following internet address: www.inverterdrives.com

Drive display message to show the status for certain operation

Message	Description
<i>PR55-r</i>	OPTISTICKSmart read / stored the drive parameters successfully
<i>USEr-r</i>	OPTISTICKSmart has read/stored the Drive User Parameters successfully
<i>PRr-R-r</i>	OPTISTICKSmart has read/stored the Drive Main Parameters successfully
<i>PLC-r</i>	OPTISTICKSmart has read/stored the Drive PLC Program successfully
<i>DS-Loc</i>	OPTISTICKSmart is locked; attempting to read parameter from the drive with Optistick lock switch on
<i>FR iL-r</i>	OPTISTICKSmart failed to read parameter from the drive
<i>PR55-t</i>	OPTISTICKSmart transferred parameters to the drive (write parameters to drive) successfully
<i>USR-PS</i>	OPTISTICKSmart has transferred User Parameters to the Drive successfully
<i>PR55-t</i>	OPTISTICKSmart has transferred Main Parameters to the Drive successfully
<i>dL-PLC</i>	OPTISTICKSmart has transferred PLC Program to the Drive successfully
<i>FR iL-P</i>	The power rating of the parameters saved in the OPTISTICKSmart does not match the power-rating of the drive to be programmed
<i>FR iL-t</i>	OPTISTICKSmart failed to transfer parameter set to drive
<i>no-dAt</i>	No parameter data saved in the OPTISTICKSmart
<i>dr-Loc</i>	Drive parameters have been locked and cannot accept new parameter settings. Unlock drive parameter set
<i>dr-rUn</i>	Drive is running and cannot accept new parameter settings. Stop drive operation before programming
<i>tYPE-E</i>	Parameters for Drive type saved in OPTISTICKSmart do not match the drive type to be programmed (write operation only).
<i>tYPE-F</i>	OPTISTICKSmart currently doesn't support the drive type to be programmed








Inverter Drives Ltd
 Offa's Dyke Business Park
 Welshpool
 Powys, UK
 SY21 8JF

Please scan the QR code for further information Or visit bit.ly/optistick






Copying Data from a Drive

Action	Description
	<p>Insert the OPTISTICKSmart into the RJ45 port on the OPTIDRIVE</p> <p>Wait for the OPTISTICKSmart to complete its boot sequence</p> <p>The OPTISTICKSmart is ready when the up-arrow and the padlock symbol are displayed</p>
	<p>Before attempting to download data, unlock the OPTISTICKSmart by touching the padlock symbol until the LEDs stop flashing</p>
	<p>When the OPTISTICKSmart is unlocked both green arrows are displayed</p>
	<p>Touch the lower arrow to initiate data download from the OPTIDRIVE</p> <p>The OPTIDRIVE display will indicate the data download progress</p> <p>Wait until the OPTISTICKSmart LEDs stop flashing. Some OPTIDRIVES require multiple files which may take up to 30 seconds to transfer</p> <p>The Optidrive display will show PASS-r (ODE-3) or PAR-R-r (ODP-2, ODV-3, ODL-2) to indicate a successful read</p>
	<p>Once Download is complete the OPTISTICKSmart will automatically re-lock, with the up-arrow and the padlock symbol displayed</p> <p>Remove the OPTISTICKSmart from the OPTIDRIVE</p>

Writing Data to a Drive

Using an OPTISTICKSmart loaded with OPTIDRIVE data via the 'Copying Data from a Drive' or preloaded via Smartphone or PC applications.

Action	Description
	<p>Insert the OPTISTICKSmart into the RJ45 port on the OPTIDRIVE</p> <p>Wait for the OPTISTICKSmart to complete its boot sequence</p> <p>The OPTISTICKSmart is ready when the up-arrow and the padlock symbol are displayed</p>
	<p>Touch the upper arrow to initiate data upload from the OPTISTICKSmart to the OPTIDRIVE</p> <p>The OPTIDRIVE display will indicate the data download progress</p> <p>Wait until the OPTISTICKSmart LEDs stop flashing. Some OPTIDRIVES require multiple files which may take up to 30 seconds to transfer</p> <p>The Optidrive display will show PASS-L (ODE-3, ODP-2, ODV-3, ODL-2) to indicate a successful read</p>
	<p>Once the upload to the OPTISTICKSmart is complete it can be removed from the OPTIDRIVE</p>

Information for Compliance

USA (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Exposure to Radio Frequency Radiation.

Canada - Industry Canada (IC)

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website www.hc-sc.gc.ca/rpb



SCATTERGOOD & JOHNSON LTD

ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899

At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product suppliers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.



Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk