




INSTALLATION MANUAL


ZE-4DI-2AI-2DO / ZE-4DI-2AI-2DO-P Z-4DI-2AI-2DO ZE-2AI / ZE-2AI-P

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that could damage the instrument or connected equipment.

The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

| | |
|---|---|
|  | WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available using the QR-CODE shown on page 1. |
|  | The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation. |
|  | Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste. |

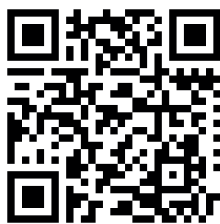

DOCUMENTATION
ZE-4DI-2AI-2DO



DOCUMENTATION
ZE-4DI-2AI-2DO-P



DOCUMENTATION
Z-4DI-2AI-2DO



DOCUMENTATION
ZE-2AI-P



DOCUMENTATION
ZE-2AI




SENECA s.r.l.; Via Austria, 26 – 35127 – PADOVA – ITALY; Tel. +39.049.8705359 - Fax +39.049.8706287

CONTACT INFORMATION

| | | | |
|-------------------|--------------------|---------------------|-----------------------|
| Technical support | supporto@seneca.it | Product information | commerciale@seneca.it |
|-------------------|--------------------|---------------------|-----------------------|

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.
The content of this document corresponds to the described products and technologies.
Stated data may be modified or supplemented for technical and/or sales purposes.

MODULE LAYOUT

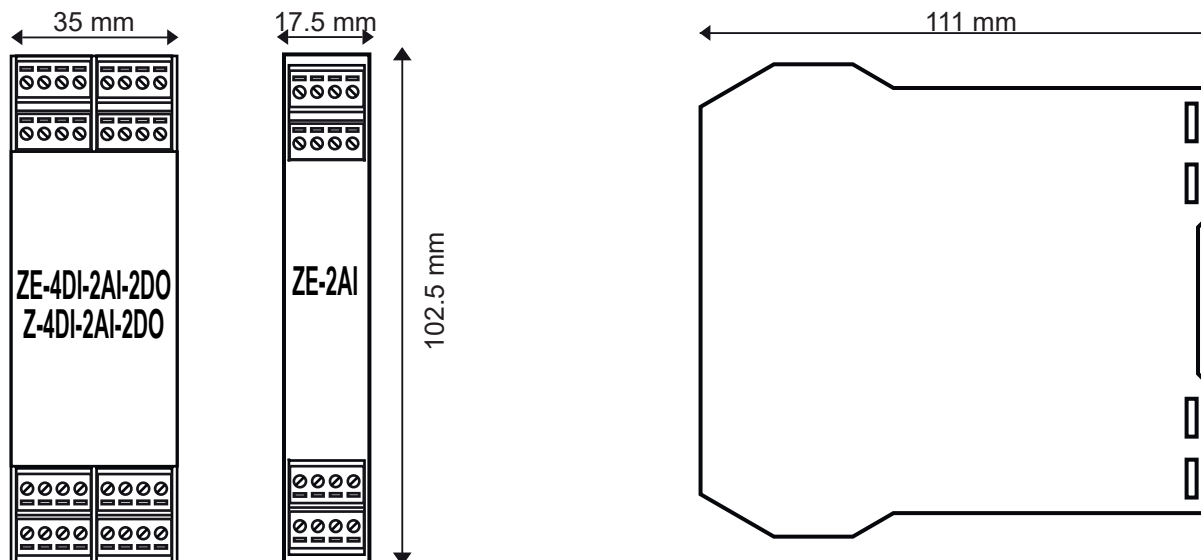

Single module dimensions LxHxD: 17.5 x 102.5 x 111 mm; **Weight:** 110 g; **Enclosure:** PA6, black

Double module dimensions LxHxD: 35 x 102.5 x 111 mm; **Weight:** 110 g; **Enclosure:** PA6, black

LED SIGNALS ON THE FRONT PANEL (ZE-4DI-2AI-2DO / -P)

| LED | STATUS | MEANING |
|--------------------|----------|---|
| IP / PWR | ON | Module powered IP address acquired |
| IP / PWR | Flashing | Module powered waiting for IP address from the DHCP server / Profinet communication |
| Tx/Rx | Flashing | Data transmission and reception on at least one Modbus port |
| ETH TRF | Flashing | Packet transmission on Ethernet port |
| ETH LNK | ON | Ethernet port connected |
| DI1, DI2, DI3, DI4 | On / Off | Status of digital input 1, 2, 3, 4 |
| DO1, DO2 | On / Off | Status of output 1, 2 |
| FAIL | Flashing | Outputs in fail condition |
| | ON | At least one of the two analogue inputs is out of scale (underscale-overscale) |




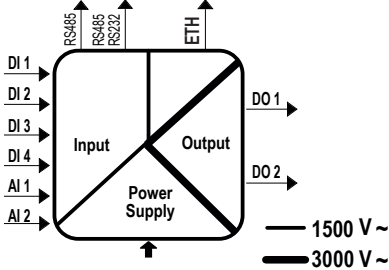
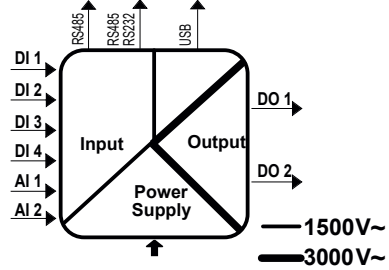
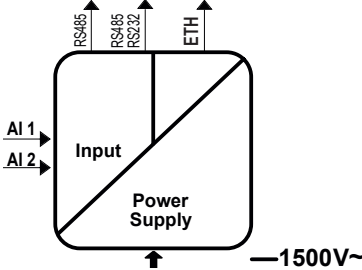
LED SIGNALS ON THE FRONT PANEL (Z-4DI-2AI-2DO)

| LED | STATUS | MEANING |
|--------------------|----------|--|
| PWR | ON | Module powered |
| Tx/Rx | Flashing | Data transmission and reception on at least one Modbus port: COM1, COM2 |
| DI1, DI2, DI3, DI4 | On / Off | Status of digital input 1, 2, 3, 4 |
| DO1, DO2 | On / Off | Status of output 1, 2 |
| FAIL | Flashing | Outputs in fail condition |
| | ON | At least one of the two analogue inputs is out of scale (underscale-overscale) |

LED SIGNALS ON THE FRONT PANEL (ZE-2AI / -P)

| LED | STATUS | MEANING |
|----------|----------|---|
| IP / PWR | ON | Module powered and IP address acquired |
| IP / PWR | Flashing | Module powered waiting for IP address from the DHCP server / Profinet communication |
| FAIL | ON | At least one of the two analogue inputs is out of scale (underscale-overscale) |
| ETH TRF | Flashing | Packet transmission on Ethernet port |
| ETH LNK | ON | Ethernet port connected |
| Tx1 | Flashing | Modbus packet transmission from device to COM 1 port |
| Rx1 | Flashing | Modbus packet reception on COM 1 port |
| Tx2 | Flashing | Modbus packet transmission from device to COM 2 port |
| Rx2 | Flashing | Modbus packet reception on COM 2 port |

TECHNICAL SPECIFICATIONS

| | | | |
|---------------------------------|--|--|---|
| CERTIFICATES |    <p> https://www.seneca.it/products/ze-4di-2ai-2do/doc/CE_declaration https://www.seneca.it/products/z-4di-2ai-2do/doc/CE_declaration https://www.seneca.it/products/ze-2ai/doc/CE_declaration </p> | | |
| INSULATION | ZE-4DI-2AI-2DO / -P  | Z-4DI-2AI-2DO  | ZE-2AI / -P  |
| POWER SUPPLY | Voltage: 11 ÷ 40Vdc; 19 ÷ 28Vac 50 ÷ 60Hz Absorption: Typical: 1,5 W @ 24Vdc, Max: 4W (ZE-4DI-2AI-2DO / ZE-4DI-2AI-2DO-P / Z-4DI-2AI-2DO) Absorption: Typical: 1,5 W @ 24Vdc, Max: 2W (ZE-2AI / ZE-2AI-P) | | |
| ENVIRONMENTAL CONDITIONS | Temperature: -25 ÷ + 70 °C Humidity: 30% ÷ 90% non condensing. Storage temperature: -30 ÷ +85° Protection rating: IP20. | | |
| ASSEMBLY | IEC EN60715, 35mm DIN rail in vertical position. | | |
| CONNECTIONS | Removable 3-way screw terminals, 5 mm pitch for cable up to 2.5 mm ² | | |
| COMMUNICATION PORTS | RS485 COM1 on IDC10 connector. RS485 or RS232 M10-M11-M12. Ethernet 100 base T RJ45 front. (ZE-4DI-2AI-2DO / -P) side micro USB port. (Z-4DI-2AI-2DO) | | |
| DIGITAL INPUTS | Valid only for instruments ZE-4DI-2AI-2DO / -P; Z-4DI-2AI-2DO: Number of channels 4. Configurable PNP or NPN. Voltage input OFF < 4V, ON > 8V (max. 24 Vdc). Current input 20 mA. Absorbed current 3mA@12Vdc, 10mA@24Vdc. | | |
| ANALOGUE INPUTS | Number of channels 2. Voltage/Current configurable Input Voltage 0÷30 V. Precision 0.1% of full scale, Resolution: 16 bit. Current input 0 ÷ 20mA– precision 0.1% of full scale, Resolution: 16bit Input protection 40V / 25mA. | | |
| COUNTERS: | Valid only for instruments ZE-4DI-2AI-2DO; Z-4DI-2AI-2DO: 4 32bit resettable counters on non-volatile memory. Max frequency 5 KHz | | |
| DIGITAL OUTPUTS | Valid only for instruments ZE-4DI-2AI-2DO / -P; Z-4DI-2AI-2DO: Number of channels 2. SPDT free contact relay. Max. voltage 250Vac. Max. current 2 A. | | |

INSTALLATION REGULATIONS

The module has been designed for vertical installation on a DIN 46277 rail. For optimal operation and long life, adequate ventilation must be provided. Avoid positioning ducting or other objects that obstruct the ventilation slots. Avoid mounting modules over heat-generating equipment. Installation in the bottom part of the electrical panel is recommended.

⚠ CAUTION


These are open type devices intended for installation in a final casing/panel that offers mechanical protection and protection against the spread of fire.

ModBUS CONNECTION RULES

- 1) Install the modules in the DIN rail (120 max)
- 2) Connect the remote modules using cables of an appropriate length. The following table shows cable length data:
 - Bus length: maximum length of the Modbus network according to the Baud Rate. This is the length of the cables that connect the two farthest modules (see Diagram 1).
 - Derivation length: maximum length of a derivation 2 m (see Diagram 1).

| Bus length | Derivation length |
|------------|-------------------|
| 1200 m | 2 m |


Diagram 1

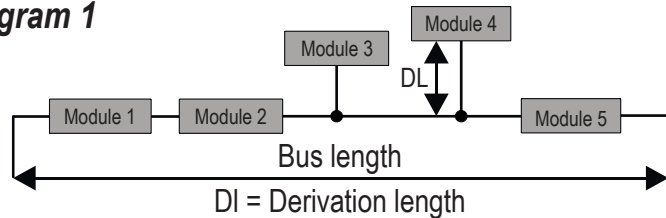

For maximum performance, it is recommended to use special shielded cables, designed specifically for data communication.

IDC10 CONNECTOR

Power supply and Modbus interface are available using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL-17.5 accessory.

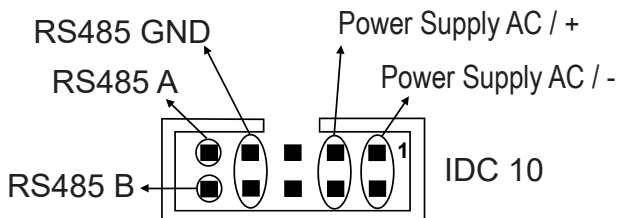


Back connector (IDC 10)

The illustration shows the meanings of the various IDC10 connector pins if signals are to be sent via them directly.

USB PORT (Z-4DI-2AI-2DO)

The module is designed to exchange data according to the modes defined by the MODBUS protocol. It has a micro USB connector and can be configured using applications and/or software programs. The USB serial port uses the following communication parameters: **38400 BAUD, 8BIT, NO PARITY, 1 STOP BIT.**

The USB communication port behaves exactly like that of the RS485 or RS232 bus except for the communication parameters.

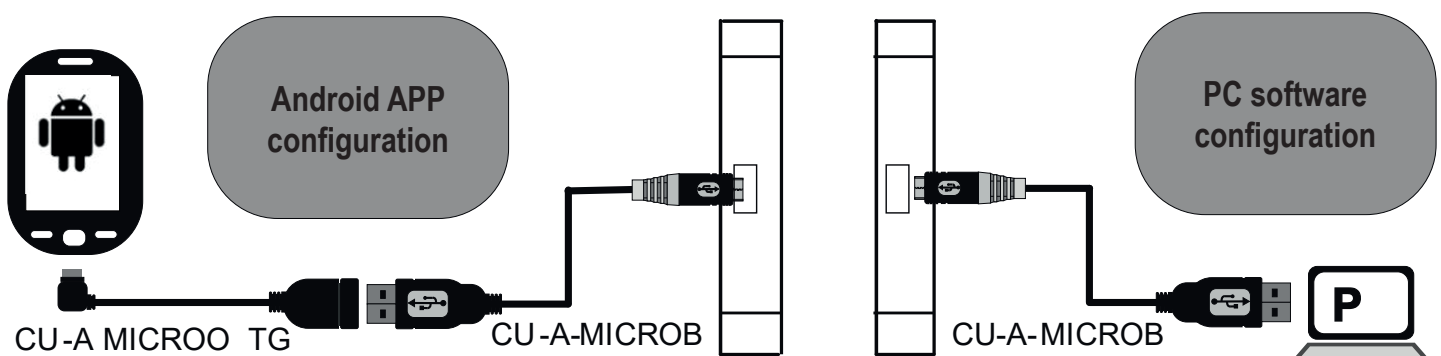

Check that the device in question is included in the list of products supported by the Easy Setup APP in the store.









SETTING THE DIP-SWITCHES



WARNING

The DIP-switch settings are read only at boot time. At each change, perform a restart.

SW1 DIP-SWITCH:

Through DIP-SWITCH-SW1 it is possible to set the IP configuration of the device:

| DESCRIPTION | DIP 1 | DIP 2 | DIP 3 | DIP 4 |
|---|---|---|----------|----------|
| To obtain the configuration from the Flash memory, both SW1 DIP switch selectors must be set to OFF |  |  | RESERVED | RESERVED |
| To reset the device to factory settings both SW1 DIP switches must be set to ON |  |  | RESERVED | RESERVED |
| To force the device's IP address to the standard value of SENECA Ethernet products: 192.168.90.101 |  |  | RESERVED | RESERVED |
| Reserved |  |  | RESERVED | RESERVED |



| KEY | |
|-----|---|
| ON |  |
| OFF |  |

CAUTION

Where present, DIP3 and DIP4 must be set to OFF.
If set differently, the instrument will not work correctly.

RS232/RS485 SETTING:

RS232 or RS485 setting on terminals 10 -11 -12 (serial port 2)

| SW2 | | |
|-----|---|------------------|
| ON |  | RS232 ACTIVATION |
| OFF |  | RS485 ACTIVATION |

WEB SERVER

To access the maintenance Web Server with the factory IP address **192.168.90.101** enter:

http://192.168.90.101

Default user: **admin**, Default password: **admin**

CAUTION

DO NOT USE DEVICES WITH THE SAME IP ADDRESS IN THE SAME ETHERNET NETWORK.

ELECTRICAL CONNECTIONS




Attention: the upper power supply limits must not be exceeded, as this might cause serious damage to the module.

To meet the electromagnetic immunity requirements:

- use shielded signal cables;
- connect the shield to a preferential instrumentation earth system;
- separate shielded cables from other cables used for power installations (transformers, inverters, motors, induction ovens, etc...).

POWER SUPPLY

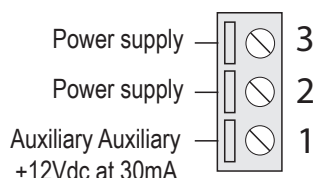

The power supply is connected to terminals 2 and 3.
 The supply voltage must be between:
 11 and 40Vdc (indifferent polarity), or between 19 and 28 Vac.
 The power supply source must be protected from the malfunctions of the module through an appropriately-sized safety fuse.

ANALOGUE INPUTS

| Voltage | Active sensor current (4 wires) | Passive sensor current (2 wires) | The module has two analogue inputs that can be configured via software as voltage or current. For the configuration software, see the user manual |
|---------|---------------------------------|----------------------------------|---|
| | | | |

DIGITAL INPUTS (ONLY ZE-4DI-2AI-2DO / -P and Z-4DI-2AI-2DO)

| NPN INPUT | PNP INPUT | WITH EXTERNAL POWER |
|-----------|-----------|---------------------|
| | | |

DIGITAL OUTPUTS (ONLY ZE-4DI-2AI-2DO / -P and Z4DI-2AI-2DO)

| | | |
|--|--|---|
| <p>N.A.1=19 CO.1=20 N.C.1=21</p> | <p>N.A.2=22 CO.2=23 N.C.2=24</p> | <p>The has two digital outputs with free contacts. The two figures show the internal relay contacts available.</p> |
|--|--|---|

COM2 SERIAL PORT (ZE-4DI-2AI-2DO, ZE-2AI and Z4DI-2AI-2DO)

| | | |
|---|--|--|
| <p>RS485 SERIAL PORT (SW2=OFF)</p> | <p>RS232 SERIAL PORT (SW2=ON)</p> | <p>The module has a COM2 serial port at terminals 10-11-12 configurable via switch SW2</p> |
|---|--|--|



**SCATTERGOOD
& JOHNSON LTD**
ELECTRICAL ENGINEERING & FLUID CONTROL DISTRIBUTORS

Est.1899

At Scattergood & Johnson Ltd, we pride ourselves on being a technical distributor to specialist industries.

Working with a range of quality product manufacturers across a number of specialist markets, we are not your average 'box shifter' - we are your technical and supply chain partner.

We fully support every product we sell - for free! Our internal team and external sales engineers can answer any product or application question, no matter the complexity.

Backing up this technical ability is a range of 50,000+ products available from stock for nationwide next day delivery (same day if required!), or you can collect what you need from any of our trade counters around the UK.

Select your specialist interest below to learn more about how we can help.



Online, In Branch and On the Road - Scattergood & Johnson Ltd, there when you need us.

www.scatts.co.uk